







Part#	GR18FFC01S	Application	For 2011-2014 Chrysler 300 (Not For SRT8)/2011-2014 Chrysler 300C (Not For SRT8)					
-------	------------	-------------	--	--	--	--	--	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	3	Flat Nuts	2	8#
	2	Phillip Screws	2	8#X 3/4"				


Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
<b>Step 1</b>	Identify the grille & hardware with parts list.	
<b>Step 2:</b> <u>Remove the front Bumper</u>	 <b>Step 2-1: Pop hood. Remove 8 clips on the Plastic Cover</b>	 <b>Step2-2: Remove 2 clips on side Fender Well</b>
	 <b>Step 2-3: Remove 10mm Bolt on the inner Fender</b>	 <b>Step 2-4: Remove 7 Screws from Underneath of the Factory Front Bumper</b>
	 <b>Step 2-5: Pull Side Fender outward to Unclip.</b>	<b>Step2-6: Remove front bumper and unclip the Electric Wire from the Fog Lights.</b>

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR18FFC01S	Application	For 2011-2014 Chrysler 300 (Not For SRT8)/2011-2014 Chrysler 300C (Not For SRT8)
-------	------------	-------------	--

**Step 3:**  
Remove the OEM lower grille shell from front bumper.



**Remove 2 Clips on the Bumper Support and remove the honeycomb plastic.**


**Step 4:**  
Billet grille insert installation

**Step 4-1:** Center the billet grille into the opening from front side.





**Step 4-2:** Use the billet grille as a template, mark the location of the welded tab holes on the lip of bumper opening.

**Step 4-3:** Drill (2) holes on the lip of the bumper opening according to the marks




**Step 4-4:** Center the billet grille again, and fasten the billet grille with the screws & flat nuts.

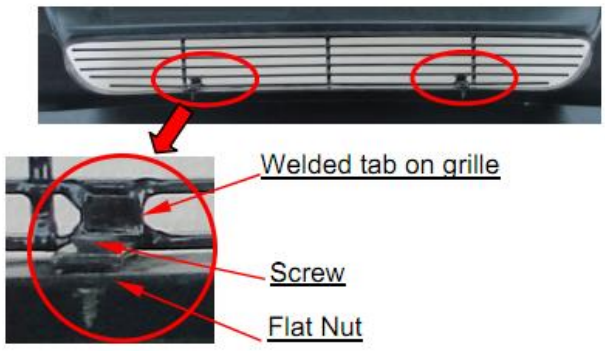

**Step 5:** Re-install the the OEM lower grille shell which was removed in step 3.

**Step 6:** Re-install the front bumper to the vehicle with the billet grille insert.

**Step 7** Installation completed!!!

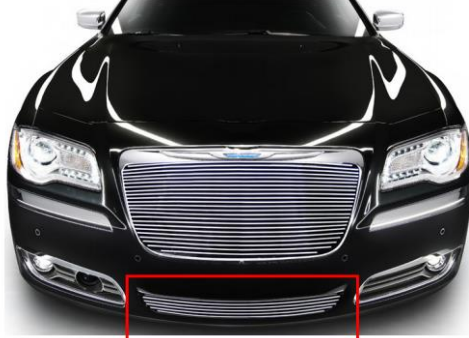

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!