

Part#	GR18FFC06H	11- On Chrysler 300 / 300C Main upper
-------	------------	---------------------------------------

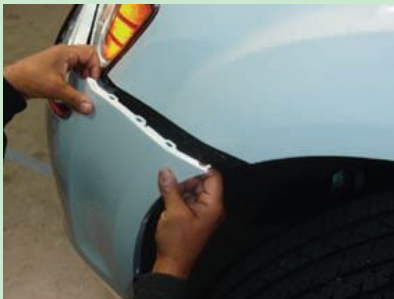




Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille insert	1	23 Billets	3	Lock Nut	4	6-32
	2	Bolt	4	6-32×2"	4			

Install Notes: Overlay ☒ Replacement ☐ Drill ☐ Cut ☐

Installation

Step 1	Identify the grille insert & hardware with parts list	
Step 2	Remove horizontal chromed bars from vehicle.	
Step 3: Remove the front Bumper		
	<u>Step 3-1: Pop hood, Remove 8 clips on the Plastic Cover</u>	<u>Step3-2: Remove 2 clips on side Fender Well</u>
		
	<u>Step 3-3: Remove 10mm Bolt on the inner Fender</u>	<u>Step 3-4: Remove 7 Screws from Underneath of the Factory Front Bumper</u>

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR18FFC06H	11- On Chrysler 300 / 300C Main upper
	<div></div> <p><u>Step 3-5: Pull Side Fender outward to Unclip.</u></p>	<p><u>Step3-6: Remove front bumper and unclip the Electric Wire from the Fog Lights.</u></p>
Step 4: Mesh grille installation	<div></div> <p><u>Step 4-1:</u> Center the grille into the opening of the factory grille shell. Be sure the bolts are through the OEM grille shell.</p> <div><div></div><div></div></div> <p><u>Lock nut</u></p> <p><u>Step 4-2:</u> Secure the grille insert using the lock nuts at the rear of the OEM grille shell.</p>	
<p>Step 5: Re-install the front bumper to the vehicle with billet grille insert.</p>		
Installation completed!!	<div></div>	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!