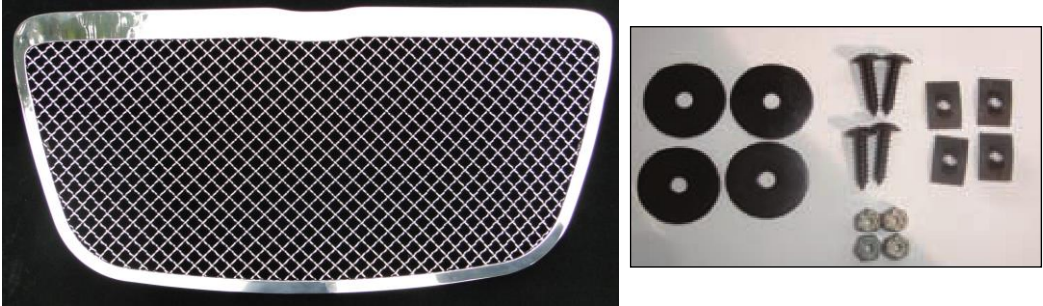



|       |              |             |                                   |  |  |  |  |  |
|-------|--------------|-------------|-----------------------------------|--|--|--|--|--|
| Part# | GR18GFC00S&T | Application | For 2011-2014 Chrysler 300 / 300C |  |  |  |  |  |
|-------|--------------|-------------|-----------------------------------|--|--|--|--|--|


| Parts List | Item | Part Name   | QTY | Description     | Item | Part Name    | QTY | Description |
|------------|------|-------------|-----|-----------------|------|--------------|-----|-------------|
|            | 1    | Mesh Grille | 1   | Stainless steel | 4    | Lock Nuts    | 4   | 6-32        |
|            | 2    | Screws      | 4   | 8#×3/4"         | 5    | Flat Washers | 4   | Φ25×Φ5×1    |
|            | 3    | Flat Nuts   | 4   | 8#              | 6    |              |     |             |

Install Notes: Overlay  Replacement  Drill  Cut




| Step | Description   | illustration  |
|------|---|---|
| 1    | Identify the grille insert & hardware with parts list   |   |
| 2    | Pop hood, remove 8 clips on the plastic cover .(Fig 1)  |   |
| 3    | Carefully pull on grille shell to remove part of the plastic cover.(Fig 2)                    |   |
| 4    | With a plastic prybar unclip the plastic cover from the factory grille shell.(Fig 3)          |   |
|      |   |  |
| 5    | Remove plastic cover (pull grille shell carefully outward if plastic cover doesn't come off). |   |
| 6    | Remove 2 clips on side fender well. (Fig 4)   |   |
| 7    | Remove 10mm bolt on the inner fender. (Fig 5)   |   |
| 8    | Pull side fender outward to unclip. (Fig 6)   |   |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

| Part# | GR18GFC00S&T | Application | For 2011-2014 Chrysler 300 / 300C |
|-------|--------------|-------------|-----------------------------------|
|-------|--------------|-------------|-----------------------------------|

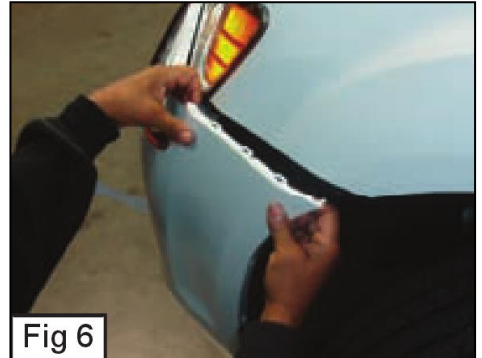


|    |   |
|----|---|
| 9  | Remove 8 (7mm) screws from underneath the factory grille shell. (Fig 7) |
| 10 | Remove grille shell and unclip the electric wire from the fog lights.   |
| 11 | Remove 2 clips on the bumper support. (Fig 8)                           |
| 12 | Remove 2 screws on the corners of the grille shell. (Fig 9)             |

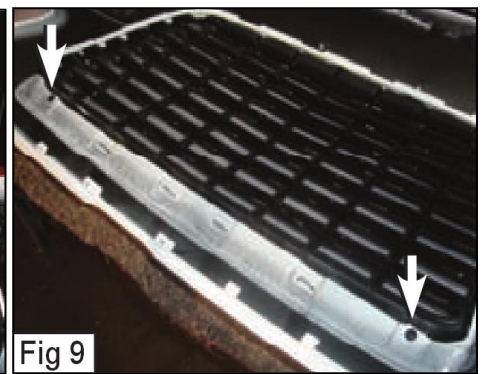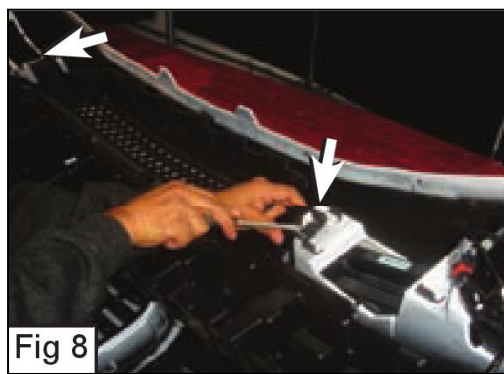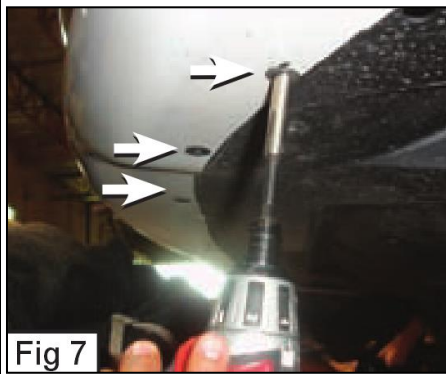


|    |   |
|----|---|
| 13 | Remove 11 clips around the grille shell. (Fig 10)   |
| 14 | Remove factory grille (grille will come out forward).   |
| 15 | Unclip the factory grille from around the chrome frame. (Fig 11)  |
| 16 | Unclip the Chrysler logo. (Fig 12)  |
| 17 | Place mesh grille over the factory grille shell. (Fig 13)   |
| 18 | Insert flat washers along the top of the screws on the mesh grille, tighten with 6/32 lock nuts. (Fig 14) |
| 19 | Drill a 3/16 hole through the brackets on the side and bottom of the mesh grille.(Fig 15)                 |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

|       |              |             |  |
|-------|--------------|-------------|--|
| Part# | GR18GFC00S&T | Application | <b>For 2011-2014 Chrysler 300 / 300C</b> |
|-------|--------------|-------------|--|

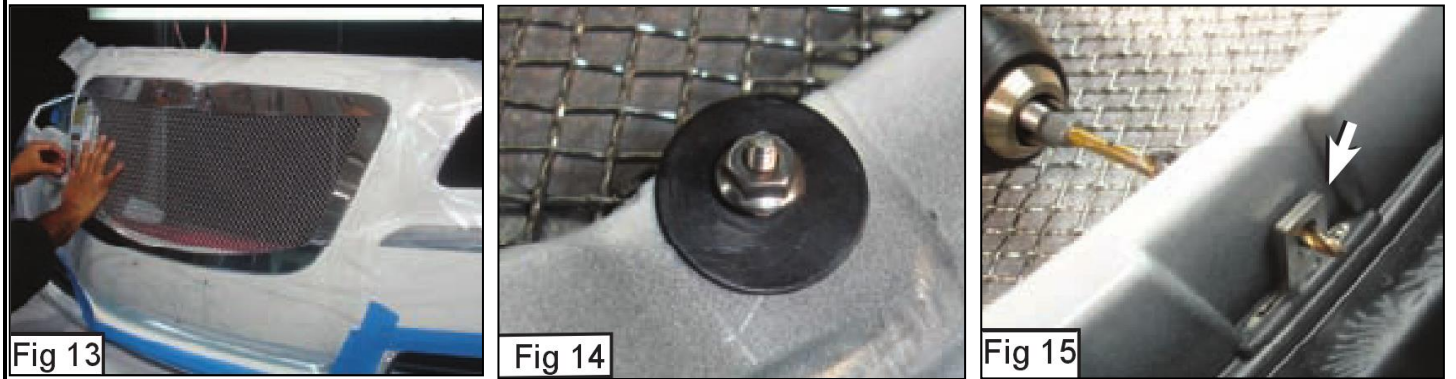
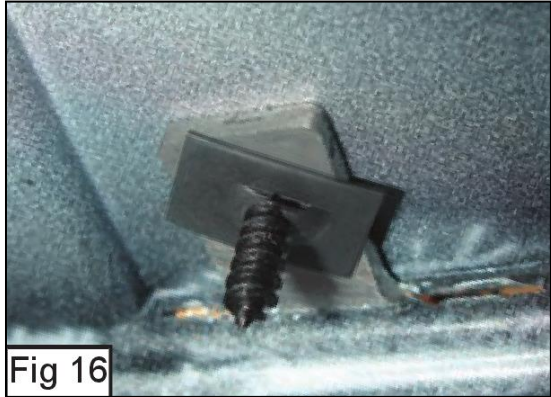
|    |   |  |
|----|---|--|
| 20 | Place a #8 flat nut on the outer edge on the bracket and thread with a #8 screw.(Fig 16)                    |  |
| 21 | Insert the Chrysler logo through the slots on the mesh grille. Re-assemble bumper support, clips and bolts. |  |
| 22 | Installation completed.   |  |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!