
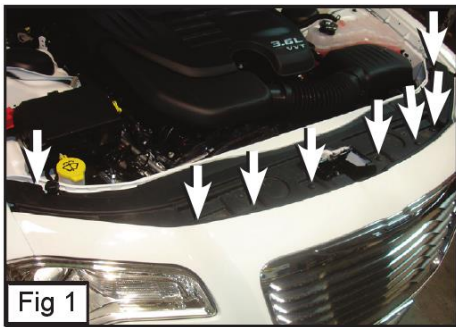


<b>Part#</b>	GR18GFC01R	For 2011-2014 Chrysler 300/300C (Not For SRT8 And John Varvatos Limited Edition)
--------------	------------	--



Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	3	Flat Nut	3	8#
	2	Screw	3	8#×3/4"				

**Install Notes:** Overlay  Replacement  Drill  Cut






Step	Description	illustration
1	Identify the grille insert & hardware with parts list	
2	Remove 8 clips on the plastic cover. (Fig 1)	
3	Carefully pull on grille shell to remove part of the plastic cover. (Fig 2)	
4	With a plastic prybar unclip the plastic cover from the factory grille shell. (Fig 3)	

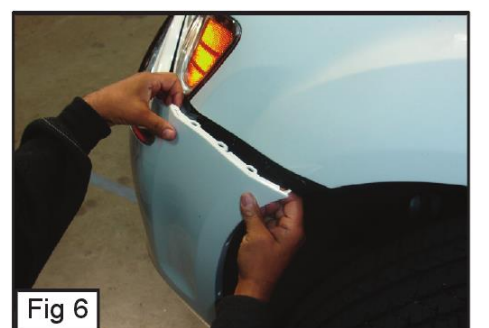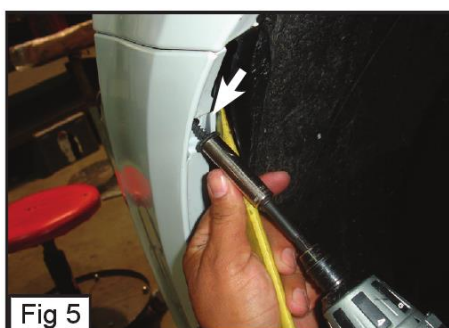

5	Remove Plastic Cover. (Pull Grille Shell Carefully outward if Plastic Cover does not come off)
6	Remove 2 clips on side fender well. (Fig 4)
7	Remove 10mm bolt on the inner fender. (Fig 5)
8	Pull Side Fender outward to Unclip. (Fig 6)

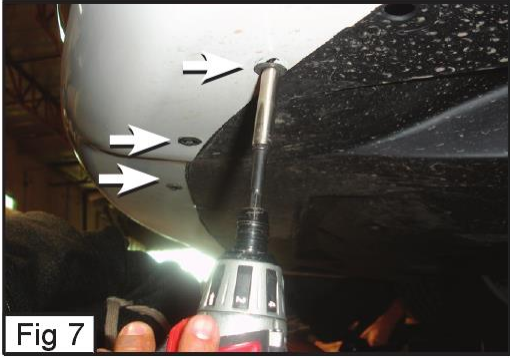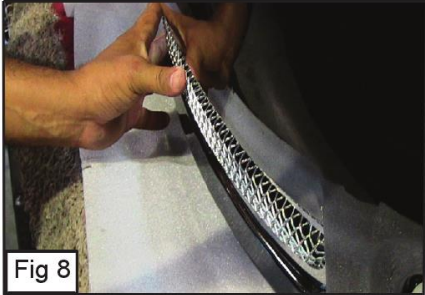

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.  
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.  
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR18GFC01R	For 2011-2014 Chrysler 300/300C (Not For SRT8 And John Varvatos Limited Edition)	
9	Remove 8 (7mm) Screws from Underneath the Factory Grille Shell. (Fig 7)	 <p>Fig 7</p>	
10	Remove grille shell and unclip the electric wire from the fog lights.		
11	Place mesh grille through the bumper opening. (Fig 8)		
12	Drill a 3/16" hole through the brackets on the side and bottom of the mesh grill. (Fig 9)		
13	Place a #8 flat nut on the outer edge on the bracket and thread with a #8 screw. (Fig 10)		
<div style="display: flex; justify-content: space-around;"> <div data-bbox="84 890 506 1182">  <p>Fig 8</p> </div> <div data-bbox="506 890 1032 1182">  <p>Fig 9</p> </div> <div data-bbox="1032 890 1539 1182">  <p>Fig 10</p> </div> </div>			
14	Re-assemble factory grille shell, clips and bolts.		
15	Installation completed!!		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!