






| | | |
|-------|------------|---|
| Part# | GR18GFC03R | For 2011-2014 Chrysler 300/300C With Adaptive Cruise (Not For SRT8) |
|-------|------------|---|




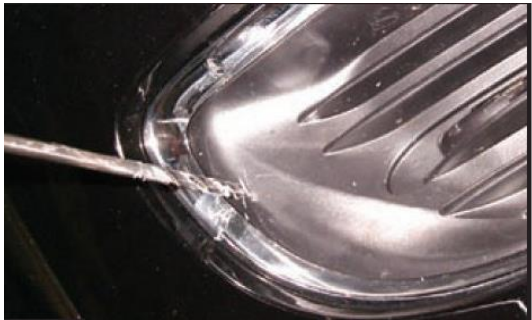


| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|-------------|-----|-----------------|------|--------------|-----|-------------|
| | 1 | Mesh Grille | 2 | Stainless steel | 4 | Lock Nuts | 6 | 6-32 |
| | 2 | Stud | 4 | 6-32×2" | 5 | Flat Washers | 6 | Φ25×Φ5×1 |
| | 3 | Stud | 2 | 6-32×1 1/2" | | | | |

Install Notes: Overlay ☐ Replacement ☒ Drill ☒ Cut ☐

Installation

| | | | |
|--|---|--|--|
| Step 1 | Identify the grille insert & hardware with parts list. |  | |
| Step 2: Factory Grille Shell Removal |  |  | |
| |  |  | |
| | <u>Step 2-1: Pop hood, remove 8 clips on the plastic cover</u> | <u>Step2-2: Remove 2 clips on side fender well</u> | |
| | <u>Step 2-3: Remove 10mm bolt on the inner Fender</u> | <u>Step 2-4: Remove 7 screws from underneath of the factory front bumper</u> | |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
We are not responsible for any damage caused by the installation. Thank you for choosing our product!

| Part# | GR18GFC03R | For 2011-2014 Chrysler 300/300C With Adaptive Cruise (Not For SRT8) |
|-----------------------------------|---|--|
| |  <p><u>Step 2-5: Pull side fender outward to unclip.</u></p> |  <p><u>Step2-6: Remove 8 (7mm) screws from underneath the factory grille shell.</u></p> <p><u>Step2-7:Remove grille shell and unclips the electric wire from the fog lights.</u></p> |
| Step 3:Grille Bumper Installation |  <p><u>Step3-1: Place mesh grille over factory bumper opening.</u></p> |  <p><u>Step3-3: Drill a 3/16 Hole where you marked the Screws.</u></p> |
| | <p><u>Step3-2:Mark where the screws on the mesh grille are(Make sure the Grille Fits properly through the Factory Opening)</u></p> | <p><u>Step3-4: Place Bumper Mesh in .</u></p> |
| |  <p><u>Step3-5:Insert flat washers on the threaded screws, thread with lock nut.</u></p> | <p><u>Step3-6: Repeat for remaining threaded screws.</u></p> |
| Step 4 | Installation completed!!! |  |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
We are not responsible for any damage caused by the installation. Thank you for choosing our product!