
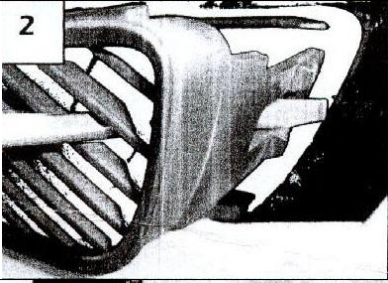
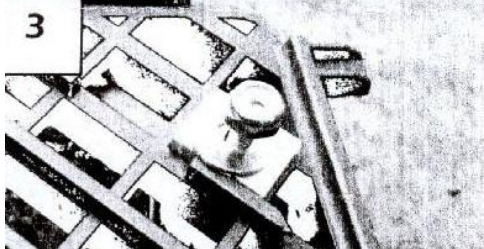


Part#	GR18GFE26T	Application	05-07 Chrysler Crossfire – Low Bumper Stainless Steel Mesh Grille				
-------	------------	-------------	--------------------------------------------------------------------------	--	--	--	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	2	Stainless steel	4	Flat Washers	4	
	2	Flat Tabs	4		5	K-Lock Nuts	4	6-32
	3	Screws	4	6-32 × 1"				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	N/A
3	Best fit the bumper inserts into the bumper to identify the correct locations. Remove the factory bumper inserts. On the outer end of each insert is a hole to access the molded retaining clips; this side must be removed first. Slide a slotted screwdriver into the access hole; depress the molded clip; remove the insert by pulling the insert forward (2). Repeat on other side.	
4	Once the inserts are removed. Center the corresponding grilles over the factory bumper inserts. Thread a screw in each nut welded to the grille. Slide a flat tab and flat washer over each screw; use the lock nuts to secure the grille (3).	
5	Make sure the grille is centered and tighten the fasteners. but do not over-tighten.	N/A
6	Reinstall the bumper inserts with the grilles attached.	N/A
7	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!