



# PATENT PRODUCT

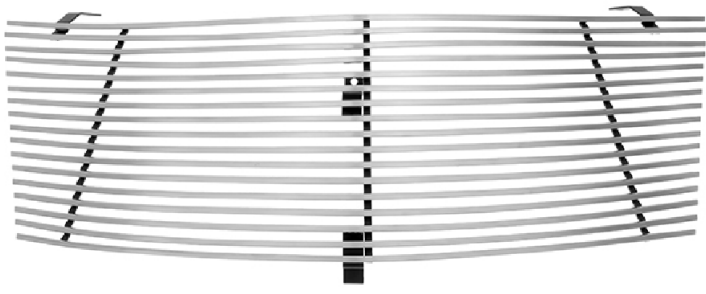
## Grille Installation Instruction

Rev. 180601

<b>Part#</b>	GR18HEC01C/J	<b>Application</b>	<b>For 2000-2005 Chrysler PT Cruiser</b>
--------------	--------------	--------------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Stainless steel	2	Self Drill Screws	2	#8×3/4"

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Center the billet grille into the opening. Make sure the alignment tab on the bottom is positioned behind the bumper cover. Use the factory fastener to secure the lower mounting bracket to the factory mount. ( Do not tighten this fastener yet).	
4	Close the hood and adjust the billet insert. Hold the billet insert firmly in place and open the hood. Drill a 1/8" hole at each mounting bracket on top. Use the screws provided to secure the top mounting brackets. Tighten all the mounting hardware.	
5	Close the hood and check the fit of the billet insert. Loosen the hardware and adjust the billet if necessary.	
6	Make sure the billet grille is centered and tighten the fasteners.but do not over-tighten.	
7	Reinstall the black plastic cover which was removed in step 2.	
8	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.  
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.  
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!