
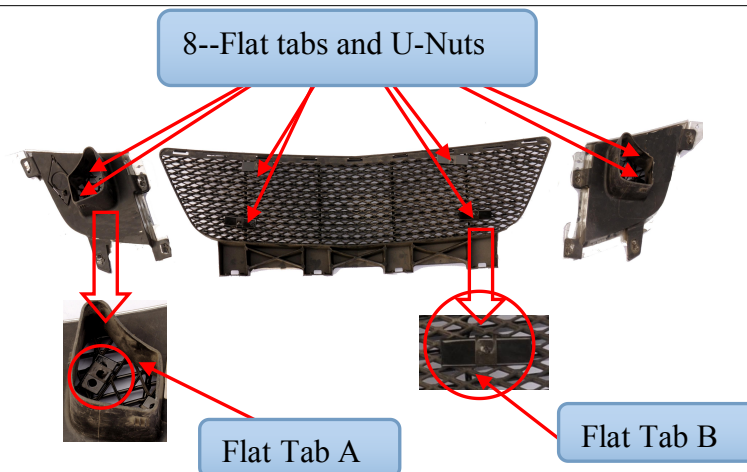
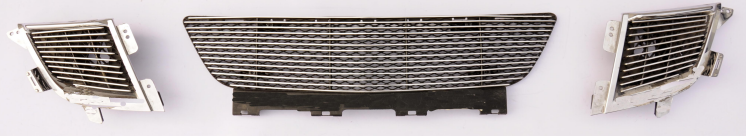


Part#	GR19FGF20A	Application	07~09 Saturn Sky Redline – Low Bumper Billet Grille				
-------	------------	-------------	---	--	--	--	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Right Billet Grille	1	11Billets	5	U-Nut	8	8#
	2	Left Billet Grille	1	11Billets	6	Flat Tab A	4	/
	3	Middle Billet Grille	1	14Billets	7	Flat Tab B	4	/
	4	Screw	8	8#×1"	8	/	/	/

Install Notes: Overlay Replacement Drill Cut

Installation

Step	Description	Illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Insert the U-nut through the Hole on the Flat tab.	
4	Center the billet grille into the opening of the factory grille shell, Place the #8 Screw through the bracket on the Billet Grille.	
5	Secure billet grille using the #8 screws, flat tabs and U-nuts.	
6	Make sure the billet grille is centered and tighten the fasteners.	
7	Reinstall the black plastic cover which was removed in step 2.	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!