







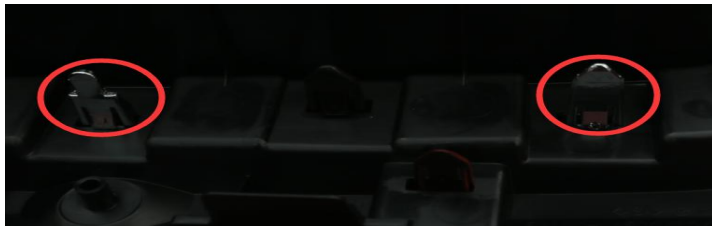

Part#	T46358M	Application	For 2016-2017 Toyota Tacoma Not Fit With Front Sensor
-------	---------	-------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Rivet Grille	1	Stainless steel	3	Kep Nut	8	10#
	2	Tabs	8					

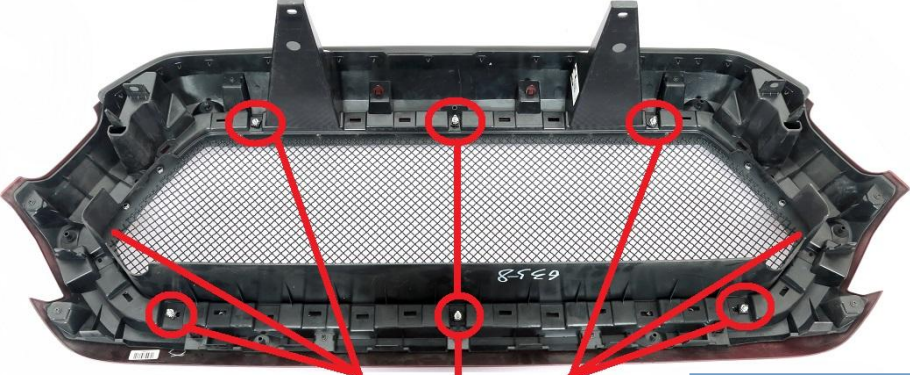
Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Use masking tape to protect vehicle while removing and mounting the grille.	
3	Remove and retain the two push pins located at the upper ends of the grille assembly.	
4	Remove and retain the two 10mm screws that secure the grille assembly to the radiator core support.	
		
5	Remove the entire grille assembly by pulling it forward from the vehicle.	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	T46358M	Application	For 2016-2017 Toyota Tacoma Not Fit With Front Sensor
6	With the grille assembly removed from the vehicle, place automotive masking tape on the grille shell and the vehicle to protect from damage/scratches.		
7	Flip the grille assembly over and place on a padded work surface to begin disassemble.		
8	Use a Phillips screwdriver to remove the eight screws located around the perimeter of the inner grille assembly. Retain five of the eight screws.		
9	Squeeze each of the grille locking tabs to release them from the grille assembly. The locking tabs require manual pressure to completely free each of them from the grille assembly.		
10	Remove the inner chrome trim ring from the grille assembly.		
11	Using the prior technique, squeeze each of the grille locking tabs to release the grille from the grille assembly.		
			

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	T46358M	Application	For 2016-2017 Toyota Tacoma Not Fit With Front Sensor
12	Separate the grille from the grille assembly by pulling the grille forward.		
13	Center the grille into the opening of the factory grille shell. Secure the stud to the threaded holes on the front of the grille. Be sure the studs are through the OEM grille shell. If the hole is too small, please ream.		
<div style="text-align: center;">  <p data-bbox="665 871 1015 955">put studs through holes on OE grille shell</p> <div style="border: 1px solid black; padding: 5px; display: inline-block;"> <p data-bbox="1055 871 1291 955">Figures for reference only</p> </div> </div>			
14	Make sure the grille is centered and tighten the fasteners, but do not over-tighten.		
15	Reinstall the factory grille shell.		
16	Installation completed.		

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!