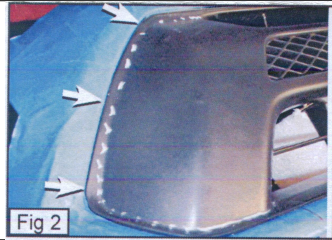

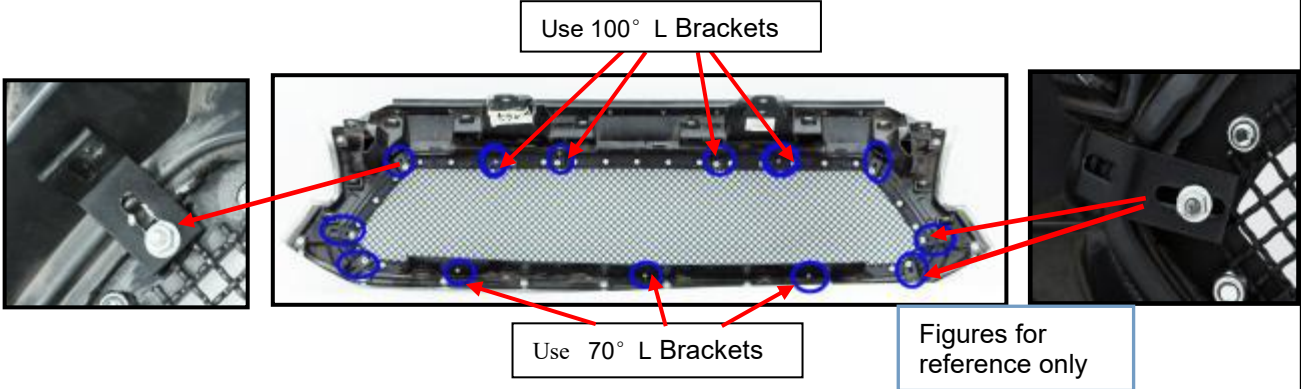


Part#	T46971N	Application	For 2012-2015 Toyota Tacoma
-------	---------	-------------	-----------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Rivet Grille	1	Stainless steel	4	100° L Brackets	4	/
	2	Lock Nut	20	10-24	5	70° L Brackets	3	/
	3	Bolt	7	10-24×1/2"	6	135° L Brackets	6	/

Install Notes: Overlay Replacement Drill Cut

Step	Description	Illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood), Pop hood, remove plastic shroud at the top and set fasteners aside.	
3	With a dye grinder, cut along the factory grille to remove grille.	 
4	Position the Grille onto grille shell opening.	
5	Mark locations for drilling on the shell through the other hole on the "L" brackets, then remove the brackets and drill holes on these locations. Attach the Grille to the shell by inserting the screws through the holes of L Brackets and the holes on the shell, and then secure them with Flange Nuts provided.	 <p>Use 100° L Brackets</p> <p>Use 70° L Brackets</p> <p>Figures for reference only</p>
6	Reinstall the plastic shroud with the fasteners removed in Step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!