

Rev. 191101

AUIC	J PAKTS	SPECIALIST IN	·, <u> </u>									1167.	191101
Part# GR20DFJ31D Application For 2018-2020 Toyota Tacoma Main Upper with front sensor TSS													
		Item	Part	Name	QTY	Descr	iption	Item	Pa	rt Nan	ne	QTY	Description
		1	Rivet Gril	le	1	Stainles	s steel	5	Hex Flan	ge Nut		4	M4
Parts Li	ist	2	Lock Nut		14	10#		6	Nylon Spacer		4		
		3	Flat Washer		9	⊄ 16x ⊄ 6.5x1		7	Flat Washer		8	⊄ 25x ⊄ 5x1	
		4 Bolts 4 M4x20			8	Top Mounting Plate		1					
Install N	lote	es: Ov	verlay	Rep	laceme	nt √	Dril	ı ×	C	ut	×		
Step			De	escription						illust	ration		
1 Identify the grille & hardware with parts list. 2018 TOYOTA TUNDRA, TACOMA TSS LOGO INSTALLATION:													
1. Disconnect negative battery terminal. 2. Remove access panel (Tundra only) and disconnect TSS harness. 3. Remove TSS sensor module and harness from factory grille. Note the TOP side orientation of the sensor.													
4. Remove harness and connector from factory grille tabs. 5. Install factory TSS sensor to mounting plate. Use supplied (4) #10 screws, washers and lock nuts. Torque to 30 in-lbs. 6. Install supplied 4 spacers as shown													



Rev. 191101

Part#

GR20DFJ31D

Application


For 2018-2020 Toyota Tacoma Main Upper with front sensor TSS




7. Install complete assembly to mounting studs with spacers in place. Use (4) #10 lock nuts andTorque to 30 in- lbs. Note orentation of TOP sdie of module. Connect harness to module, press harness cable mounts into position as shown.



8. Press harness cable mounts into bracket as shown.

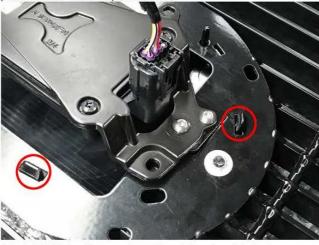

9. Install OEM. front logo as shown. Do not force logo into the logo mounting plate. Insert the lower tabs First, then the upper tabs.

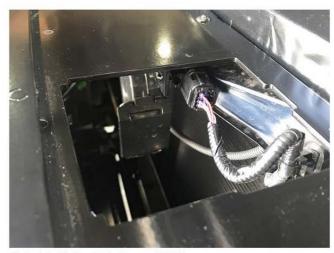

10. Install grille to vehicle. Connect TSS harness.



11. Replace access cover (Trunda Only)



12. Reconnect negative battery terminal.



Rev. 191101

Part#	GR20DFJ31D	Application	For 2018-2020 Toyota Tacoma Main Upper with front sensor TSS			
2	Turn off engine and chalk tires with stop block. Open Hood. (Fig 1)					
3	With the hood open, near the main head lamps, identify and remove (2) plastic push pins. (Fig 2)					
4	Identify and remove (2) 10mm bolts. (Fig 2-4)					



5





Using both hands firmly grasp the grille and with a firm tug on both sides will release clips at bottom of grill. The Grille should now be free to pull away from truck.(Fig 5-6)







- 6 Flip the grille assembly over and place on a flat cushioned surface or foam pad to begin disassembly.(Fig7)
- 7 Use Phillips head screwdriver to remove (9) #8 screws located around the grille assembly perimeter that secures the inner shell to outer shell.(Fig8)







Rev. 191101

AL	UTO PARTS SPECIALIST INC.	Grille	Rev. 191101
Part#	GR20DFJ31D	Application	For 2018-2020 Toyota Tacoma Main Upper with front sensor TSS
8	At this point you to rer (Fig 9-11)	nove the inner she	ell liner that holds and secures the main factory grille in the grille assembly.
9	Using a pair of broad	nose pliers and pre	ress the grille locking tabs so that you will release the inner shell lip guard. (Fig 9)
10	You may need to manu	ually press the tab	os to completely free the inner shell. (Fig 10)
	FIG 9		FIG 10 FIG 11
FIG 12		FIG	FIG 14
11 12		need to remove th	14) ne main factory grille from the complete grille assembly. Using the same technique press them through the pre-arranged hole. (Fig 15-20)
	FIG 15		FIG 16
	FIG 18		FIG 19



18

Prilla Installation Instruction

AU	TO PARTS SPECIALIST INC.	Grille	Installation Instruction	Rev. 191101			
Part#	GR20DFJ31D	Application	For 2018-2020 Toyota Tacom front sensor TSS	na Main Upper with			
13	The Main grille should	now be free from	the grille assembly and can be pulled forward ar	nd set aside. (Fig 21-24)			
14		E FOR PROPER 1	VITH THE TOYOTA SAFETY SENSE (TSS) FEATSS INTEGRATION WITH THE NEW GRILLE. IDE.	ATURE.SEE OUR TSS INSTALL			
FIG 2		FILE	FIG 23				
15	Take your new grille In	nsert and place, fa	ce down, on the soft cushioned foam pad.(Fig 2-	4)			
16	Take your grille shell and insert into their de		ce over and down on the grille so that the grille's ig 24-25)	s threaded mounting studs will align			
17	The grille is now ready to be secured and fastened to factory grille shell assembly. Using an Nut driver, socket, or wrench and the provided Nylon Lock Nuts, tighten and secure the grille insert to the factory grille assembly. Secure the grille by first inserting a screw into the top middle tab bracket and tighten down loosely. Inspect and align all gaps between grille and grille shell.(Fig 26-28)						
	FIG 24		FIG 25				
	FIG 26		FIG 27	FIG 28			

Re-install the grille assembly in the reverse order that it was removed from the vehicle. At this point you want to look over your work and examine the gap alignments around all edges and in between the new grille and the vehicle components and body lines. Carefully close the hood for a complete visual inspection. If adjustment is needed, you can loosen the hardware mounts and shift side to side or up & down to achieve proper look. Check over your work for hardware tightness and visual inspection.