



PATENT PRODUCT


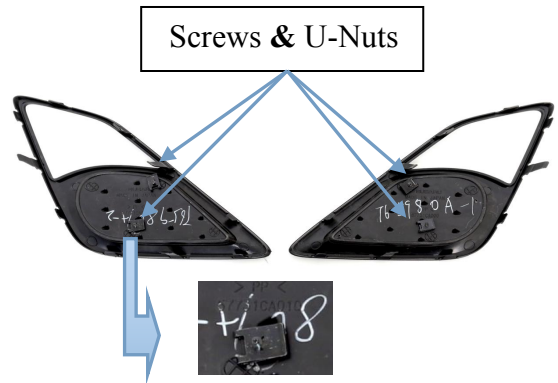

Grille Installation Instruction

Rev. 141230

Part#	GR20FEI80H	Application	2013-2015 Scion FR-S Fog light Cover
--------------	------------	--------------------	--------------------------------------

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Parts List	1	Billet Grille	1	Aluminum	3	Screw	4	8#x1 1/2"
	2	Billet Grille	1	Aluminum	4	U-Clip Nut	4	8#

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Carefully remove the black plastic cover from front bumper, This will allow you easily to install the billet grille on the fog light cover.	
3	Center the billet grille on the fog light cover and then you need mark and drill four holes. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the fog light cover.	
4	Secure billet grille using the U-nuts from the back side of the fog light cover.	
5	Make sure the billet grille is centered and tighten the fasteners.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!