



PATENT PRODUCT


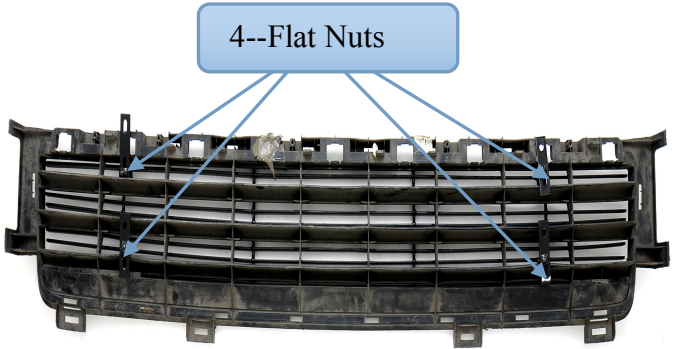
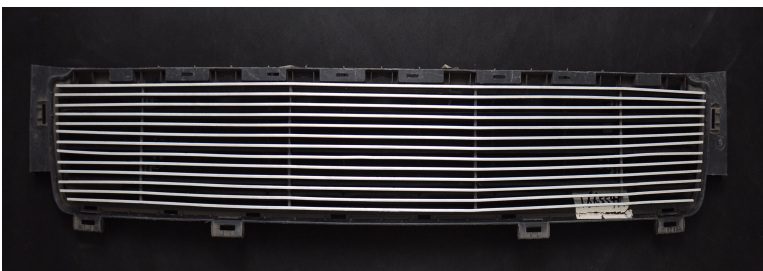
Grille Installation Instruction

Rev. 131001

Part#	GR20FFE54A	<i>Application</i>	08~10 Toyota Sequoia – Low Bumper Billet Grille		
--------------	------------	--------------------	--	--	--

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Parts List	1	Billet Grille	1	13 Billets	3	Flat Nuts	4	8#
	2	Screws	4	8×2"	4	Flat Tabs	4	/

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	N/A
3	Center the billet grille into the opening of the factory grille shell. Secure the screw to the threaded holes on the front of the grille. Be sure the screws are through the OEM grille shell.	N/A
4	Secure billet grille using the flat nuts from the back side of the OEM grille shell.	
5	Make sure the billet grille is centered and tighten the fasteners.	N/A
6	Reinstall the black plastic cover which was removed in step 1.	N/A
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!