
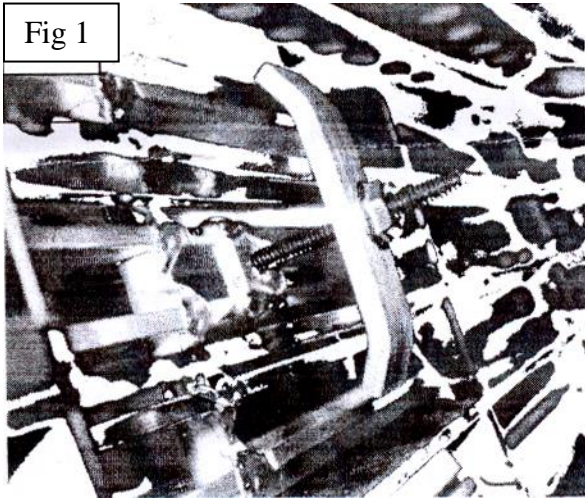


Part#	GR20FFE86A/H	Application	For 2008-2010 Scion XB
-------	--------------	-------------	------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	3	Nylon Lock Nuts	2	6-32
	2	Flange Brackets	2	2"	4	Machine Screws	2	1 1/2"

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Open the hood and remove the plastic radiator cover. Remove two 10mm screws & pop out three plastic clips to remove. Use a screwdriver to pry the hood bumpers (plastic push in fastener) out. Release the lower clips on bottom of the grille and remove from the vehicle.	
3	Center the insert onto the grille face. From behind grille; secure the insert using the nylon lock nuts, machine screws and the provided 2" brackets (Fig 1). Snug the brackets down to hold the grille in place (do not over tighten). Make sure that the brackets wrap onto the factory bumper grille and will not slip.	
4	Make sure the grille is centered and tighten the fasteners.	
5	Reinstall the black plastic cover which was removed in step 2.	
6	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!