
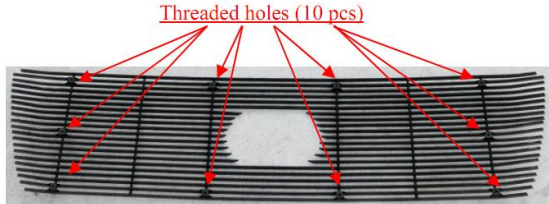

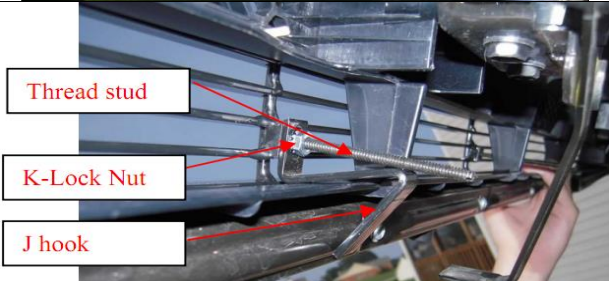



Part#	GR20FFG18A/H	Application	<b>For 2010-2013 Toyota Tundra</b>
-------	--------------	-------------	------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	3	K- Lock Nuts	10	10-24
	2	Thread stud	10	1.5 "	4	J Hook Brackets	10	

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Secure the studs in the threaded holes on the rear on the billet grille insert.	
3	Hood up, and center the billet grille from front side, make sure the studs are through the OEM grille.	
4	Fasten the billet grille insert on to the OEM grille with J hooks & K-lock nuts on the back side of the OEM grille.	
5	Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.	
6	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!