
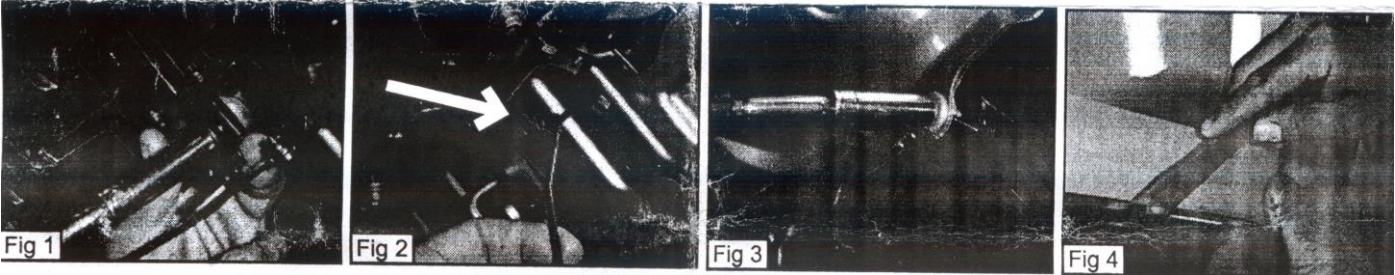


Part#	GR20FFH38A/H	Application	For 2010-2013 Toyota Tundra
-------	--------------	-------------	-----------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	3	Truss Head Tapping Screws	2	8×1"
	2	Flat Nut	2	8#				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove the two 10mm bolts from the factory hood latch(where it bolts to the hood).(Fig 1)Next disconnect the factory hood latch rod at the top where it connects to the hood latch.(Fig 2) Remove ten 10mm bolts that hold the factory grille to the hood.(Fig 3).Using a plastic pry bar between the hood and the grille, carefully pop the grille shell from the hood and remove the grille shell.(Fig 4)	
3	Center the billet grille into the opening of the factory grille shell. Place one screw through each of the welded tabs on the billet grille.	
4	Where the screws come through the grille shell, place a flat nut in align with the screw and tighten. Tighten each of the screws evenly so as not to put the grille in a bind and not to make it go off center.	
5	Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!