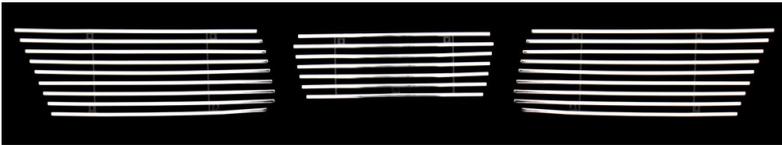
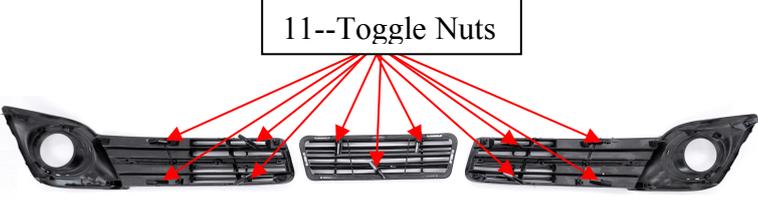


Part#	GR20FFI34A	Application	2012 Toyota Camry SE Not For LE/XLE And Hybrid Lower Bumper
-------	------------	-------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Right Billet Grille	1	9 Billets	4	Toggle Nut	11	6-32
	2	Middle Billet Grille	1	7 Billets	5	Bolt	11	6-32x1 1/2"
	3	Left Billet Grille	1	9 Billets	6	/	/	/

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Center the billet grille into the opening of the factory grille shell. You need mark and drill four holes. Be sure the bolts are through the grille shell. .	
4	Secure billet grille using the toggle nuts from the back side of the OEM grille shell.	
5	Make sure the billet grille is centered and tighten the fasteners.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!