



# PATENT PRODUCT


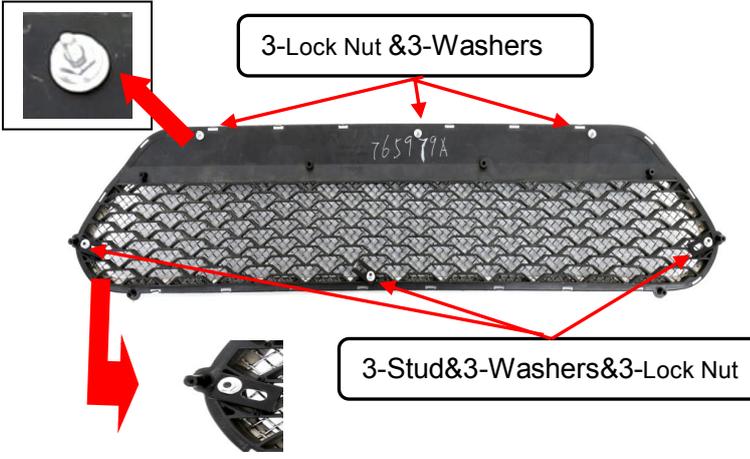
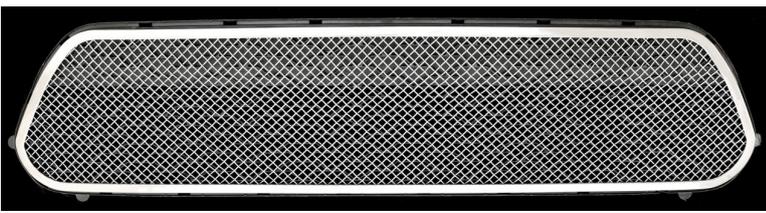
## Grille Installation Instruction

Rev. 130701

<b>Part#</b>	<b>GR20GEI79T</b>	<i>Application</i>	<b>2013-2015 Scion FR-S Lower Bumper</b>
--------------	-------------------	--------------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	4	Lock Nut	6	6-32
	2	Flat Tab	3		5	stud	3	6-32×1"
	3	Washers	6					

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Option: if your OEM grille has the black plastic cover as illustration, please remove this cover first before you install our grille, if not, just go to next step. This will allow access to the rear of the grille shell.	
3	Center the Mesh grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell. You need mark and drill three holes.	
4	Secure billet grille using the toggle nuts from the back side of the OEM grille shell.	
5	Make sure the grille is centered and tighten the fasteners.	N/A
6	Reinstall the black plastic cover which was removed in step 2.	N/A
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!