





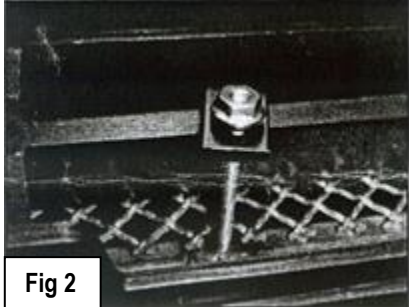
# PATENT PRODUCT Grille Installation Instruction

Rev. 20200401

|              |           |                    |                             |
|--------------|-----------|--------------------|-----------------------------|
| <b>Part#</b> | T76719T&H | <b>Application</b> | For 2010-2013 Toyota Tundra |
|--------------|-----------|--------------------|-----------------------------|

| Parts List | Item | Part Name   | QTY | Description     | Item | Part Name   | QTY | Description |
|------------|------|-------------|-----|-----------------|------|-------------|-----|-------------|
|            | 1    | Mesh Grille | 3   | Stainless Steel | 3    | Studs       | 6   | 6-32×1 1/2" |
|            | 2    | L-Brackets  | 6   | 1/2"            | 4    | K-Lock Nuts | 6   | 6-32        |

**Install Notes:** Overlay  Replacement  Drill  Cut

| Step | Description  | illustration   |
|------|--|--|
| 1    | Identify the grille & hardware with parts list.  |    |
| 2    | Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual.   |  |
| 3    | Take the 3 bumper grilles and thread a stud in each nut welded to the grille. Install them into the appropriate openings (Fig 1).  |  <p style="text-align: center;"><b>Fig 1</b></p>  |
| 4    | From behind the bumper grille, reach down behind the bumper and locate the threaded studs. Install a 1/2" L-Bracket on each of the threaded studs making sure the L-Brackets latch over the horizontal plastic ribs (Fig 2). Install the 6-32 K-Lock nuts on the threaded studs and tighten. |  <p style="text-align: center;"><b>Fig 2</b></p> |
| 5    | Make sure the insert is centered and tighten the hardware.   |  |
| 6    | Reinstall the plastic shroud with the fasteners removed in Step 2.   |  |
| 7    | Installation completed.  |  |

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!