
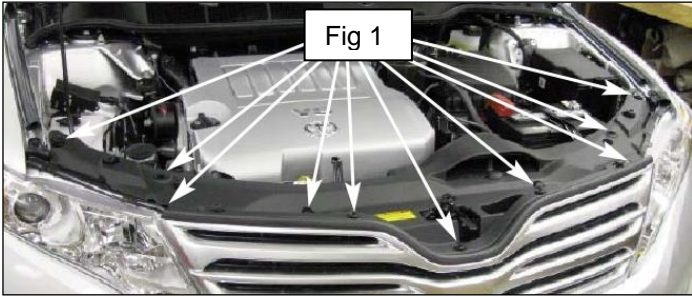
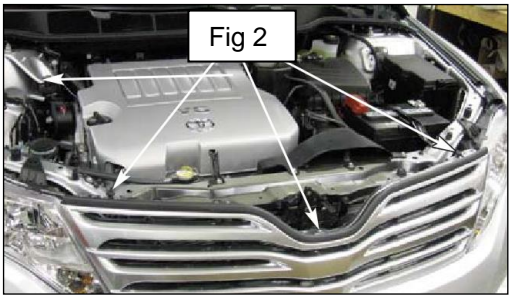
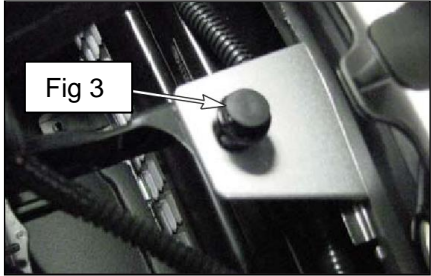
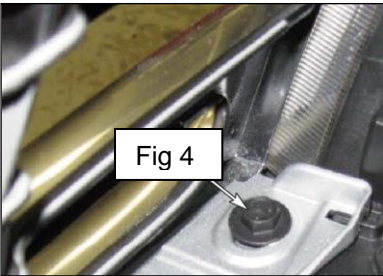
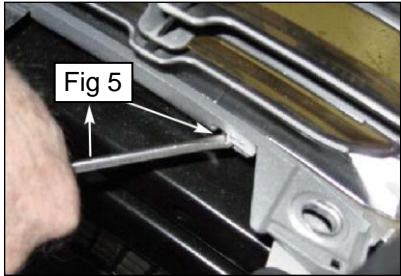


Part#	GR20GFG85T/H		Application	For 2009-2012 Toyota Venza				
Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	3	Studs	8	6-32 × 1.5"
	2	K-Lock Nuts	8	6-32	4	Black Washers	8	
Install Notes: Overlay <input checked="" type="checkbox"/> Replacement <input type="checkbox"/> Drill <input type="checkbox"/> Cut <input type="checkbox"/>								
Step	Description			illustration				
1	Identify the grille & hardware with parts list.							
2	Open the hood and remove the factory push pins retaining the black radiator support panel cover and remove the cover. The large push pins are removed by lifting up on the center until the pin gets loose, then pull straight up to remove. The small push pins with the small center pin needs to have the center pin depressed, releasing the pin then lift straight up to remove.(Fig 1)							
3	Remove the two factory screws and the factory center push pin retaining the top of the factory grille. (Fig 2)							
4	Use a flat blade screw driver to lift up on the center of the factory push pin located at the bottom center of the factory grille and remove the push pin. (Fig 3)							
5	Remove the two 10mm hex bolts, pulling the grille forward for bolt access. (Fig 4)							
6	Remove the upper grille by using a flat blade screw driver to release the mounting clips across the bottom edge of the grille. Start at one side and pull forward on the grille as the clips release. (Fig 5)							
7	Thread a stud in each nut welded to the grille. From the rear, place a black washer on each screw. Now thread a nut on each screw.							
<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>Fig 1</p> </div> <div style="text-align: center;">  <p>Fig 2</p> </div> </div> <div style="display: flex; justify-content: space-around; margin-top: 10px;"> <div style="text-align: center;">  <p>Fig 3</p> </div> <div style="text-align: center;">  <p>Fig 4</p> </div> <div style="text-align: center;">  <p>Fig 5</p> </div> </div>								
8	Make sure the grille is centered and tighten the fasteners. But do not over-tighten.							
9	Reinstall the upper grille which was removed in step 6.							
10	Installation completed!!!							

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!