
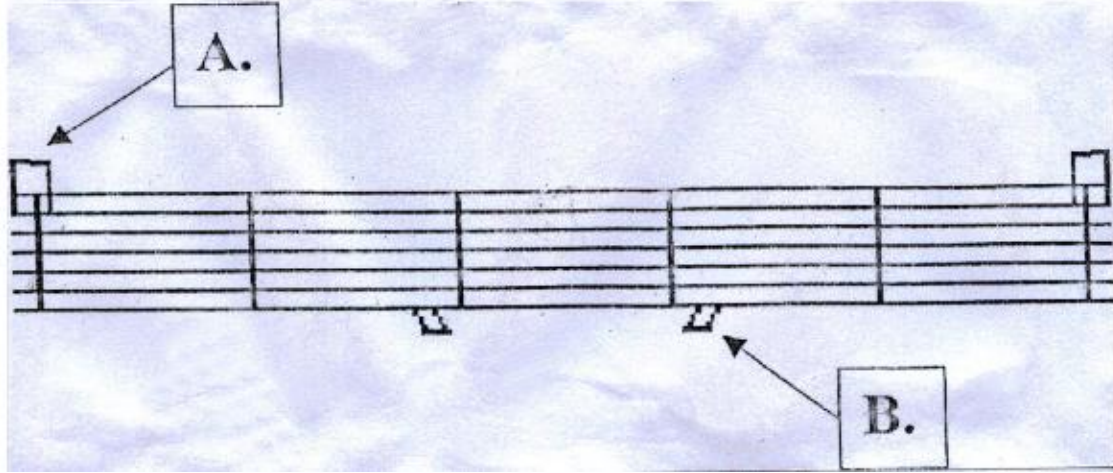


| | | | |
|-------|--------------|-------------|------------------------|
| Part# | GR20HED21C&J | Application | For 2003-2007 Scion XB |
|-------|--------------|-------------|------------------------|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|---------------|-----|-------------|------|---------------------------|-----|--------------|
| | 1 | Billet Grille | 1 | Aluminum | 4 | Truss Head Screws | 2 | 10-24×1 1/2" |
| | 2 | Flat Nut | 2 | 8# | 5 | Truss Head Tapping Screws | 2 | 8×3/4" |
| | 3 | Kepr Nuts | 2 | 10-24 | 6 | Washers | 2 | 10# |

Install Notes: Overlay Replacement Drill Cut

| Step | Description | illustration |
|------|---|--|
| 1 | Identify the grille & hardware with parts list. |  |
| 2 | Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. Remove the factory grille shell. Do not discard the fasteners. | |
| 3 | Center the billet insert into the opening. It may be necessary to slightly bend the mounting brackets on the billet insert for an optimum fit. (A) Use two of the factory fasteners to hold the top mounting brackets. (B) Mark the lower mounting bracket holes to the opening. Drill a 1/8" hole at each mark. Use the #8 screws and flat nuts to secure the billet insert. |  |
| 4 | Close the hood and check the alignment of the billet insert. If necessary, remove the insert and adjust the brackets. | |
| 5 | Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten. | N/A |
| 6 | Reinstall the black plastic cover which was removed in step 2. | N/A |
| 7 | Installation completed!!! | N/A |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!