

Part#	GR20HFG35 A/H	Application	<b>For 2010-2011 Toyota Camry Not For SE And Hybrid Model</b>				
-------	------------------	-------------	---	--	--	--	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	4	Studs	6	#6X1"
	2	Flat Nuts	6	#6	5	Washers	6	
	3	Tabs	2					

Install Notes: Overlay  Replacement  Drill  Cut



Step	Description	illustration
------	-------------	--------------

1	Identify the grille & hardware with parts list.	
---	---	--

2	Open the hood and remove the outer phillips screws, outer push fasteners and the center 10mm hex bolt to release the bumper cover from the support brackets(Fig 1).	
---	---	--

3	Use wide masking tape and carefully mask around the factory grille, lower bumper opening and cover the front emblem prior to factory grille removal(Fig 1).	
---	---	--



4	Remove the four factory phillips screws from the inside of the factory grille (one each side at the top corners) (Fig 2).	
---	---	--

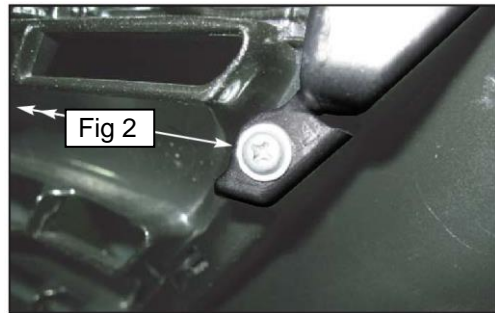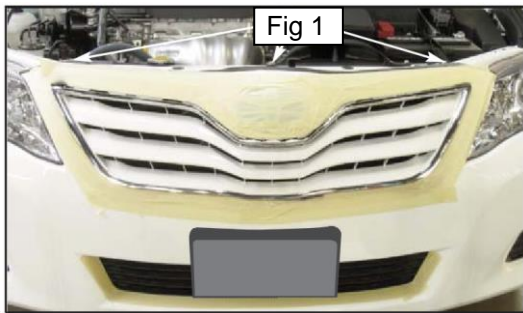



5	Remove the two center screws. They are on either side of the factory hood emblem(Fig 3).	
---	--	--

6	Once the screws are removed, squeeze the mounting clips and pull the grille straight out to remove(Fig 4-1).	
---	--	--

7	Remove the front license plate bracket if equipped(Fig 4-2).	
---	--	--

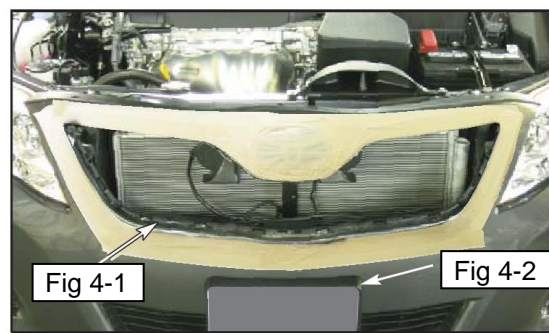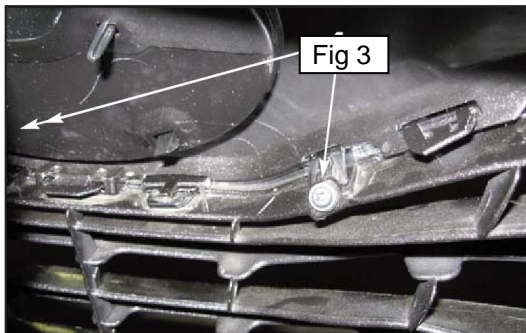

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

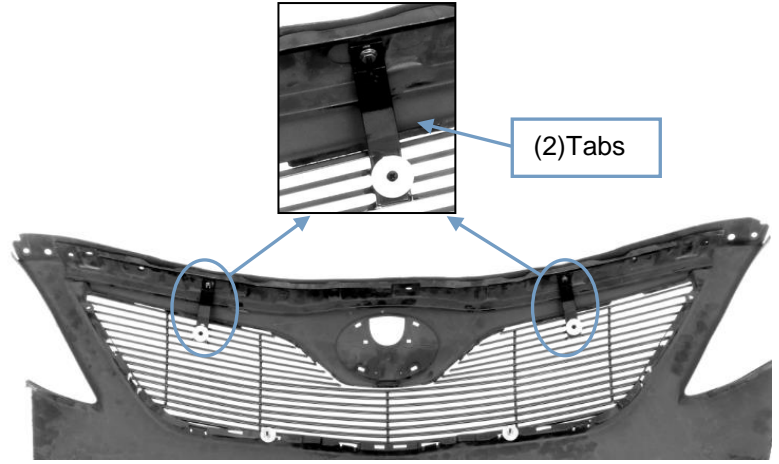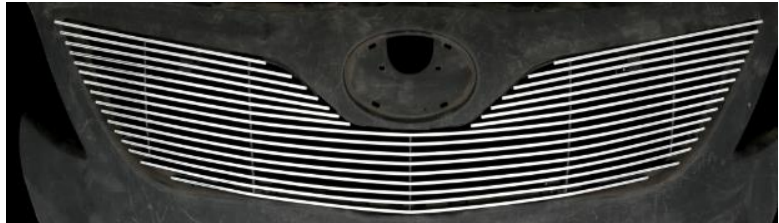Part#	GR20HFG35 A/H	Application	For 2010-2011 Toyota Camry Not For SE And Hybrid Model
8	<p>a. Attach the lower portion of the billet grille to the vehicle using the supplied nuts and studs.            b. Attach the tabs to the billet grille using the #6 studs and nuts.            c. Line up the tabs with the factory mounting points and secure using the supplied nuts and studs.</p>		
9	<p>Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.</p>		
10	<p>Installation completed!!!</p> 		

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!