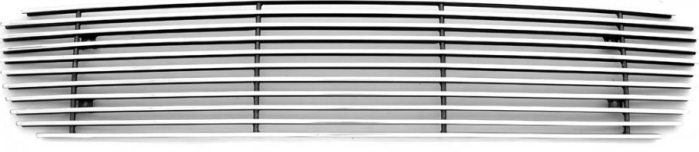


Part#	GR22FEE07A/H	Application	For 2005-2007 Volvo S40 /2005-2006 Volvo V50
-------	--------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	4	Truss Head Screws	4	6-32X2"
	2	Flat Washers	4	6#	5	Nylon Lock Nuts	4	6-32
	3	"U" Tabs	4					

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.	
3	Center the billet grille into the opening of the shell, and place the screws through the holes of the tabs welded to the rear of the billet grille, then secure it using the "U" Tabs, washers and nylon lock nuts from the back.	
4	Make sure the billet grille is centered and tighten the fasteners.	
5	Reinstall the black plastic cover which was removed in step 2.	
6	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.  
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.  
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!