



PATENT PRODUCT


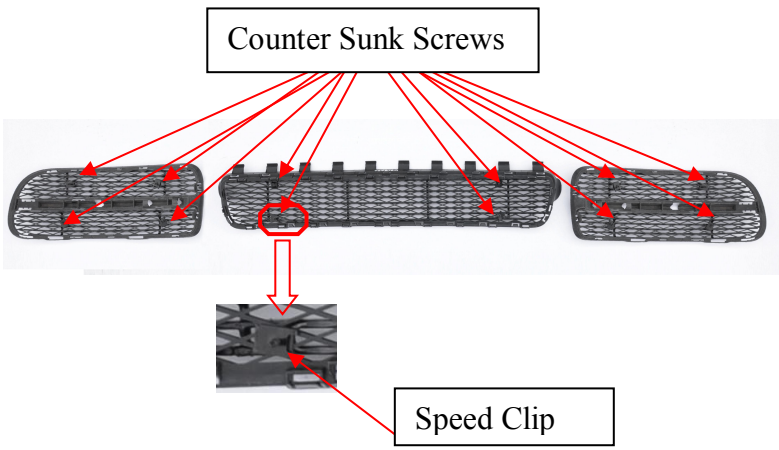
Grille Installation Instruction

Rev. 120701

Part#	GR22FEH16A	Application	2003-2007 VW Touareg With Chrome Trim V8 Lower Bumper			
--------------	------------	--------------------	---	--	--	--

Parts List	Item	QTY	Part Name	Description	Item	QTY	Part Name	Description
		1	5	Billet Grille	Aluminum	3	12	Speed Clips
	2	12	Counter Sunk Screws	8#x1"	4			

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Center the billet grille into the opening of the factory grille shell.	
4	Secure billet grille using the speed clips and counter sunk screws.	
5	Make sure the billet grille is centered and tighten the fasteners.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!