

Part#	Z66601C/J/S	Application	For 2008-2013 Smart Fortwo
-------	-------------	-------------	----------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1#	Billet Grille	4	Stainless steel	4#	Toggle Nuts	8	6#
	2#	Bolts	8	6#x1.5"	5#	Flange Nuts	4	6#-32UNC
	3#	Bolts	4	6#x1"	6#	Washers	4	Ø 25XØ 5X1

Install Notes: Overlay



Replacement




Drill



Cut

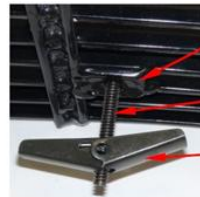

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual.	
3	For Center Grilles: Insert the long Bolts into the weld tab hole from front side of the billet grille. Center the billet grille onto the OEM grille. Press & insert the Toggle Nuts on to the rear of the OEM grille through the gap. If the factory lower center grille gap is too small to insert toggle nuts, please thread the toggle nuts from the back.	<p>picture for reference only; this is not actual grille</p>  <p>Weld tab</p> <p>Bolt</p> <p>Toggle nut</p>
4	For Side grilles: Hold the side grille in the fog light position, mark 2 drilling positions for each billet grille based on the welded tab holes, drill 2 holes. Thread a short stud in each nut welded to the grille. From the rear, thread a nut and a washer on each stud.	
5	Make sure the insert is centered and tighten the hardware.	
6	Reinstall the plastic shroud with the fasteners removed in <b>Step 2</b> .	
7	Installation completed.	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.

We are not responsible for any damage caused by the installation. Thank you for choosing our product!