



Hitch Step Installation Instructions


Step I— Screw iBoard Hitch Step on the Mounting Bracket

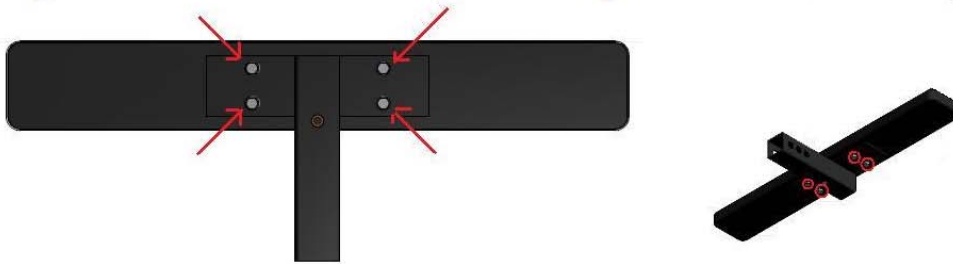

Step II— Secure on the 2" Hitch Receiver Tube

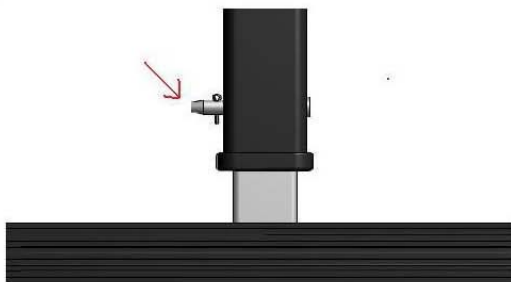

Step III—Install the Anti-Rattle Strap

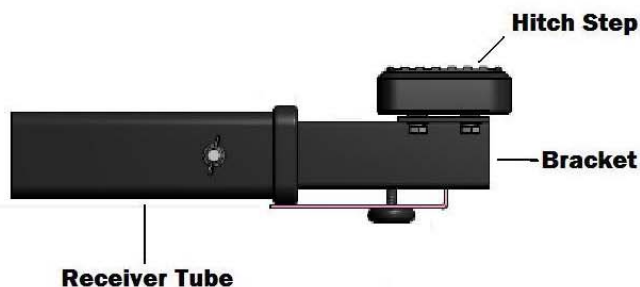

Parts list

1 x iBoard Hitch Step

1 x Mounting Bracket

4 x M8 Hex Bolt

1 x Hitch Pin

1 x Hitch Pin Clip

1 x Anti-Rattle Strap

1 x Anti-Rattle Clamp

1 x Reflective Tape

WARNING- iBoard™ Hitch Step may Interfere with the operation of the O.E. back-up sensor on several late model vehicles. If your vehicle comes equipped with an O.E. back-up sensor, it is advised that you check its' functionality after installation.

Install this product at your own risk.

iBoard™ Hitch Step is Quick and Easy to Install Requiring No Special Tools!!

Max Load on the Edge: 300LBS

© 2014 iBoard Auto