



Hitch Installation Instructions



REV.20260601D

Part#	HT-R32883	Application	Dodge Ram 1500					
-------	-----------	-------------	----------------	--	--	--	--	--

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	N/A	Hitch Body	1		N/A	Backing Plate	1	
Hardware List	1#	Fish Wire	1	M12	4#	Hex Flange Nuts	2	M12X1.75
	2#	Spacers	2	With SQ Hole	5#	Hex socket countersunk head screw	2	M16X2-50
	3#	Carriage Bolts	2	M12X1.75-50	6#	Hex Flange Nuts	2	M16X2

Gross Load Capacity When Used As A Weight Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 10000 LBS. Trailer Weight & 1000 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

* No Drilling Required

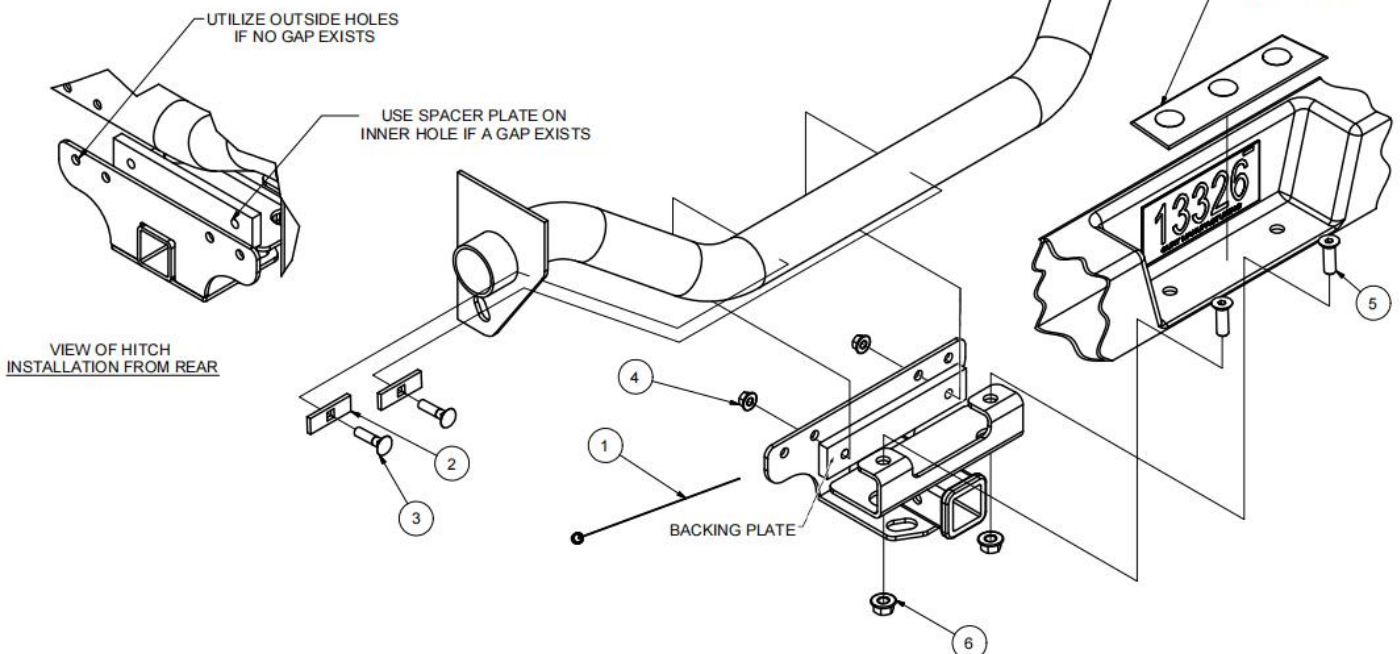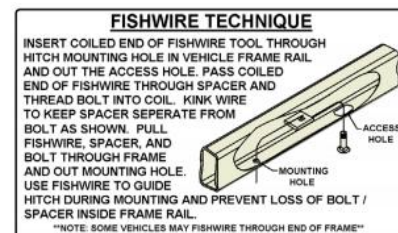

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-R32883	Application	Dodge Ram 1500
Step	Description		
1	Locate the four plastic locking studs under the bumper which hold the bumper cover to the top of the steel bumper. With a pair of pliers, carefully squeeze these studs together and push them up through the bumper. Use care when removing these studs as to not damage the locking tabs on the studs. From the top, carefully pull the bumper cover up to gain access to the top of the steel bumper. Do not deform the bumper cover when removing it. Underneath the bumper cover there will be two M16 diameter holes on either side of the bumper cavity. These holes will be utilized for hitch attachment.		
2	Place a M16 Hex socket countersunk head screw down through each of the outer 3/4" holes in the bumper as shown.		
3	Carefully position the hitch against the bottom surface of the bumper so that the previously installed bolts drop through the holes in the hitch. Loosely secure using fasteners as shown.		
4	Using the included fish wire, insert a M12 carriage bolt and spacers into the end of the round inner bumper beam. Pull the bolts out through the holes in the bumper beam as shown. NOTE: Check to see if there is a gap between the bumper beam and the hitch mounting plate. If there is a gap, place the spacer plate between the bumper beam and the hitch mounting plate before installation of the attachment fasteners. If there is not a gap, the spacer plate is not used.		
5	Torque all M16 fasteners to 218 lb-ft. Torque M12 carriage bolts to 58 lb-ft and other M12 fasteners to 86 lb-ft.		
PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!