



Hitch Installation Instruction


REV:20200301

Part#	HT-R33392	Application	For 2018-Up Jeep Wrangler JL
-------	-----------	-------------	------------------------------

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Hex Nuts	4	M12 Flange Nuts	3	Flat washers	4	M12
	2	Hex Bolts	4	M12x1.75-110mm				

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 3500 LBS. TRAILER WEIGHT & 350LBS. TONGUE WEIGHT.
GROSS LOAD CAPACITY WHEN USED AS A WEIGHT DISTRIBUTION HITCH: 4000 LBS. TRAILER WEIGHT & 400LBS. TONGUE WEIGHT
***** DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY. *****

No Drilling Required

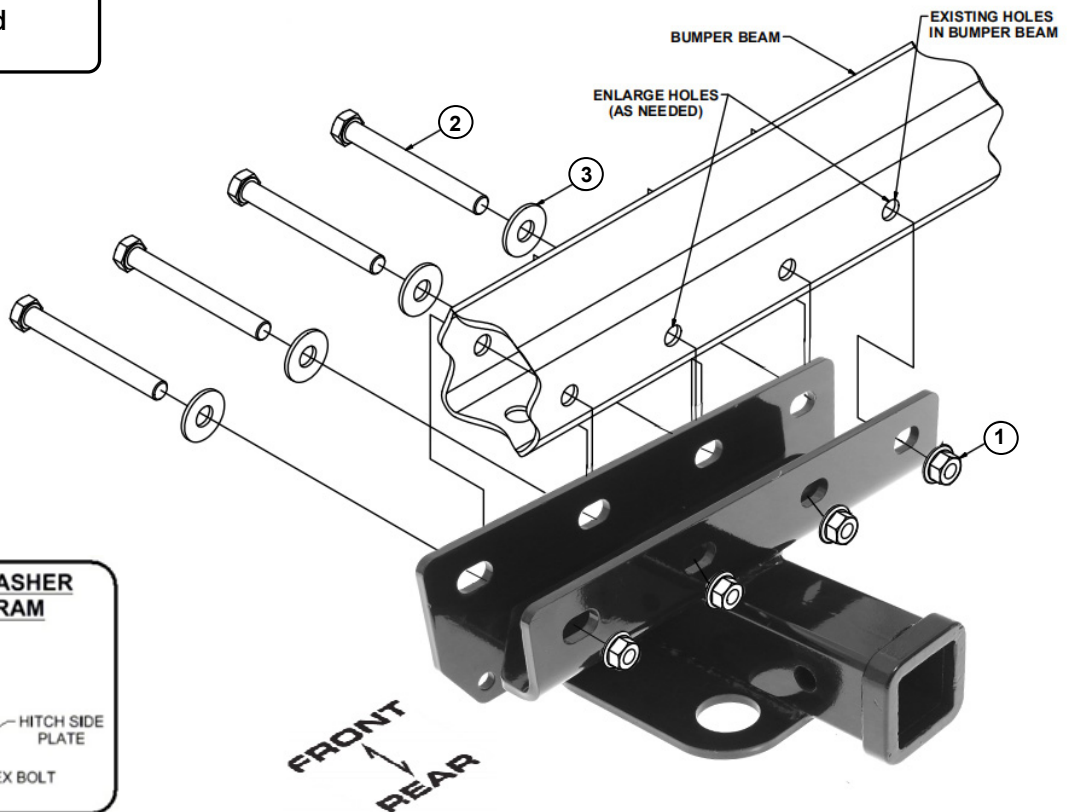

Step	Description
1	Detach the muffler from the rubber muffler hanger and lower the exhaust for ease of installation.
2	Position the hitch over the bumper beam and align the holes of the hitch with holes in the cross member. Note: Some models may have existing bolts attaching a plate with weld nuts on it. The hitch will need to be slid in between the bracket and the mounting tube with the factory hardware reinstalled, securing the hitch.
3	Insert fasteners as shown making sure the flange nuts are installed on the exterior side of the hitch. Some models may require hole enlargement.
4	Tighten all fasteners.
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.	

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!