



Hitch Installation Instruction


REV.20231201

Part#	HT-R36408	Application	For 2009-2012 Suzuki Equator\ 2005-2024 Nissan Frontier
-------	-----------	-------------	---

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Hex bolts	6	M12X1.25-35	2	Conical Washers	6	M12

Gross Load Capacity When Used As A Weight Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.  
Gross Load Capacity When Used As A Weight Distribution Hitch: 8000 LBS. Trailer Weight & 800 LBS. Tongue Weight.  
\*\*\*DO NOT EXCEED VEHICLE MANUFACTURER’S RECOMMENDED TOWING CAPACITY. \*\*\*

No Drilling Required

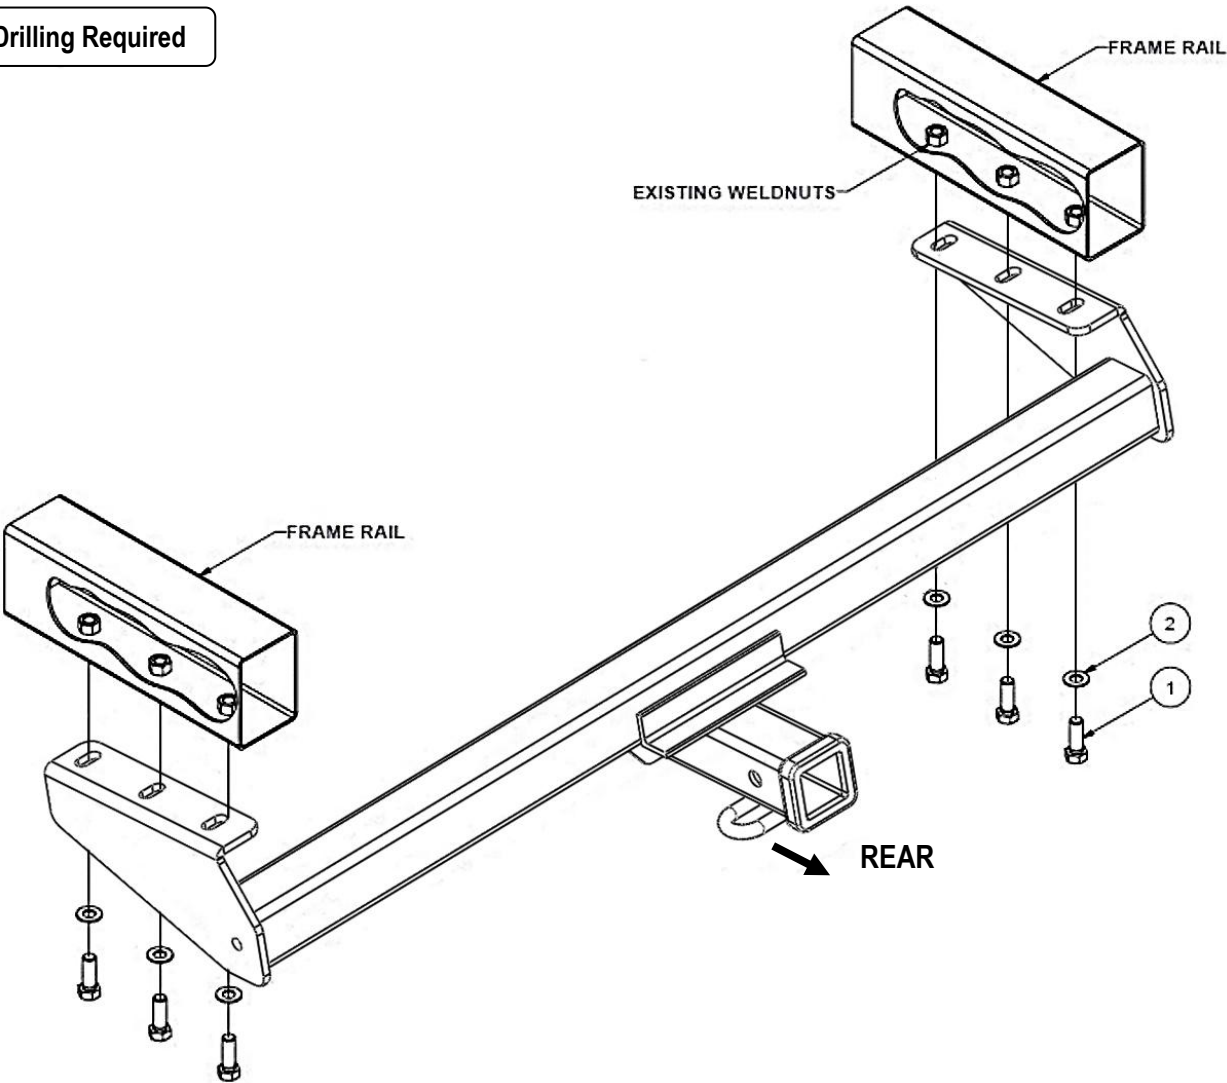

Step	Description
1	Raise hitch into position.
2	Secure with M12 bolts and conical washers into existing weldnuts as shown.
3	Torque all M12 fasteners to 86 ft-lbs.

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!