



Hitch Installation Instruction

REV.20241201


Part#	HT-R30068	Application	For 1999-2017 Honda Odyssey
-------	-----------	-------------	-----------------------------

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1#	Hex Bolts	4	M12X1.25-35	4#	Square Hole Spacer	1	6X22X57-10.5
	2#	Conical Washer	4	M12	5#	Carriage Bolt	1	M10X1.5-35
	3#	Hex Flange Nut	1	M10X1.5	6#	Fish Wire	1	For installing bolts

Gross Load Capacity When Used As A Weight Carrying Hitch: 3500 LBS. Trailer Weight & 350 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight


*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

* Trimming May Be Required


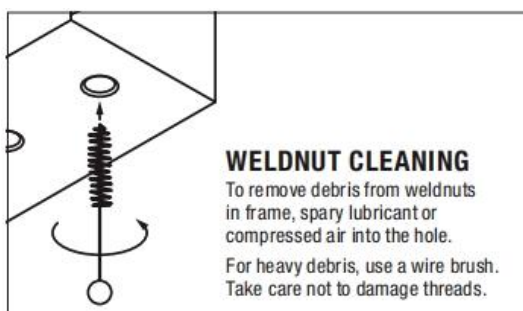


FISHWIRE TECHNIQUE

Insert coiled end of fishwire tool through hitch mounting hole in vehicle frame rail and out the access hole. Pass coiled end of fishwire through spacer and thread bolt into coil. Kink wire to keep spacer separate from bolt as shown. Pull fishwire, spacer and bolt through frame and out mounting hole. Use fishwire to guide hitch during mounting and prevent loss of bolt or spacer inside frame rail.

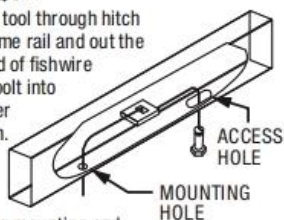

Existing access hole
(location may vary)

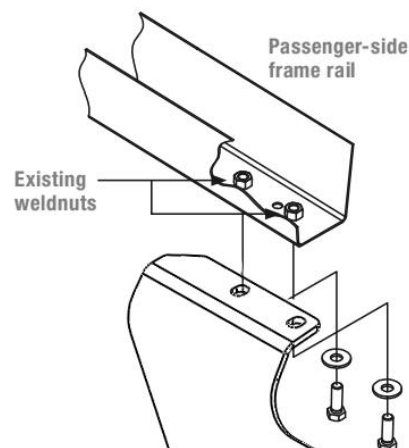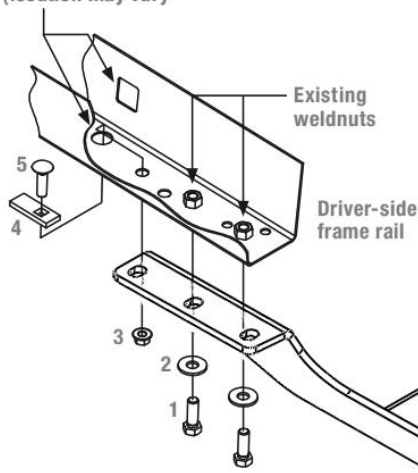

FRONT
↔
REAR




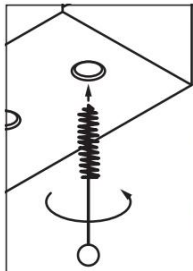



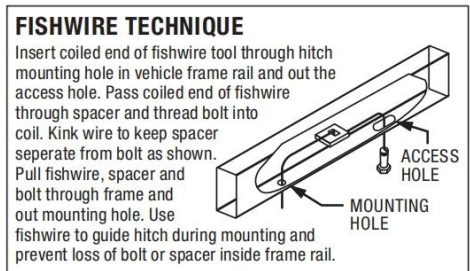
The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instruction

REV.20241201

Part#	HT-R30068	Application	For 1999-2017 Honda Odyssey
-------	-----------	-------------	-----------------------------

Step	Description		
1	<p>If present, remove (5) fasteners and the plastic fascia covering the driver side frame rail.</p> <p>NOTE: You may trim fascia and re-attach after hitch installation.</p>		
2	<p>Locate (2) weldnuts near the end of each frame rail. Clean weldnuts of debris and rust to ease hitch installation.(See weldnut cleaning)</p>		<div><p>WELDNUT CLEANING</p><p>To remove debris from weldnuts in frame, spray lubricant or compressed air into the hole.</p><p>For heavy debris, use a wire brush. Take care not to damage threads.</p></div>
3	<p>Raise the Hitch into position by sliding the passenger side plate over the exhaust first. Secure the hitch into position using M12-1.25 x 35mm bolts and M12 Conical Washers.</p>		
4	<p>On the driver side frame rail fishwire a M10X1.5-35 carriage bolt and spacer through the access hole and into the existing hole in the bottom of the frame rail. Secure with M10 flange nut. (See fishwire technique)</p>		<div><p>FISHWIRE TECHNIQUE</p><p>Insert coiled end of fishwire tool through hitch mounting hole in vehicle frame rail and out the access hole. Pass coiled end of fishwire through spacer and thread bolt into coil. Kink wire to keep spacer separate from bolt as shown. Pull fishwire, spacer and bolt through frame and out mounting hole. Use fishwire to guide hitch during mounting and prevent loss of bolt or spacer inside frame rail.</p></div> 
5	Tighten all fasteners: Torque all M10 hardware to 32 ft-lbs; Torque all M12 hardware to 86 ft-lbs.		
<p>***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.</p>			

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!