



# Hitch Installation Instruction

REV.20240701

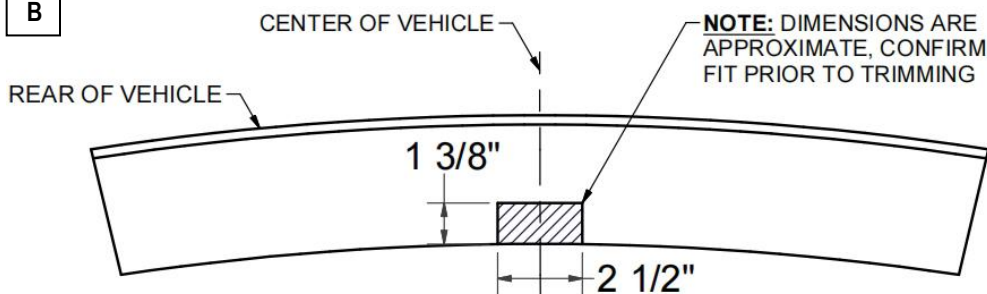
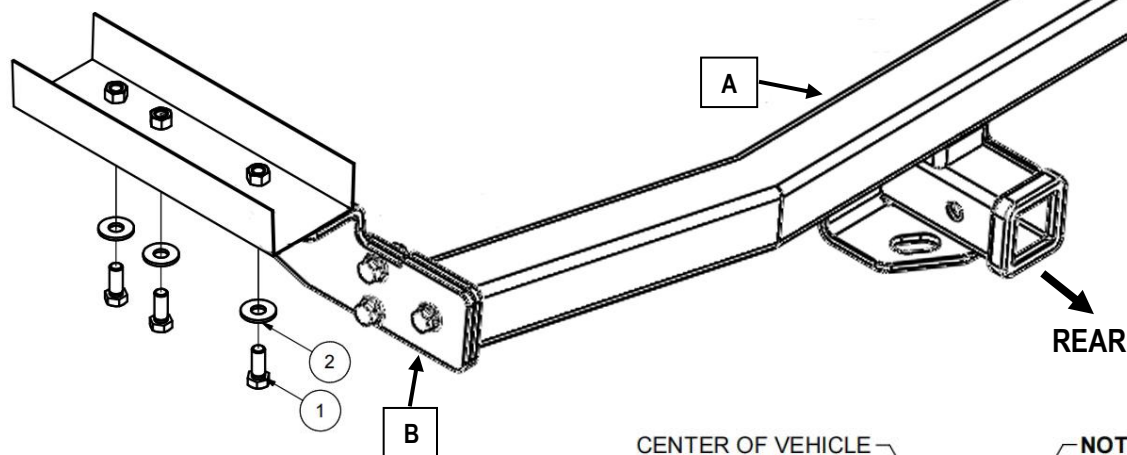
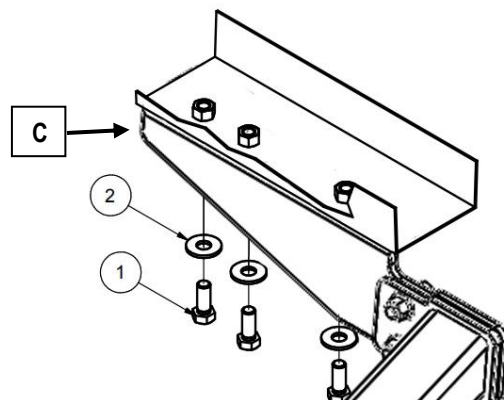
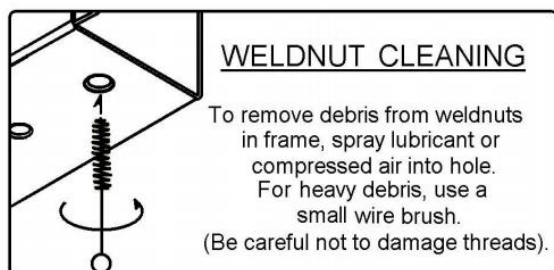
Part#	HT-X30162	Application	For 2013-2016 Nissan Pathfinder / 2014-2020 Infiniti QX60
-------	-----------	-------------	-----------------------------------------------------------

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Hex Bolts	6	M12X1.25-30	2#	Conical Washers	6	M12
HW A (For Hitch Assembly)	3#	Hex Bolts	6	M12X1.75-35	5#	Lock Washers	6	M12
	4#	Flat Washers	10	M12	6#	Hex Flange Nuts	4	M12

Gross Load Capacity When Used As A Weight Carrying Hitch:4000 LBS. Trailer Weight & 600 LBS. Tongue Weight.  
Gross Load Capacity When Used As A Distribution Carrying Hitch:5000 LBS. Trailer Weight & 600 LBS. Tongue Weight.

\*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\*

- \* No Drilling Required
- \* Trimming Required



FASCIA TRIM DIAGRAM







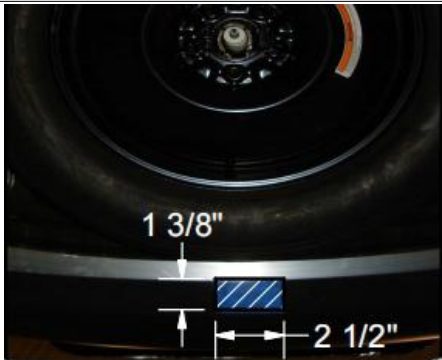

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



# Hitch Installation Instruction

REV.20240701

Part#	HT-X30162	Application	For 2013-2016 Nissan Pathfinder / 2014-2020 Infiniti QX60
-------	-----------	-------------	-----------------------------------------------------------

Step	Description	
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (6) M12X1.75-35mm Hex Bolts, (10) M12 Flat Washers,(6) M12 Lock Washers, (4) M12 Hex Flange Nuts.(Hardware in "HW A").	
2	Remove tow hook from driver side frame rail. Return tow hook and fasteners to vehicle owner.	
		
3	Lower spare tire using tire lug wrench or ratchet with 21mm socket.	
		
4	Remove fascia mounting brackets by first removing plastic clips on bottom of fascia and then unbolting brackets from bumper. Retain for re-installation after hitch installation.	
		
5	Locate center of vehicle fascia and mark area as shown for fascia trimming, approximately 2 1/2" x 1 3/8". Trim fascia.	
		

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



## Hitch Installation Instruction

REV.20240701

Part#	HT-X30162	Application	For 2013-2016 Nissan Pathfinder / 2014-2020 Infiniti QX60
-------	-----------	-------------	-----------------------------------------------------------

6	<p>Raise hitch into position and secure with M12 x 1.25 x 30mm hex bolts and conical toothed washers into existing weldnuts. Torque all M12 fasteners to 86 ft-lbs.</p> <p>Reinstall fascia mounting brackets.</p>		
			
7	<p>Raise spare tire back into position. Installation is complete.</p>		
			
<p><b>***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight &amp; All Structural Components Are Sound.</b></p>			

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!