



Hitch Installation Instruction

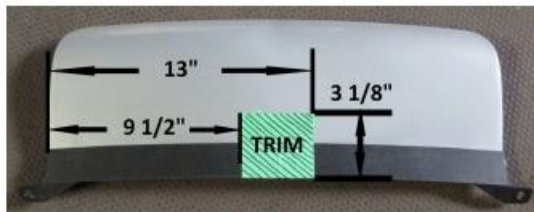
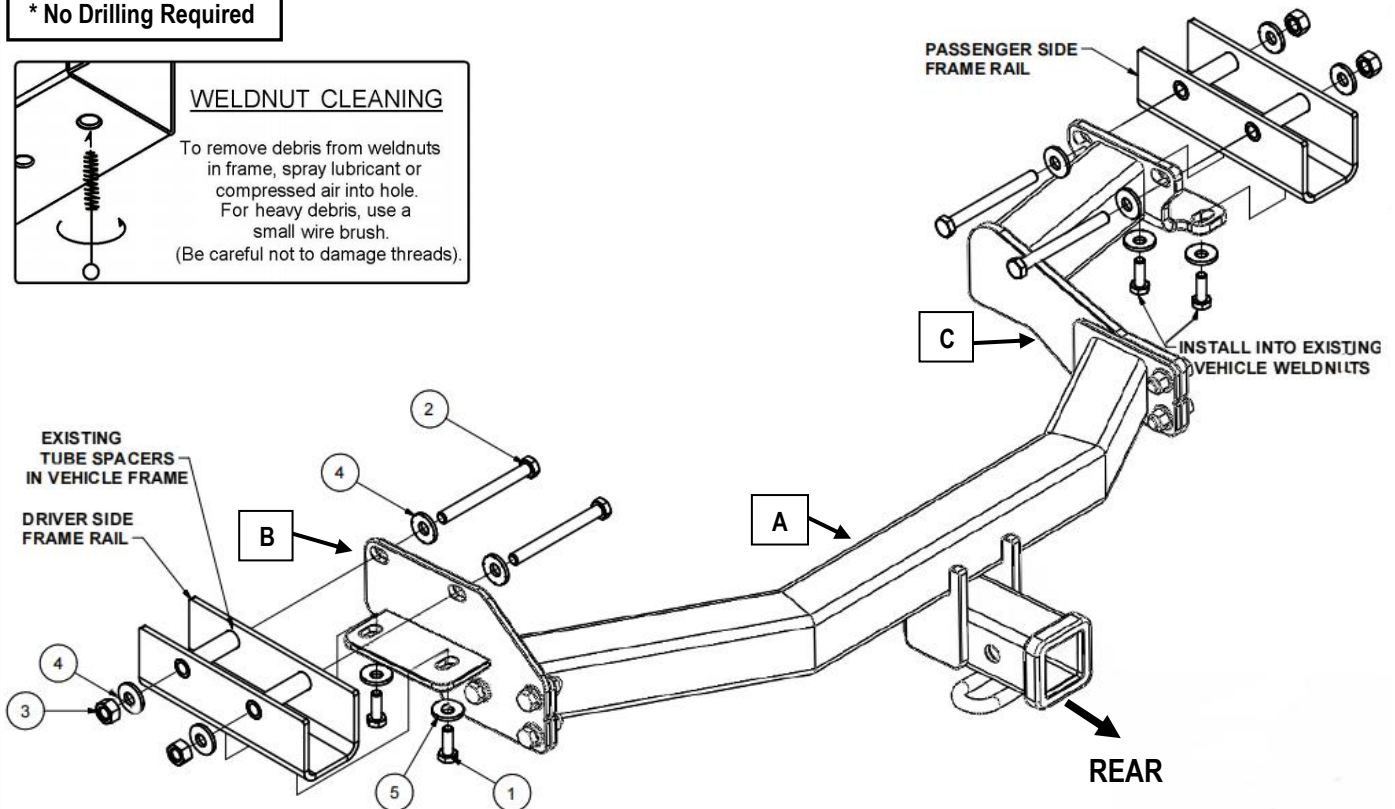
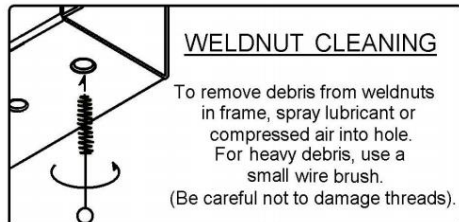
REV.20250101

Part#	HT-X30420	Application	For 2020-2024 Kia Telluride All
-------	-----------	-------------	---------------------------------

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Hex Bolts	4	M10X1.25-30	4#	Conical Washers	8	M12
	2#	Hex Bolts	4	M12X1.75-120	5#	Conical Washers	4	M10
	3#	Hex Nuts	4	M12X1.75				
HW A (For Hitch Assembly)	6#	Hex Bolts	6	M12X1.75-40	8#	Lock Washers	6	M12
	7#	Flat Washers	10	M12	9#	Hex Nuts	4	M12X1.75

Gross Load Capacity When Used As A Weight Carrying Hitch: 5000 LBS. Trailer Weight & 750 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 6000 LBS. Trailer Weight & 750 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

- * Trimming Required
- * No Drilling Required









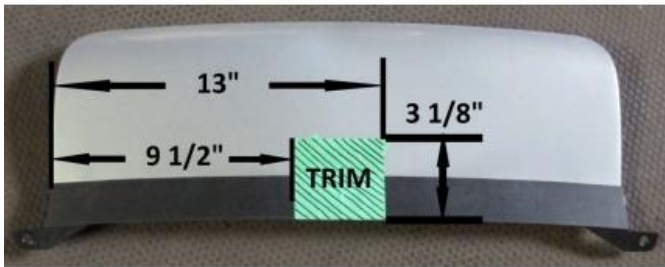

BUMPER COVER TRIM DIAGRAM

DIMENSIONS ARE FOR REFERENCE ONLY - TRIM AS NEEDED

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instruction

Part#	HT-X30420	Application	For 2020-2024 Kia Telluride All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (6) M12X1.75-40mm Hex Bolts, (10) M12 Flat Washers, (6) M12 Lock Washers, (4) M12 Hex Nuts.(Hardware in "HW A").		
2	Lower spare tire with 11mm socket and ratchet. Place spare off to the side.		
			
3	Remove the driver side underbody panel by removing (3) push clips and turning (2) plastic retainers counterclockwise with a 14mm socket.		
			
4	Unhook the (4) rearward most exhaust isolators to lower the exhaust. NOTE: be sure to support exhaust.		
			
5	Using a tape measure, mark the lower bumper cover as shown in the diagram below and trim as needed to allow clearance for the hitch.		
	 BUMPER COVER TRIM DIAGRAM DIMENSIONS ARE FOR REFERENCE ONLY - TRIM AS NEEDED		
			

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instruction

Part#	HT-X30420	Application	For 2020-2024 Kia Telluride All
6	Raise hitch into position over exhaust and loosely install fasteners as shown on page 2.		
<div></div> <div></div>			
7	Torque all 12mm fasteners to 86 lb-ft and all 10mm fasteners to 48 lb-ft.		
8	Reinstall underbody panel, raise spare tire back into position and reinstall the exhaust isolators.		
<div></div> <div></div>			
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instruction here is for your reference only. We strongly recommend the professional installer for best result.
We are not responsible for any damage caused by the installation. Thank you for choosing our product!