



Hitch Installation Instruction







REV.20250101

Part#	HT-X30486	Application	For 2022-2024 Hyundai Santa Cruz All
-------	-----------	-------------	--------------------------------------

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	#1	Hex Bolts	6	M12X1.25-40	#2	Conical Washers	6	M12
HW A (For Hitch Assembly)	#3	Hex Bolts	6	M12-35	#5	Lock Washers	6	M12
	#4	Flat Washers	10	M12	#6	Hex Nuts	4	M12

Gross Load Capacity When Used As A Weight Carrying Hitch: 5000 LBS. Trailer Weight & 750 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.


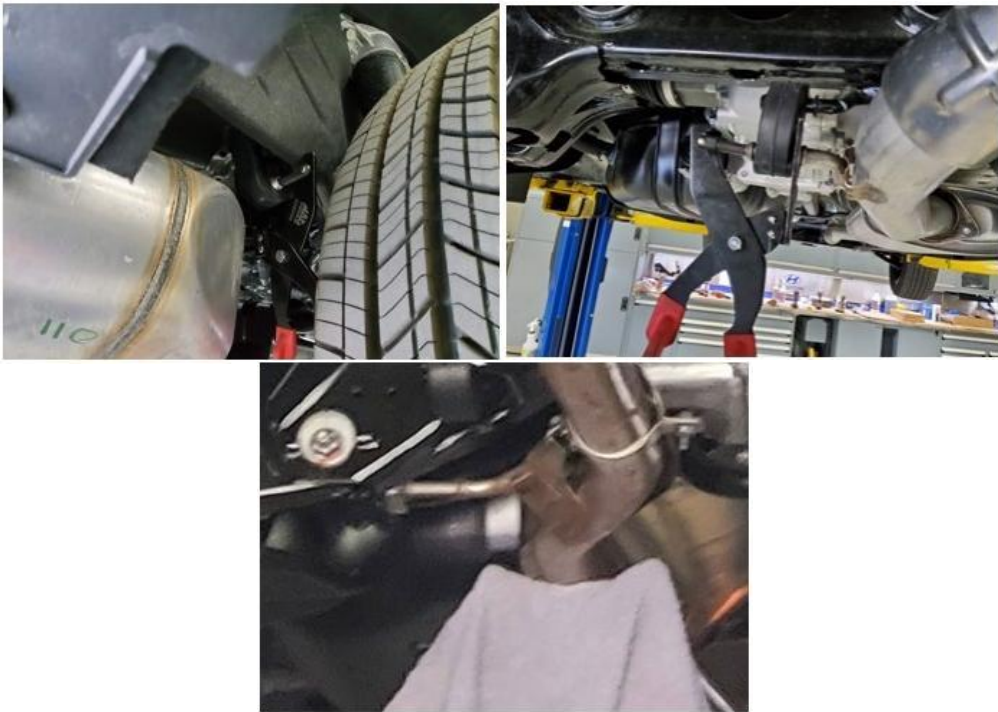
- * Trimming Required
- * No Drilling Required

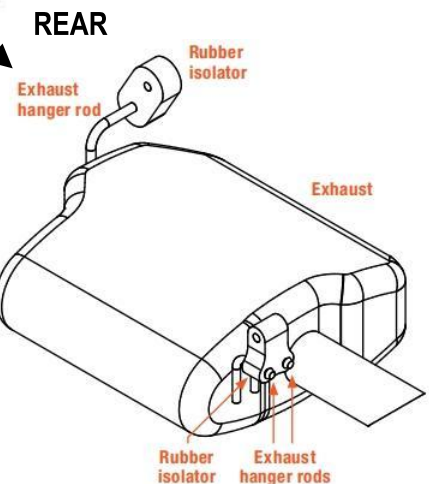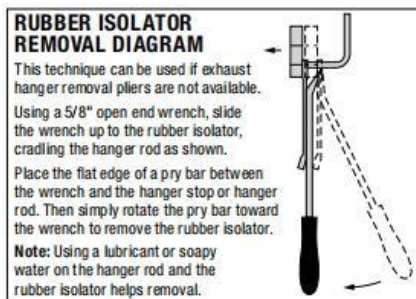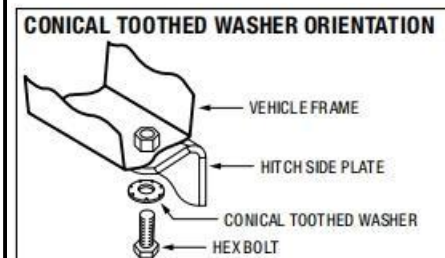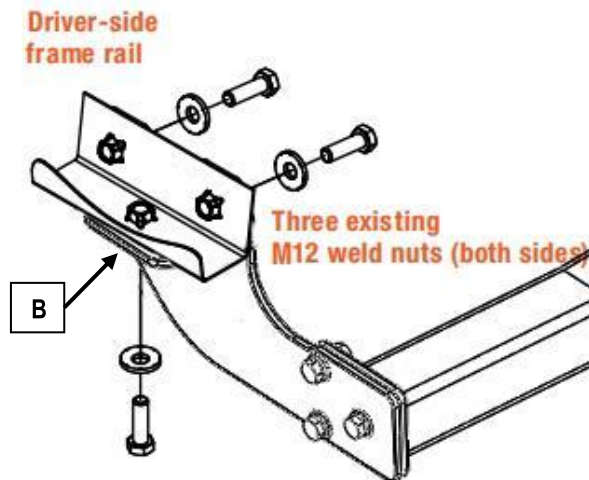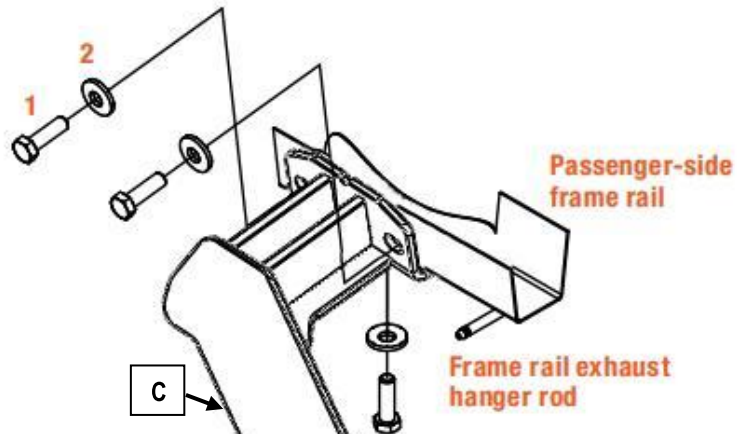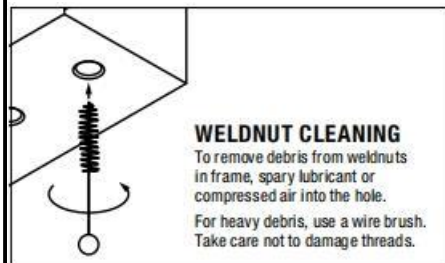

The instruction here is for your reference only. We strongly recommend the professional installer for best result.














Hitch Installation Instruction

Part#	HT-X30486	Application	For 2022-2024 Hyundai Santa Cruz All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (6) M12-35mm Hex Bolts, (10) M12 Flat Washers, (4) M12 Hex Nuts, (6) M12 Lock Washers.(Hardware in "HW A").		
2	Loosen the spare tire carrier nut using a 3/8" socket. Lower the spare tire and set aside for reinstallation in Step 3.		
			
3	Lower the exhaust by removing the three rearmost rubber holders from the exhaust hangers. Use a stand to support the exhaust and prevent any damage. The exhaust will be reinstalled in Step 3.		
			
4	<p>Raise the trailer hitch into position by sliding the passenger side of the hitch over the exhaust first. On both sides of the vehicle,align the three holes in the hitch with the three weld nuts in the frame rail.</p> <p>Loosely install three flange bolts (#1) with the 1/2" conical-toothed washers (#2) into the hitch holes and weld nuts on both sides.</p> <p>Torque all M12 fasteners to 60 ft-lbs.</p> <p>Note: Use torque adapter for ease of installation.Reinstall spare tire and exhaust removed in Steps 2 and 3.</p> <p>Note: After installation, inspect the hitch and exhaust to make sure there is adequate clearance. If additional clearance is needed between the hitch and exhaust, remove the rearmost rubber isolator from the frame-rail exhaust hanger rod down approximately five degrees using a box end wrench as shown. Reinstall the rubber isolator.</p>		



Hitch Installation Instruction

Part#	HT-X30486	Application	For 2022-2024 Hyundai Santa Cruz All
          			
<p>***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.</p>			