

# Installation Instructions for IA20SJF0

by APS Auto Parts Specialist Inc.


**Application:** For 2000-2006 Toyota Tundra Extended Cab  
**Estimated Time:** 1 to 2 hours



The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

**PARTS LIST:**

Item	QTY	Description	Item	QTY	Description
#1	2	Driver Front Mounting Bracket(DFM/PFM)	#7	16	ST6x25 Self Tapping Screw
#2	6	Center/Rear Mounting Brackets	#8	8	2-Hole Support Bracket
#3	8	M8 x1.25-20mm Hex Bolts	#9	16	M10X1.5-75 Carriage Bolts
#4	2	Driver/ Passenger Side Bar	#10	16	M10 Flat Washers
#5	16	M8 Flat Washers	#11	16	M10 Lock Washers
#6	8	M8 Nylon Lock Nuts	#12	16	M10 Hex Nuts

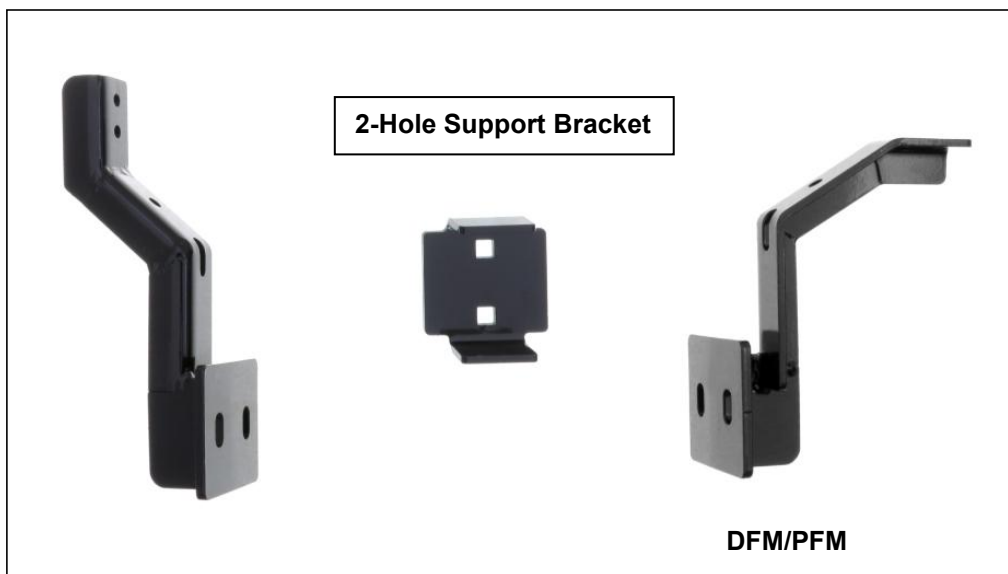

**PROCEDURE:**

1. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED.
2. Drill 5/16" holes in pinch weld as show **(See Fig 1)**.
3. Attach mounting brackets as shown **(See Fig 2,3,4 and 5)**.
4. Select the Driver Side Bar. Slip (2) M10X1.5-75 Carriage Bolts into each 2-Hole Support Brackets ,and insert the 2-Hole support bracket into the Driver Side Bar.**(Fig 6)**. Carefully position the Bar onto the (4) Mounting Brackets. **IMPORTANT:** Do not slide the Bar on the Brackets or damage to the finish may result. Attach the Driver Side Bar to the Mounting Brackets with (2) M10 Hex Nuts,(2)M10 lock washers and (2)M10 flat washers, **(Fig 7)**. Do not tighten hardware.
5. Level and adjust the Bar properly and tighten all hardware. **NOTE: Torque all M10 X1.5-75 Carriage Bolts to 29~33 lb-ft.**
6. Repeat Step 2-5 for the other side installation.
7. Installation completed!!! **(See Fig 8)**
8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

Products have a high quality finish that must be cared for like any other exposed finish on the vehicle. Protect the finish with a non-abrasive automotive wax, (e.g.Pure Carnauba ) on a regular basis. The use of any soap, polish or wax that contains an abrasive is detrimental, as the compounds scratch the finish and open it to corrosion.

### Driver/Passenger Side Installation Pictured

