



iBoard® Series

INSTALLATION INSTRUCTIONS

PART#: IB-P222Y&H

BEFORE INSTALLATION

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED. THANK YOU FOR CHOOSING OUR PRODUCT!

These instructions are provided for reference only. We strongly recommend installation by a professional installer for the best results. We are not responsible for any damage caused during installation.

***ROCKER PANEL MOUNT**

***NO DRILLING REQUIRED**

Torque Value


Fastener Size	Tightening Torque (ft-lbs)	Required
6mm	6-7	X
8mm	16-18	√
10mm	31-32	X
12mm	56-58	X
14mm	92-94	X



Scan for
Installation Video

Mounting Bracket List			
Item	QTY	Bracket Label	Description
1#	6	DFM	Mounting Brackets for Driver Front/Center/Passenger Front/Center
2#	1	DRM	Mounting Bracket for Driver Rear
3#	1	PRM	Mounting Bracket for Passenger Rear
4#	1	DRB	Bar Brackets for Driver Rear
5#	1	PRB	Bar Brackets for Passenger Rear

PART LIST

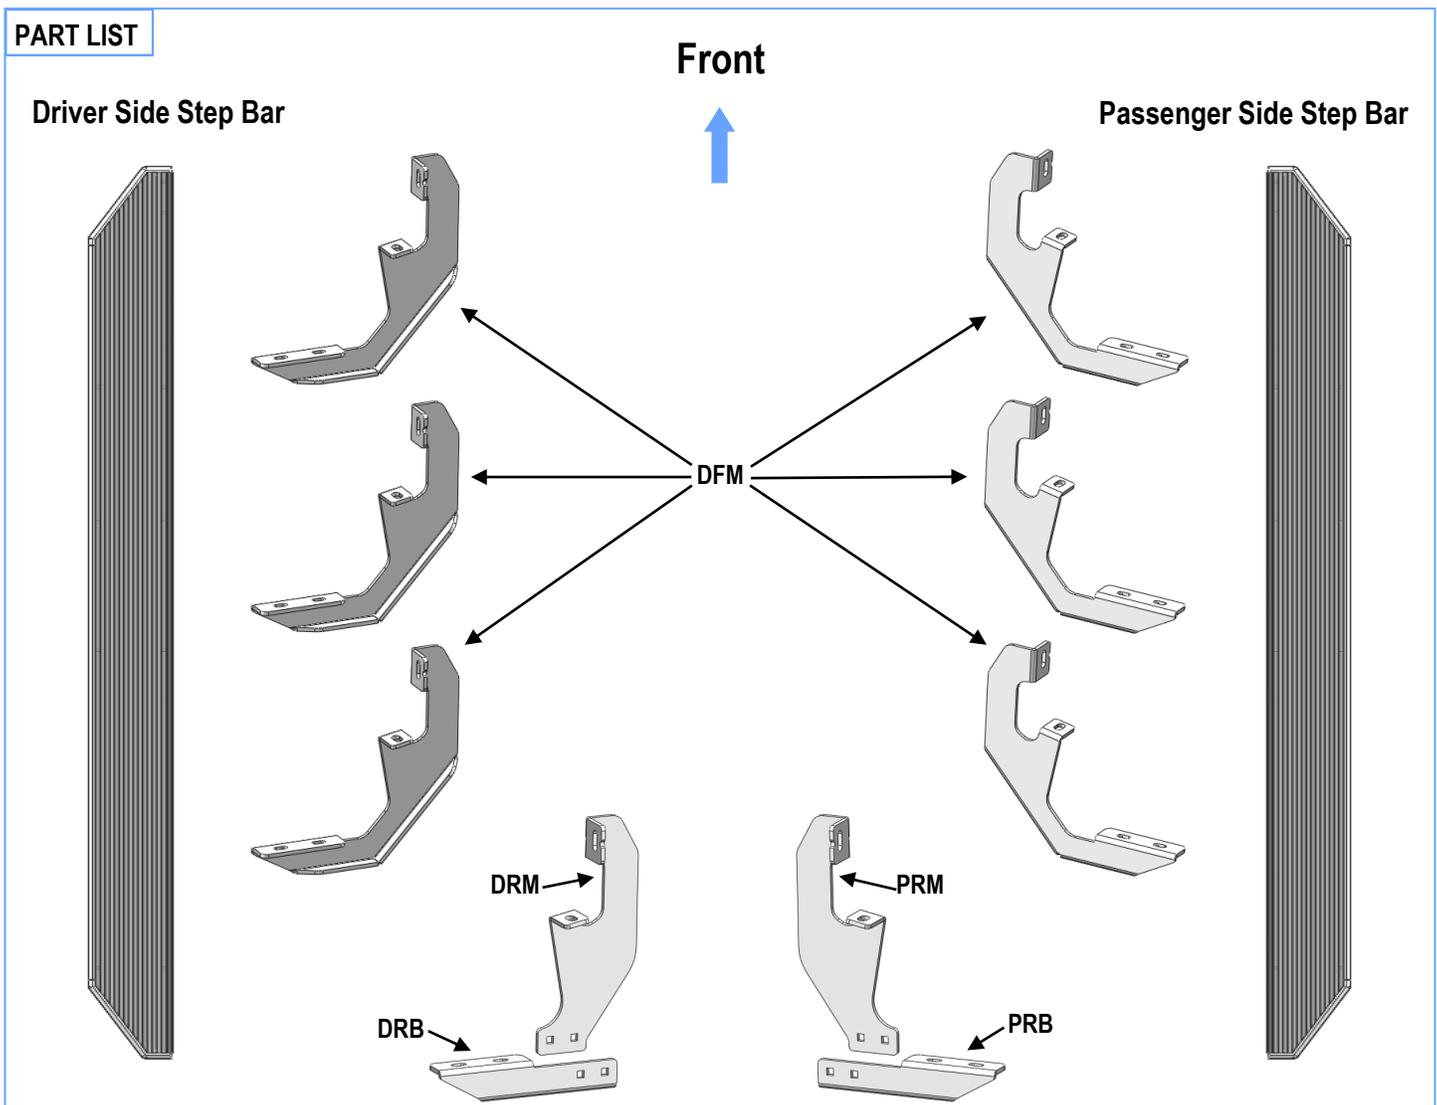



Scan for
Installation Video

Hardware Package A (For Bracket Installation)					
Item	QTY	Description	Item	QTY	Description
A1	16	M8X1.25-30mm Hex Bolts	A4	4	M8X1.25-25 Carriage Bolts
A2	16	M8 Large Flat Washers	A5	4	M8 Flat Washers
A3	16	M8 Lock Washers	A6	4	M8X1.25 Nylon Lock Nuts




A1



A2



A3



A4



A5



A6

Hardware Package B (For Step Bar Installation)					
Item	QTY	Description	Item	QTY	Description
B1	16	M8X1.25-35mm Carriage Bolts	B3	16	M8 Nylon Lock Nuts
B2	16	M8 Large Flat Washers	B4	8	Sliders (Packed with Mounting Brackets)



B1



B2



B3



B4




STEP 1: Assemble Passenger Rear Mounting Bracket

Assemble the Passenger Rear Mounting Bracket (**PRM**) and Passenger Rear Bar Bracket (**PRB**) (**Figs 1&2**) by using:

- (2) A1 (M8X1.25-35mm Carriage Bolts)
- (2) A2 (M8 Flat Washers)
- (2) A3 (M8 Nylon Lock Nuts).

NOTE: Don't fully tighten at this time.

(2) A4 (M8X1.25-35 Carriage Bolts)
(2) A5 (M8 Flat Washers)
(2) A6 (M8 Nylon Lock Nuts)

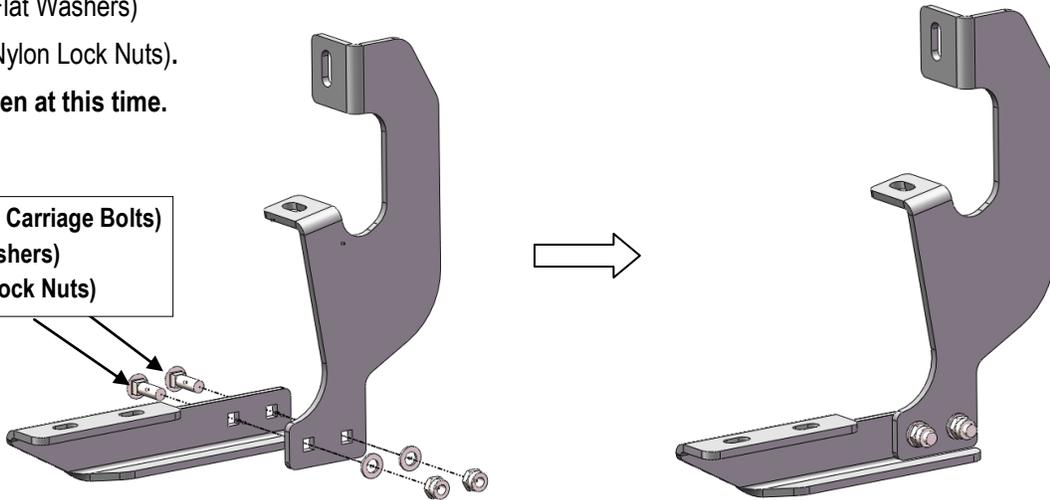


(Fig1):Passenger Rear Mounting Bracket Installation


(Fig 2):Passenger Rear Mounting Bracket Installed

STEP 2: Locate Passenger Side Mounting Positions

- Identify the passenger side mounting position along the inner side of the vehicle (**Figs 3-6**).
- Remove plastic plugs or factory hex bolts from the mounting positions if equipped (**Figs 3**).

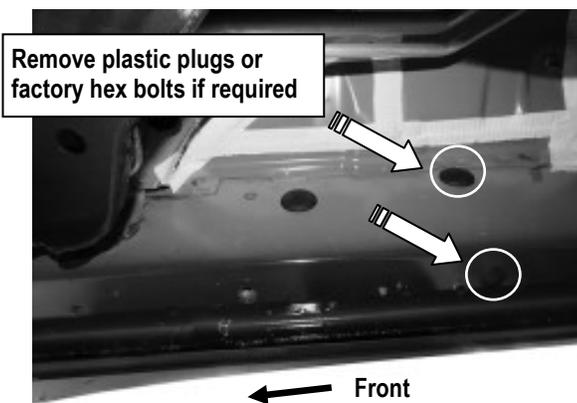


(Fig 3) Passenger Side Front Mounting Position

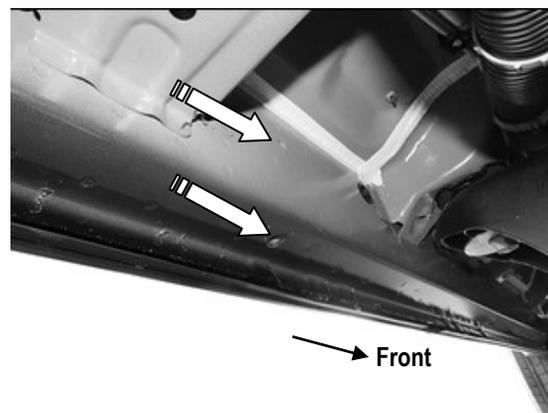

(Fig 4) Passenger 2nd Mounting Bracket Position



(Fig 5) Passenger 3rd Mounting Bracket Position

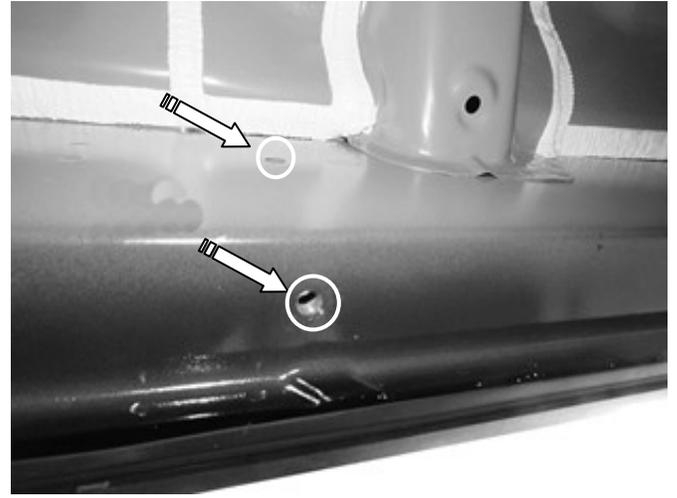


(Fig 6) Passenger Rear Mounting Bracket Position

STEP 3: Install Passenger Front Mounting Bracket

Start installing from Passenger Side Front Mounting Position (Fig 3), Select and attach (1) DFM Mounting Bracket to the factory threaded holes (Fig 7) with:

- (2) M8X1.25-30mm Hex Bolts
- (2) M8 Large Flat Washers and
- (2) M8 Lock Washers

NOTE: * All (6) DFM Mounting Brackets are universal for:
Driver Front/Center and Passenger Side Front/Center.
* Don't fully tighten hardware at this time.

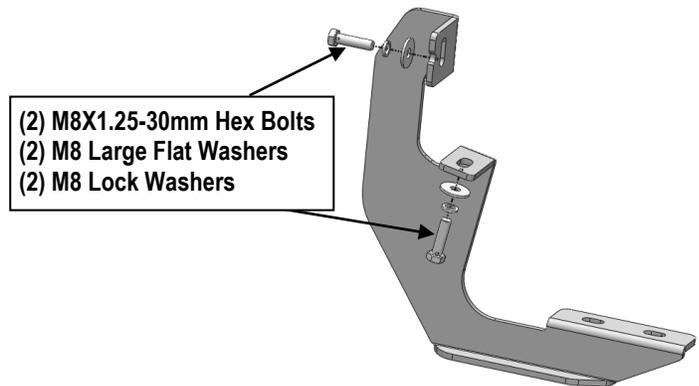

(Fig 7) Passenger Front Mounting Bracket Installation

STEP 4: Install The Other Passenger Mounting Brackets

- Move to Passenger 2nd, 3rd and rear Mounting locations, (Figs 4-6).
- Repeat **Step3** to install the Passenger Side 2nd, 3rd and rear Mounting Brackets.

NOTE: Don't fully tighten hardware at this time.




STEP 5: Passenger Side Step Bar Installation

Once all (4) Passenger side mounting brackets are installed, then proceed to the Step Bar installation. (Figs 8& 9)


1. Select (1) B4 (Slider) and (2) B1 (M8X1.25-35mm Carriage Bolts);
2. Install (2) B1 (M8X1.25-35mm Carriage Bolts) in (1) B4 (Slider).
3. Slide the Slider (with carriage bolts) to the Step Bar.
4. Repeat to install the other (3) sliders to the step bar.
5. Attach the Step Bar (with the Sliders) onto the installed mounting brackets. Position the Sliders to the installed brackets. Secure the Step Bar to the installed Brackets by using (8) B2 (M8 Large Flat Washers) and (8) B3 (M8 Nylon Lock Nuts) and (4) B4 (Sliders), (Fig 9). Do not fully tighten hardware at this time.

Note: The Sliders are packed with the Mounting Brackets.

Level and adjust the Step Bar and fully tighten all hardware.

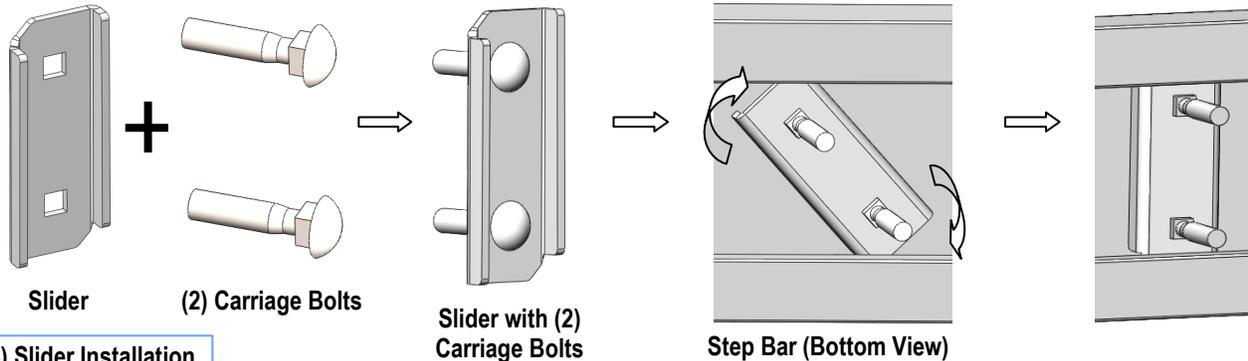

(Fig 8) Slider Installation

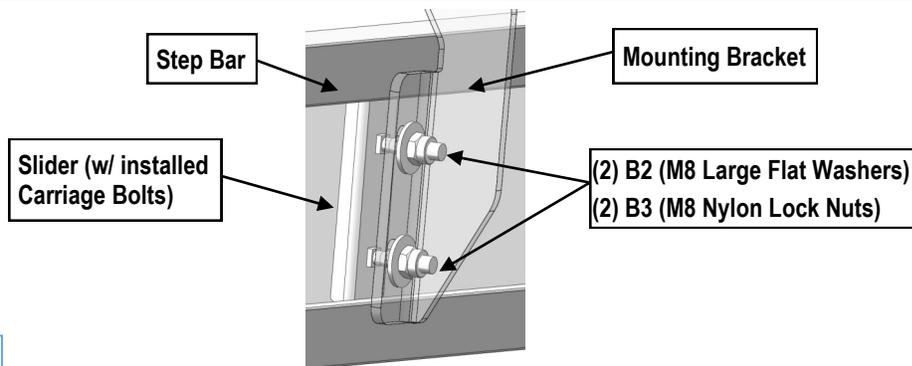

(Fig 9) Step Bar Installation



STEP 4: The Other Side Step Bar Installation

Repeat Steps 1-5 for the other side Step Bar installation. And then installation is completed!!!

Attention

**Do periodic inspections to the installation to make sure that all hardware is secure and tight.
In order to protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.**