


# iRunning Board Installation Instruction

**Application:** 2009-2012 Honda Pilot  
2009-2013 Acura MDX

REV: 20170601

Item	Part Name	QTY	Item	Part Name	QTY
1	Running Boards (Driver+ Passenger)	2	8	M8 Lock Washers	12
2	Front Mounting Bracket Driver Side	1	9	M8 Flat Washers	6
3	Front Mounting Bracket Passenger Side	1	10	M6 Square Head Bolt	12
4	Rear Mounting Bracket Driver Side	2	11	M6 Nylon Lock Nuts	12
5	Rear Mounting Bracket Passenger Side	2	12	M8 Wire Nuts	2
6	M8X1.25-25mm Hex Bolt	12	13	M6 Flat Washers	12
7	M8 Flat Washers	12			

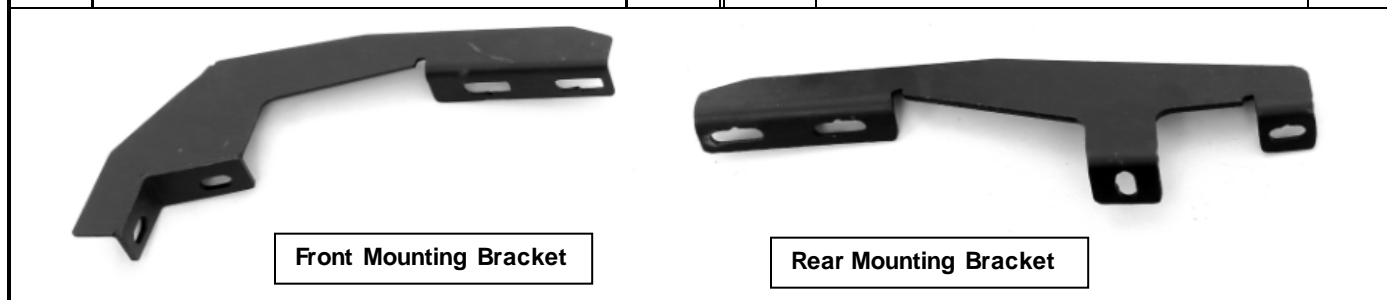

Step	Description
1	Verify all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.
2	Starting from the drivers side of the vehicle, behind the front wheel locate the two threaded holes located in the rocker panel of the vehicle. Take the drivers side front mounting bracket and attach to the threaded holes using (2) M8 hex head bolts, (2) M8 lock washers, and (2) M8 flat washers. <b>(FIG 1)</b> . Do not fully tighten at this time.
3	Move to the center of the vehicle and locate the two threaded holes in the vehicle see fig 2, attach the drivers side center rear mounting bracket to the threaded holes using (2) M8 hex head bolts, (2) M8 lock washers, and (2) M8 flat washers <b>(FIG 2)</b> . Do not fully tighten at this time.
4	Move to the rear of the vehicle, there will be one threaded hole in the frame. Next take (1) M8 wire nut and place it through the large hole located in the frame <b>(FIG 3)</b> . Attach the rear mounting bracket to the threaded hole in the frame and the wire nut using (2) M8 hex head bolts, (2) M8 lock washers, and (2) M8 flat washers. Do not fully tighten at this time.
5	Next take the driver side running board and place it on the running board brackets Attach the running board to the mounting brackets by sliding the M6 square head bolts in the groves in the running boards (2)M6 square head bolts will be used per mounting bracket attach using (2) M6 flat washers, and (2) M6 Nylon nuts <b>(FIG 4)</b> . Do not fully tighten at this time.
6	Align and adjust step bar as needed, <b>(NOTE : if needed the extra M8 washers are used as spacer shims for the brackets)</b> then tighten all hardware at this time. Torque all M8 hardware to 25-30 ft lbs, and M6 to 25 ft lbs.
7	Repeat steps 1-6 for passenger side. <b>Installation Completed.</b>

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

# iRunning Board Installation Instruction

Application: 2009-2012 Honda Pilot  
2009-2013 Acura MDX

REV: 20170601

## CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER



FIG 1

The M8 nut will be attached here

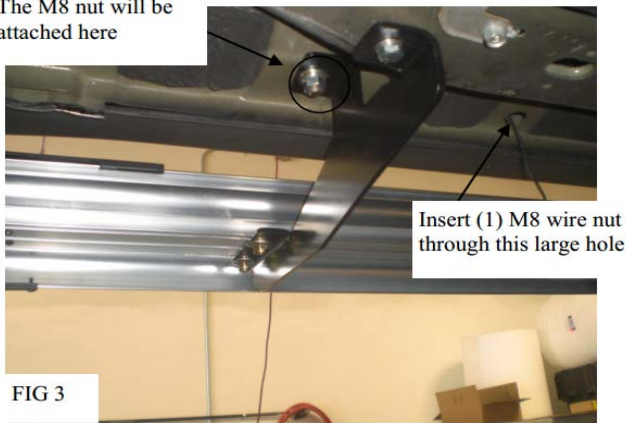


FIG 3

Insert (1) M8 wire nut through this large hole



FIG 2

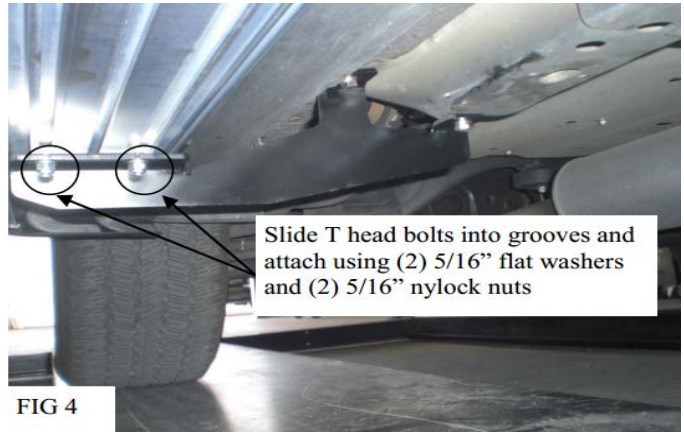


FIG 4

Slide T head bolts into grooves and attach using (2) 5/16" flat washers and (2) 5/16" nylock nuts



**\*Pictures are for reference only, actual bars may be a little different.**

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!