



**PART#: IB-P973Y&H**

## iBoard® Series




READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

\*ROCKER PANEL MOUNT  
\*NO DRILLING REQUIRED

Fastener Size	Tightening Torque (ft-lbs)	Required
6mm	6-7	X
8mm	16-18	√
10mm	31-32	X
12mm	56-58	X
14mm	92-94	X

### PART LIST




#### Driver Side Step Bar

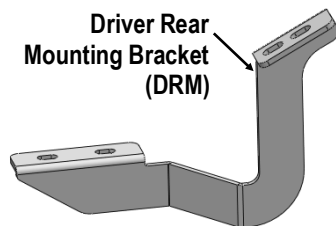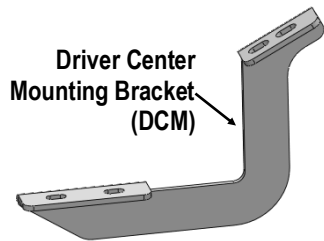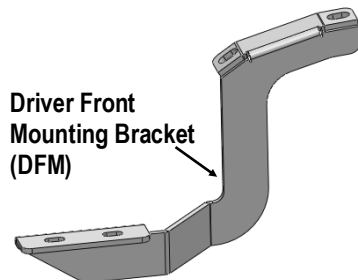

Front



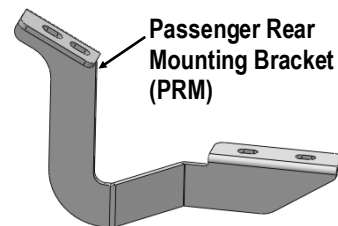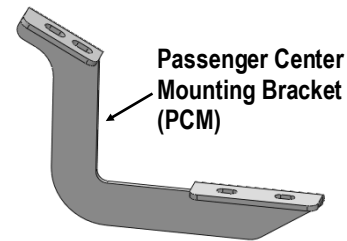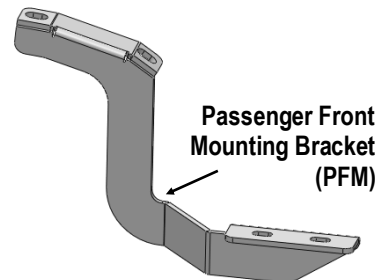


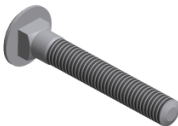



#### Passenger Side Step Bar





Scan for  
Installation Video

Hardware Package A (For Bracket Installation)					
Item	QTY	Description	Item	QTY	Description
1#	12	M8X1.25-30mm Hex Bolts	3#	12	M8 Lock Washers
2#	12	M8 Large Flat Washers			
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p>1#</p> </div> <div style="text-align: center;">  <p>2#</p> </div> <div style="text-align: center;">  <p>3#</p> </div> </div>					


Hardware Package B (For Step Bar Installation)					
Item	QTY	Description	Item	QTY	Description
1#	12	M8X1.25-35mm Carriage Bolts	3#	12	M8 Nylon Lock Nuts
2#	12	M8 Large Flat Washers	4#	6	Sliders (Packed with Mounting Brackets)
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p>1#</p> </div> <div style="text-align: center;">  <p>2#</p> </div> <div style="text-align: center;">  <p>3#</p> </div> <div style="text-align: center;">  <p>4#</p> </div> </div>					



Scan for  
Installation Video

## STEP 1


Start installation from the passenger side front of the vehicle, remove the existing (2) factory bolts located by the front tire opening securing the factory rocker panel bracket to the vehicle, **(Fig 1)**.

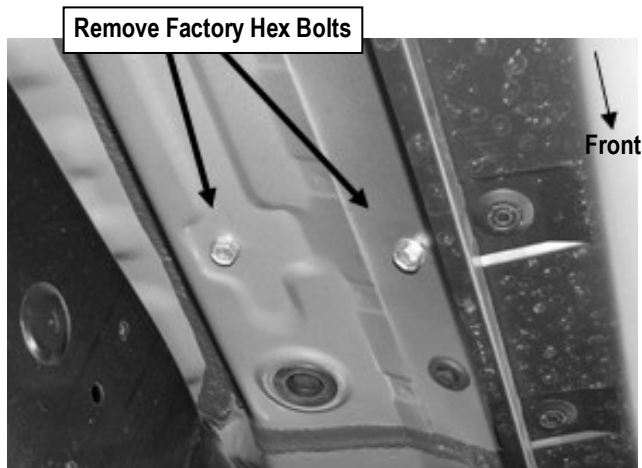

**(Fig 1) Passenger Side Front Mounting Location**

## STEP 2

Select the Passenger Front Mounting Bracket (**PFM**), attach the bracket to the vehicle by using the included (2) M8x1.25-30mm Hex Bolts, (2) M8 Lock Washers and (2) M8 Flat Washers, **(Fig 2)**. Do not fully tighten hardware at this time.

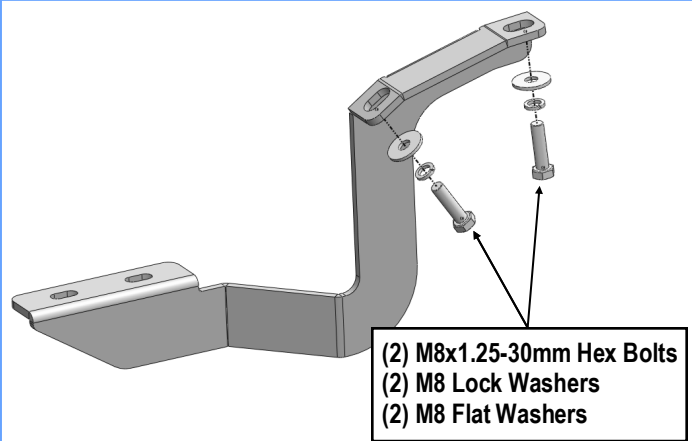


**(Fig 2) Passenger Front Mounting Bracket Installation**



**(Fig 3) Passenger Side Rear Mounting Location**

## STEP 3

Move along the side panel to the Driver Side Center and Rear Mounting Locations, **(Fig 3)**. Repeat **Steps 1 & 2** to install the Mounting Brackets, **(Fig 4)**.

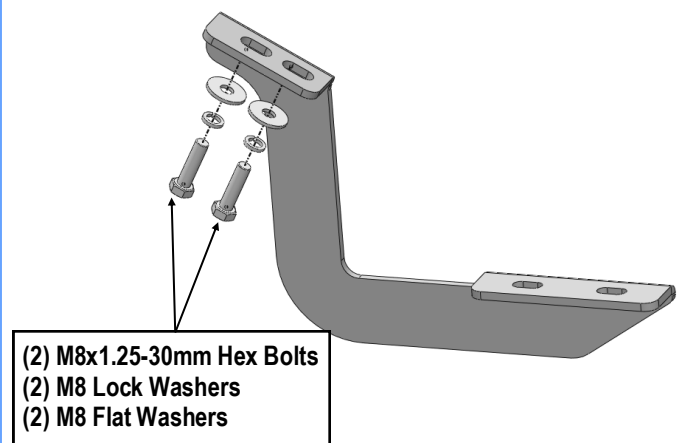

**(Fig 4) Passenger Center Mounting Bracket Installation**



## STEP 4

Once all (3) Passenger side mounting brackets are installed, then proceed to the Step Bar installation. **(Figs 5 & 6)**

- (1) Select (1) Slider and (2) M8X1.25-35mm Carriage Bolts;
- (2) Install (2) M8X1.25-35mm Carriage Bolts in (1) Slider.
- (3) Slide the Slider (with carriage bolts) to the **Step Bar**.
- (4) Repeat to install the other (2) sliders to the step bar.
- (5) Attach the Step Bar (with the Sliders) onto the installed mounting brackets. Position the Sliders to the installed brackets. Secure the Step Bar to the installed Brackets by using (6) M8 Large Flat Washers and (6) M8 Nylon Lock Nuts and (3) Sliders, **(Fig 6)**. Do not fully tighten hardware at this time.

**Note:** The Sliders are packed with the Mounting Brackets.


Level and adjust the Step Bar and fully tighten all hardware.

Repeat **Steps 1-4** for the other side Step Bar installation. **The installation is completed!!!**


### Attention

**Do periodic inspections to the installation to make sure that all hardware is secure and tight.**

**In order to protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.**

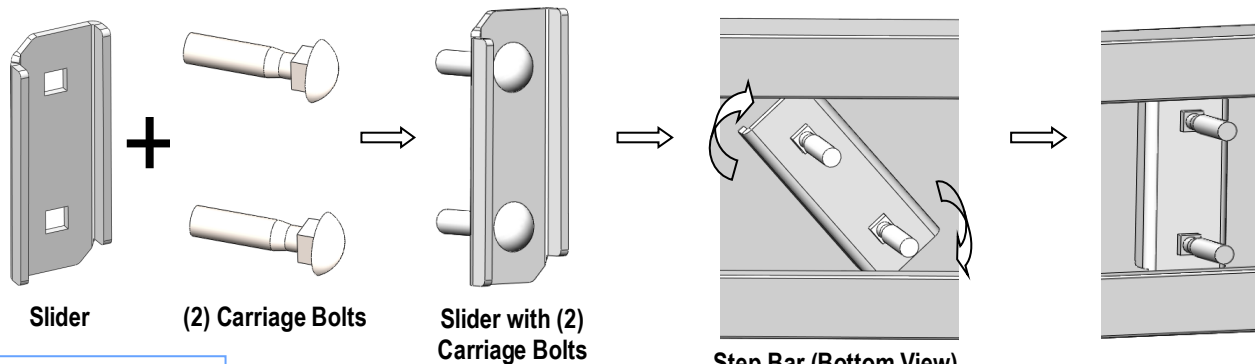

**(Fig 5) Slider Installation**

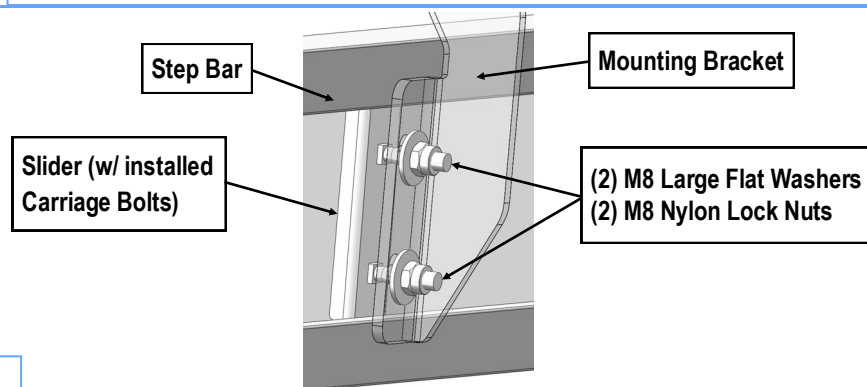

**(Fig 6) Step Bar Installation**