

iBoard®



Scan for
Installation Video


iBoard® by APS

PART#: IB-R101

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

*ROCKER PANEL MOUNT
*NO DRILLING REQUIRED

Fastener Size	Tightening Torque (ft-lbs)	Required
6mm	6-7	√
8mm	16-18	√
10mm	31-32	X
12mm	56-58	X
14mm	92-94	X

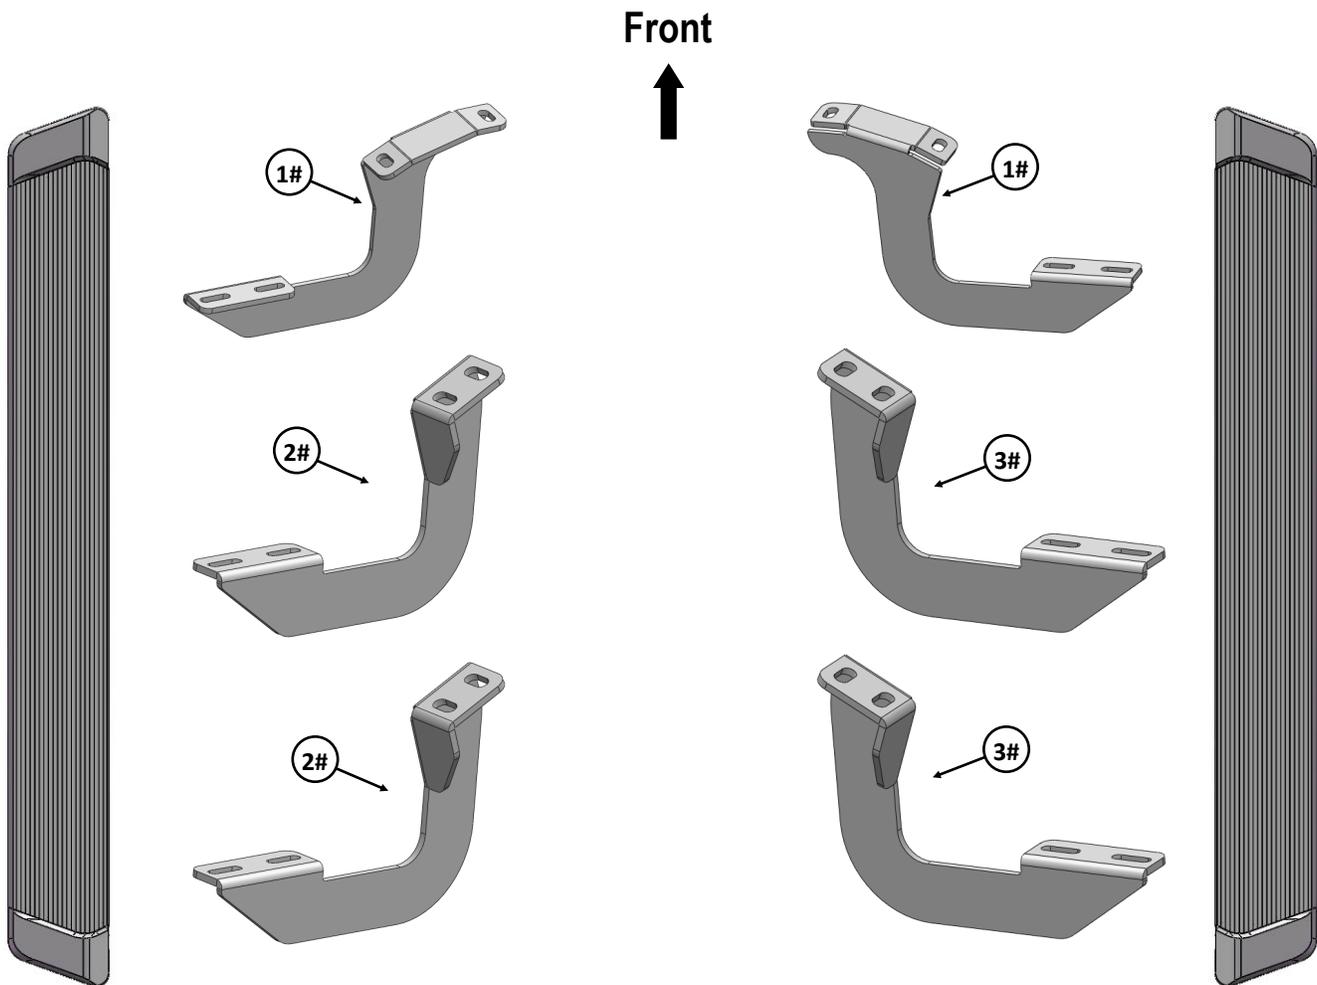

Customer Support: info@iboardauto.com



Mounting Bracket List					
Item	QTY	Description	Item	QTY	Description
1#	2	Driver / Passenger Front Mounting Brackets	3#	2	Passenger Center / Rear Mounting Brackets
2#	2	Driver Center / Rear Mounting Brackets			

Hardware Package A (For Bracket Installation)					
Item	QTY	Description	Item	QTY	Description
1#	12	M8X1.25-40mm Hex Bolts	3#	12	M8 Lock Washers
2#	12	M8 Large Flat Washers			



1#



2#



3#

Hardware Package B (For Step Bar Installation)					
Item	QTY	Description	Item	QTY	Description
1#	12	M6X1-20mm Square Head Bolts	3#	12	M6 Nylon Lock Nuts
2#	12	M6 Large Flat Washers			



1#



2#




3#




STEP 1

Start installation from the Driver Side Front of the vehicle. Remove the (2) factory hex bolts or plastic plugs from the threaded holes at the bottom of the body panel, (Figs 1 & 2).

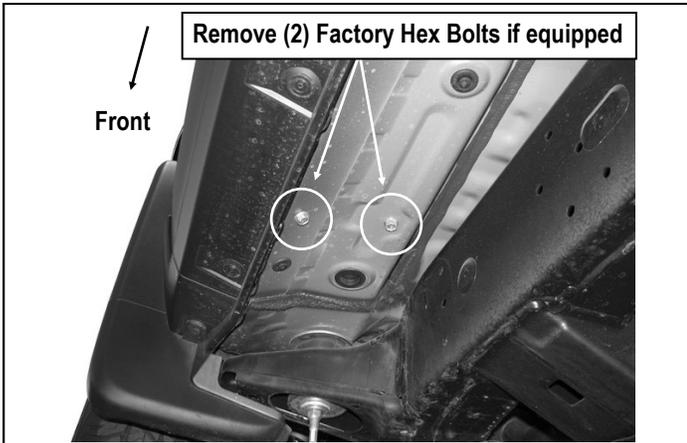


(Fig 1) Driver Side Front Mounting Location

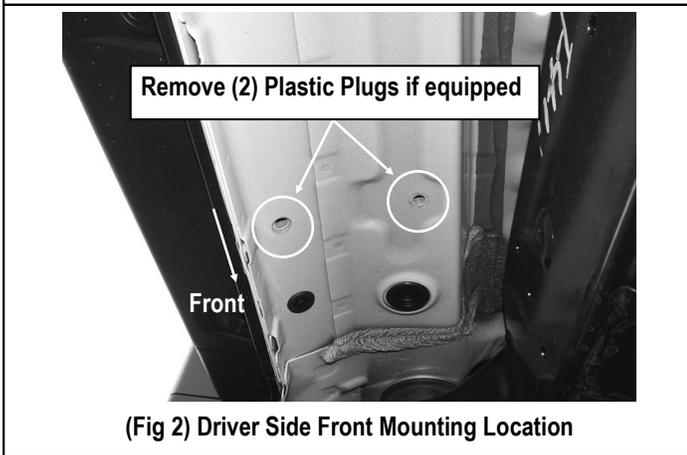

(Fig 2) Driver Side Front Mounting Location

STEP 2


Select (1) Driver Front Mounting Bracket. Line up the mounting holes of the Bracket with the threaded holes on the body panel. Bolt the Driver Front Mounting Bracket to the vehicle using the included (2) M8X1.25-40mm Hex Bolts, (2) M8 Lock Washers and (2) M8 Large Flat Washers, (Fig 3). Do not fully tighten hardware at this time.

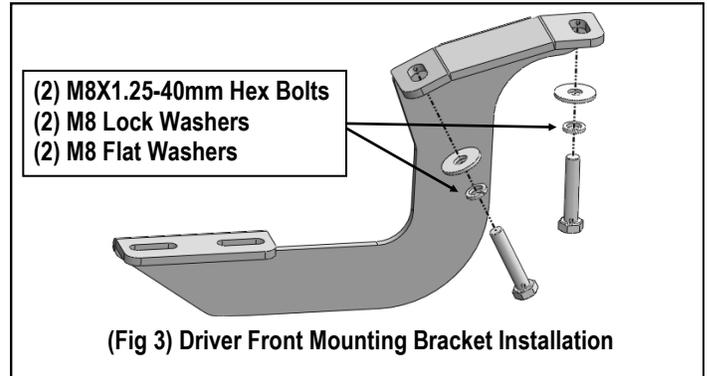

(Fig 3) Driver Front Mounting Bracket Installation

STEP 3

Move to the Driver Side Center & Rear Mounting Locations, (Fig 4). Repeat Steps 1-2 to bolt the Driver Center/Rear Mounting Brackets to the factory threaded holes. Do not fully tighten hardware at this time.

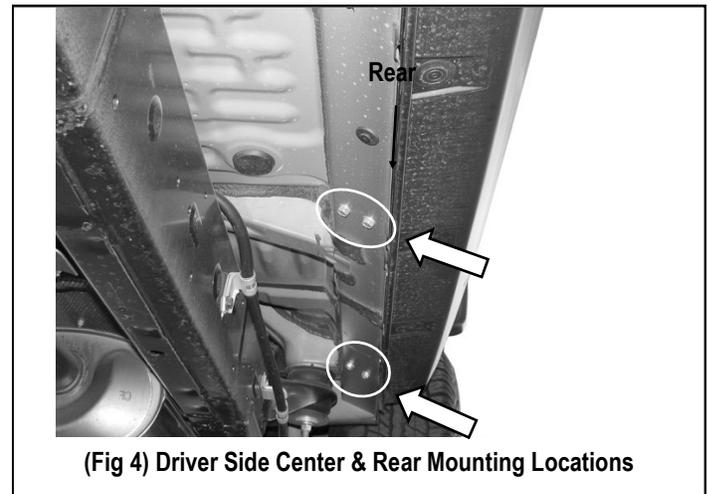

(Fig 4) Driver Side Center & Rear Mounting Locations


STEP 4

Once all (3) mounting brackets are installed. Select a Running Board. Slide (3) M6X1-20mm Square Head Bolts into each bottom channel (Fig 5). Carefully position the Running Board onto the (3) Mounting Brackets. Attach the Running Board to each Mounting Bracket with (2) M6X1-20mm Square Head Bolts, (2) M6 Large Flat Washers and (2) M6 Nylon Lock Nuts (Fig 6). Do not fully tighten at this time.

IMPORTANT: Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged.




M6X1-20mm Square Head Bolts

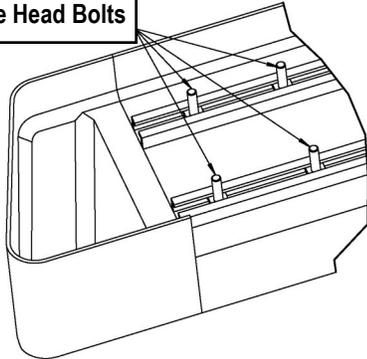

(Fig 5) Slide M6X1-20mm Square Head Bolts Into The Bottom Channels

- (2) M6X1-20mm Square Head Bolts
- (2) M6 Large Flat Washers
- (2) M6 Nylon Lock Nuts

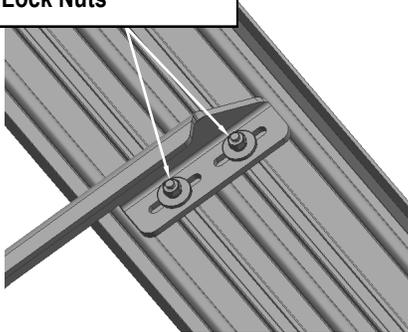

(Fig 6) Running Board Installed Onto Mounting Bracket

STEP 5

Level and adjust the Running Board and fully tighten all hardware.

Important: Please follow the recommended Tightening Torques shown in the table on page 1. Don't over tighten, or the nuts/bolts will be damaged.

STEP 6

Repeat **Steps 1-5** for the other side Running Board installation. The installation is completed .

Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.