

iBoard[®]

iBoard[®] by APS


PART#: IB-R012

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

*ROCKER PANEL MOUNT
*NO DRILLING REQUIRED

Fastener Size	Tightening Torque (ft-lbs)	Required
6mm	6-7	√
8mm	16-18	√
10mm	31-32	X
12mm	56-58	X
14mm	92-94	X

Item	QTY	Description	Item	QTY	Description
1#	2	Driver / Passenger Front Mounting Brackets	5#	16	M6X1-20mm Square Head Bolts
2#	6	Mounting Brackets	6#	16	M6 Large Flat Washers
3#	2	M8X1.25-30mm Hex Flange Bolts	7#	16	M6 Nylon Lock Nuts
4#	6	M8 Hex Flange Nuts			



3 #



4 #



5 #



6 #












7 #

iBoard®

Driver

Front

Passenger

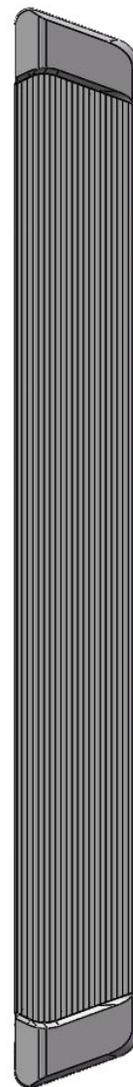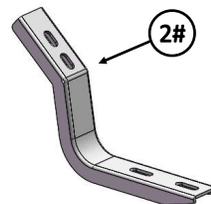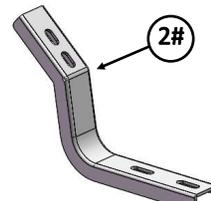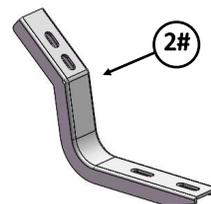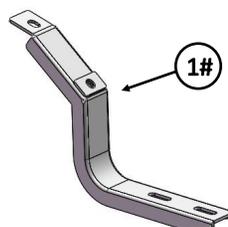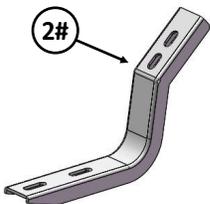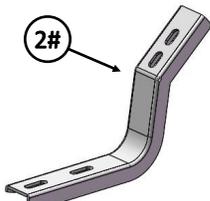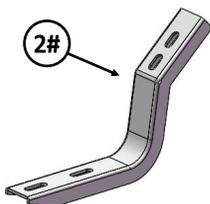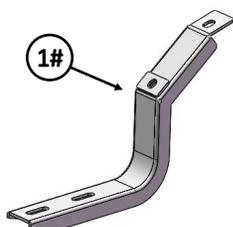

iBoard®

STEP 1

Starting on the driver side front of the vehicle, (**Fig 1**). Remove existing bolts as shown, (**Fig 1**).

Select the Driver Front Mounting Bracket, install with (1) M8X1.25-30mm Hex Flange Bolt and (1) Existing Bolt, (**Fig 2**). Do not fully tighten hardware at this time.


Note: Driver & Passenger Front Mounting Bracket are universal.

STEP 2


Next, move to the driver side 2nd & 3rd & 4th mounting locations, (**Fig 1**). Repeat **Step 1** to remove existing bolts as shown, (**Fig 1**).

Select (1) Mounting Bracket, attach the Mounting Bracket with (1) M8 Hex Flange Nut and (1) Existing Bolt, (**Fig 3**). Do not fully tighten hardware at this time.


Note: (6) Mounting Brackets are universal.

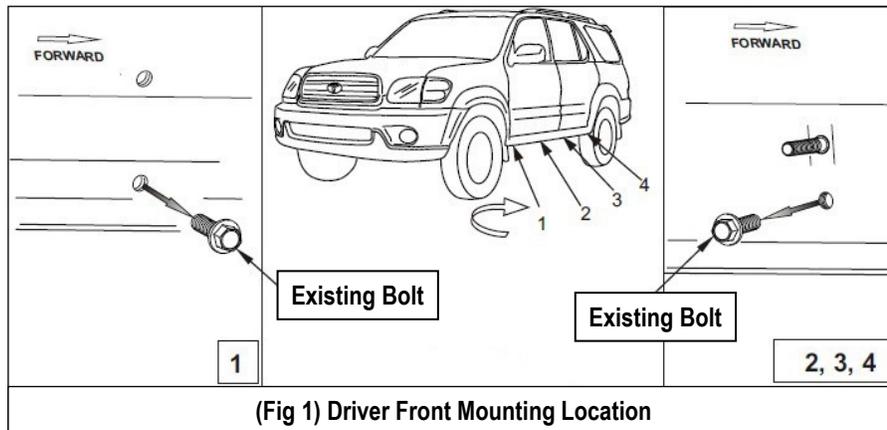

(Fig 1) Driver Front Mounting Location

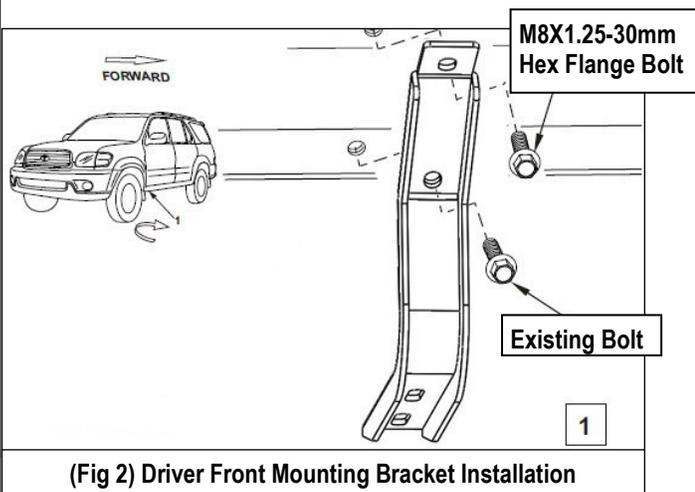

(Fig 2) Driver Front Mounting Bracket Installation

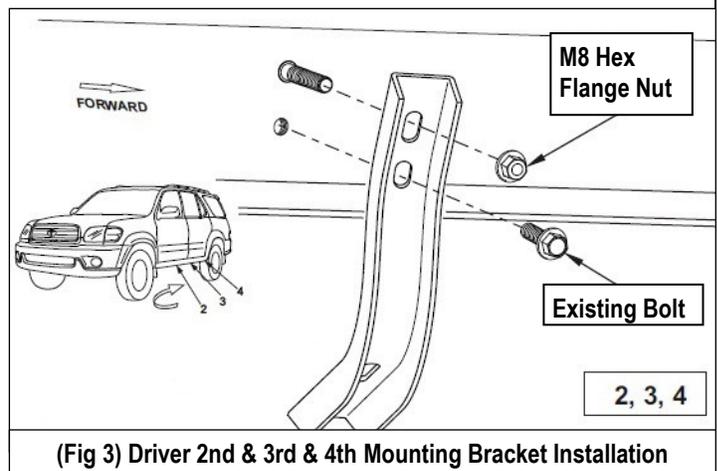

(Fig 3) Driver 2nd & 3rd & 4th Mounting Bracket Installation


iBoard®

STEP 3

Select a Running Board. Slip (4) M6x1-20mm Square Head Bolts into each bottom channel, (**Fig 4**). Carefully position the Running Board onto the (4) Mounting Brackets.


IMPORTANT: Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged. Attach the Running Board to each Mounting Bracket with (2) M6x1-20mm Square Head Bolts, (2) M6 Large Flat Washers and (2) M6 Nylon Lock Nuts, (**Fig 5**). Do not fully tighten at this time.

M6X1-20mm Square Head Bolts

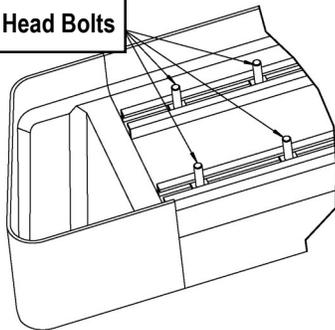

(Fig 4) Slip M6X1-20mm Square Head Bolts Into The Bottom Channels

(2) M6X1-20mm Square Head Bolts
(2) M6 Large Flat Washers
(2) M6 Nylon Lock Nuts

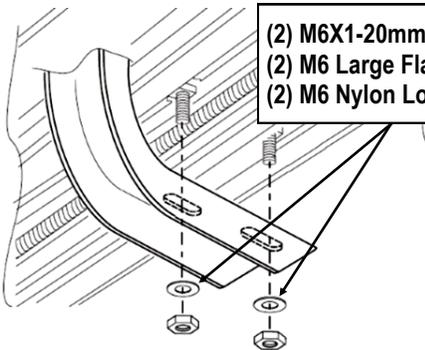

(Fig 5) Running Board Installed Onto Mounting Bracket

STEP 4

Level and adjust the Running Board and fully tighten all hardware.

Important: Please follow the recommended Tightening Torques shown in the table on page 1. Don't over tighten, or the nuts/bolts will be damaged.

STEP 5

Repeat **Steps 1-4** for the other side Running Board installation. The installation is completed.

Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use only mild soap/non-abrasive products for cleaning.