

# iBoard®

## iBoard® by APS


PART#: IB-R056

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

\*ROCKER PANEL MOUNT  
\*NO DRILLING REQUIRED

Fastener Size	Tightening Torque (ft-lbs)	Required
6mm	6-7	√
8mm	16-18	√
10mm	31-32	X
12mm	56-58	X
14mm	92-94	X

### PART LIST

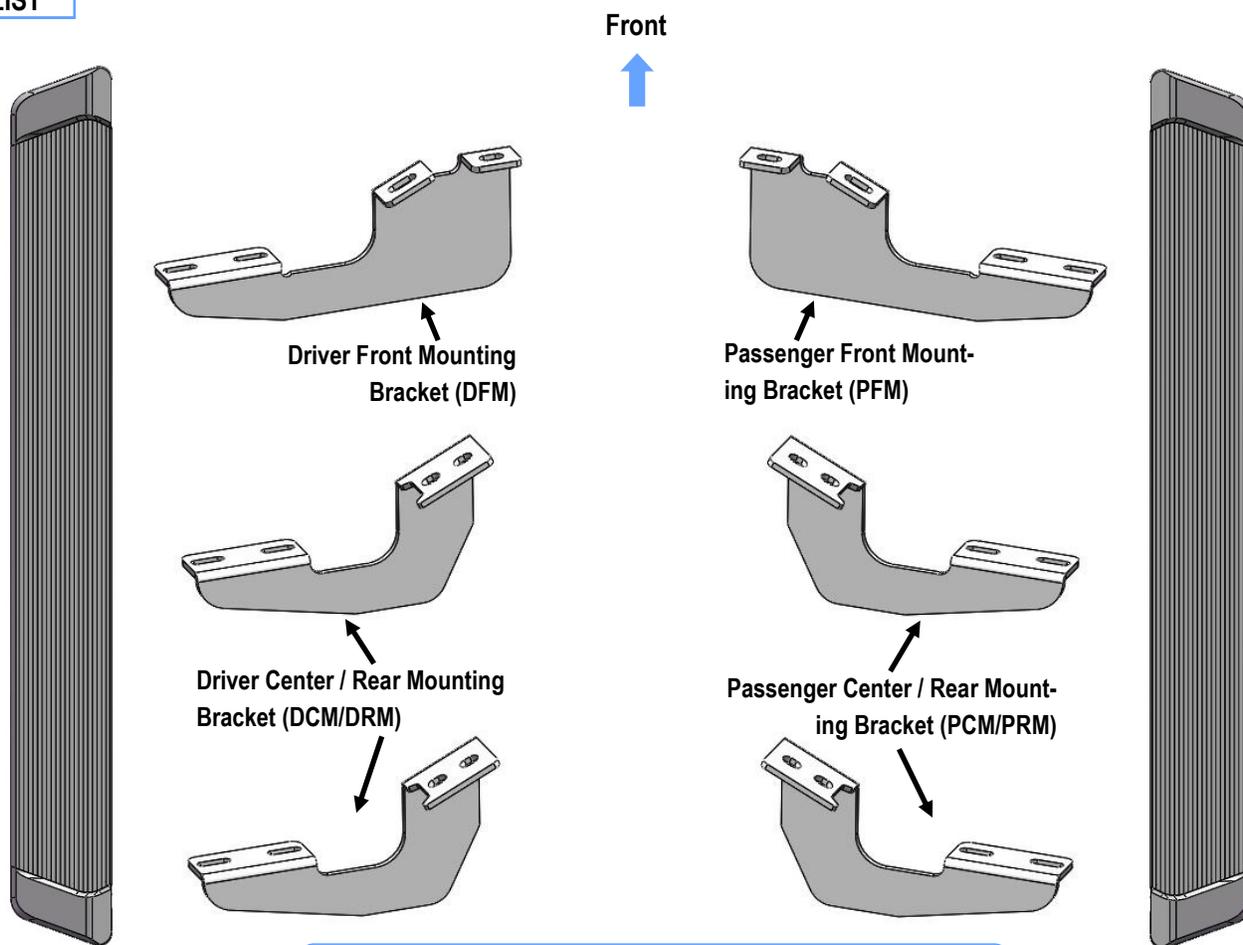

Note: \*Driver Center & Rear Mounting Brackets Are Universal  
\*Passenger Center & Rear Mounting Brackets Are Universal


Customer Support: [info@iboardauto.com](mailto:info@iboardauto.com)

# iBoard®




## STEP 1

Starting on the passenger side front of the vehicle, **(Fig 1)**. Select the Passenger Front Mounting Bracket **(PFM)**, attach the Mounting Bracket with (2) M8X1.25-25mm Hex Bolts, (2) M8 Lock Washers and (2) M8 Flat Washers, **(Fig 2)**. Do not fully tighten hardware at this time.

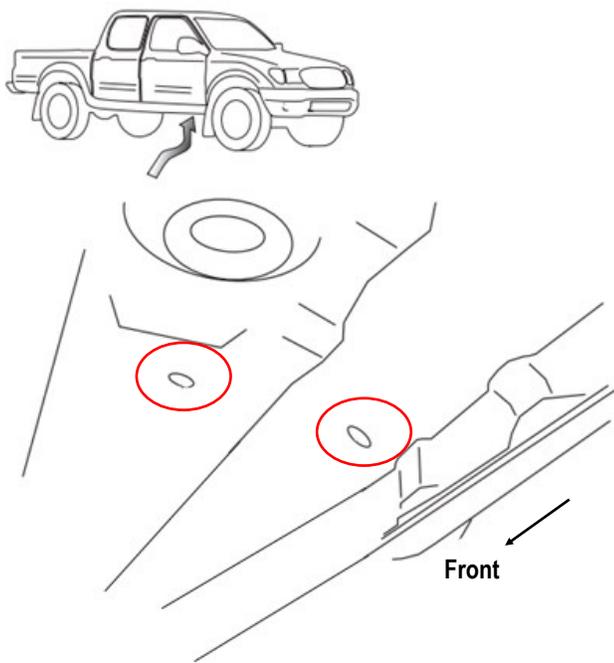

**(Fig 1) Passenger Front Mounting Location**

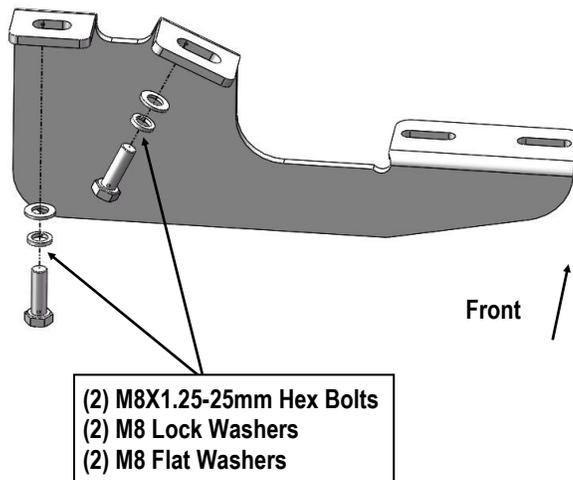


**(Fig 2) Passenger Front Mounting Bracket Installation**

## STEP 2

Next, move to the passenger side center & rear mounting locations, **(Fig 3)**. Repeat **Step 1** to install the Passenger Center Mounting Bracket **(PCM/PRM)** & Passenger Rear Mounting Bracket **(PCM/PRM)**. Do not fully tighten hardware at this time.

**Note:** Passenger Center & Rear Mounting Brackets are universal.

# iBoard®

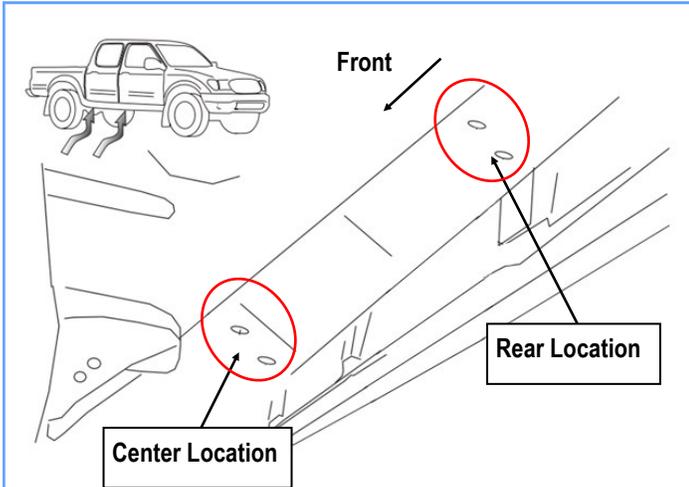

(Fig 3) Passenger Center And Rear Mounting Location


## STEP 3

Select a Running Board. Slip (3) M6x1-20mm Square Head Bolts into each bottom channel (Fig 4). Carefully position the Running Board onto the (3) Mounting Brackets.

**IMPORTANT:** Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged. Attach the Running Board to each Mounting Bracket with (2) M6x1-20mm Square Head Bolts, (2) M6 Large Flat Washers and (2) M6 Nylon Lock Nuts (Fig 5). Do not fully tighten at this time.


Level and adjust the Running Board and fully tighten all hardware.

M6X1-20mm Square Head Bolts

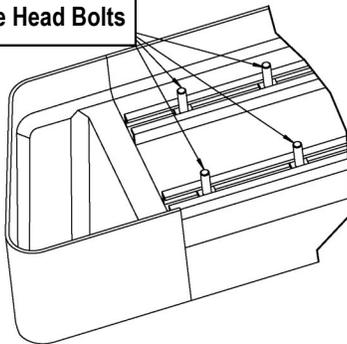

(Fig 4) Slip M6X1-20mm Square Head Bolts Into The Bottom Channels

(2) M6X1-20mm Square Head Bolts  
(2) M6 Large Flat Washers  
(2) M6 Nylon Lock Nuts

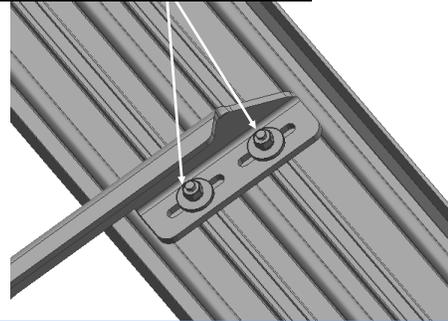

(Fig 5) Running Board Installed Onto Mounting Bracket

## STEP 4

Repeat **Steps 1-3** for the other side Running Board installation. The installation is completed.

### Attention

**Do periodic inspections to the installation to make sure that all hardware is secure and tight.**

**In order to protect your bars/boards, please use only mild soap/non-abrasive products for cleaning.**