

# iBoard®

## iBoard® by APS

PART#: IB-112A-B



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

\*BODY FRAME MOUNT  
\*NO DRILLING REQUIRED


Fastener Size	Tightening Torque (ft-lbs)
6mm	6-7
8mm	16-18
10mm	31-32
12mm	56-58
14mm	92-94

### PART LIST


Front

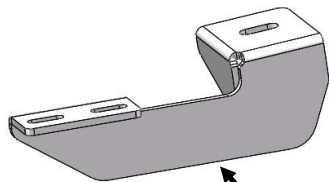


Driver Front Mounting Bracket (DFM)

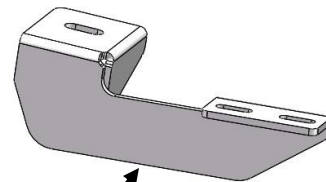

Passenger Front Mounting Bracket (PFM)

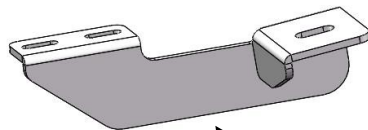

Driver Rear Mounting Bracket (DRM)

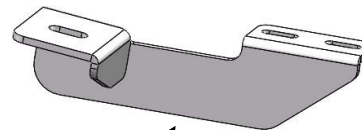


Passenger Rear Mounting Bracket (PRM)



Customer Support: [info@iboardauto.com](mailto:info@iboardauto.com)

# iBoard®

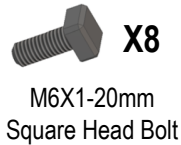

## STEP 1

Start installation from the driver side front of the vehicle. Remove the plastic plug in the center of the jack pad. **NOTE:** Depending on the year and model of vehicle, either unscrew the plug, (Fig 1), or pry the plug out of the center of the jack pad, (Fig 2). Once the plug has been removed, remove the jack pad, (Fig 2).

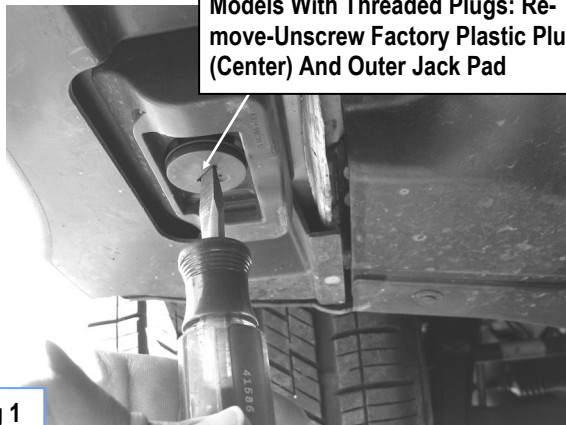


Fig 1



Fig 2


## STEP 2

Insert (1) M10x40 Bolt Plate into the factory hole once the jack pad has been removed, (Fig 3).

Select the Driver Front Mounting Bracket (DFM). Bolt the Driver Front Mounting Bracket to the vehicle with (1) M10 Plastic Washer, (1) M10 Large Flat Washer, (1) M10 Lock Washer and (1) M10 Hex Nut, (Fig 4). Do not fully tighten hardware at this time.



(Fig 3) Driver Side Front Mounting Location

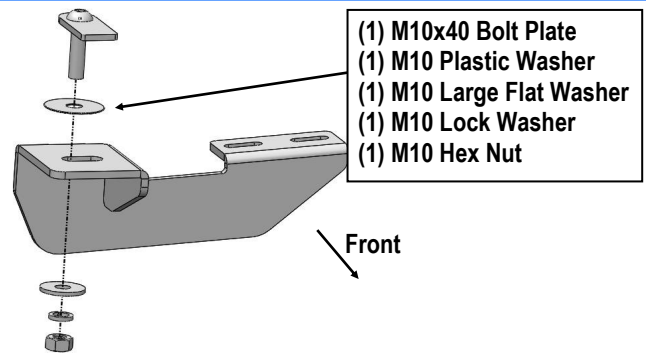


(Fig 4) Driver Front Mounting Bracket Installation

# iBoard®

## STEP 3

Move to the rear mounting location. Repeat **Steps 1 – 2** for installing Driver Rear Mounting Bracket (**DRM**), (**Fig 5**). Do not fully tighten hardware at this time.

- (1) M10x40 Bolt Plate
- (1) M10 Plastic Washer
- (1) M10 Large Flat Washer
- (1) M10 Lock Washer
- (1) M10 Hex Nut

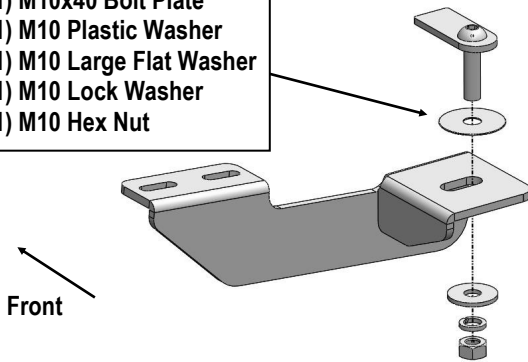

(Fig 5) Driver Front Mounting Bracket Installation

## STEP 4


Select a Running Board. Slip (2) M6X1-20mm Square Head Bolts into each bottom channel, (**Fig 6**). Carefully position the Running Board onto the (2) Mounting Brackets.

**IMPORTANT:** Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged. Attach the Running Board to each Mounting Bracket with (2) M6x1-20mm Square Head Bolts, (2) M6 Large Flat Washers and (2) M6 X1 Nylon Lock Nuts, (**Fig 7**). Do not fully tighten at this time.



(Fig 6) Slip M6X1-20mm Square Head Bolts Into The Bottom

- (2) M6X1-20mm Square Head Bolts
- (2) M6 Large Flat Washers
- (2) M6 Nylon Lock Nuts

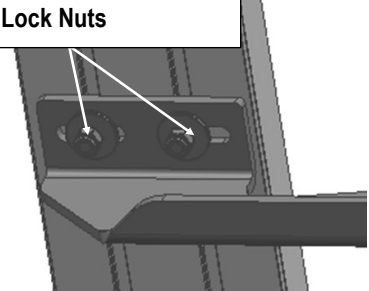

(Fig 7) Running Board Installed Onto the Mounting Bracket

## STEP 5

Level and adjust the Running Board and fully tighten all hardware.

## STEP 6

Repeat **Steps 1-5** for other side Running Board installation. The installation is completed.

### Attention

**Do periodic inspections to the installation to make sure that all hardware is secure and tight.**

**In order to protect your bars/boards, please use only mild soap/non-abrasive products for cleaning.**