


Installation Instructions

PARTS LIST:

Qty	Item Description	Qty	Item Description
1	Driver/Left Side Running Board	16	8-1.25mm x 30mm Hex Bolts
1	Passenger/Right Side Running Board	16	8mm x 24mm x 2mm Flat Washers
8	Universal Mounting Brackets	16	8mm Lock Washers
16	8-1.25mm x 25mm Combo Bolts		





Front

Passenger/Right Running Board



Driver/Left Running Board

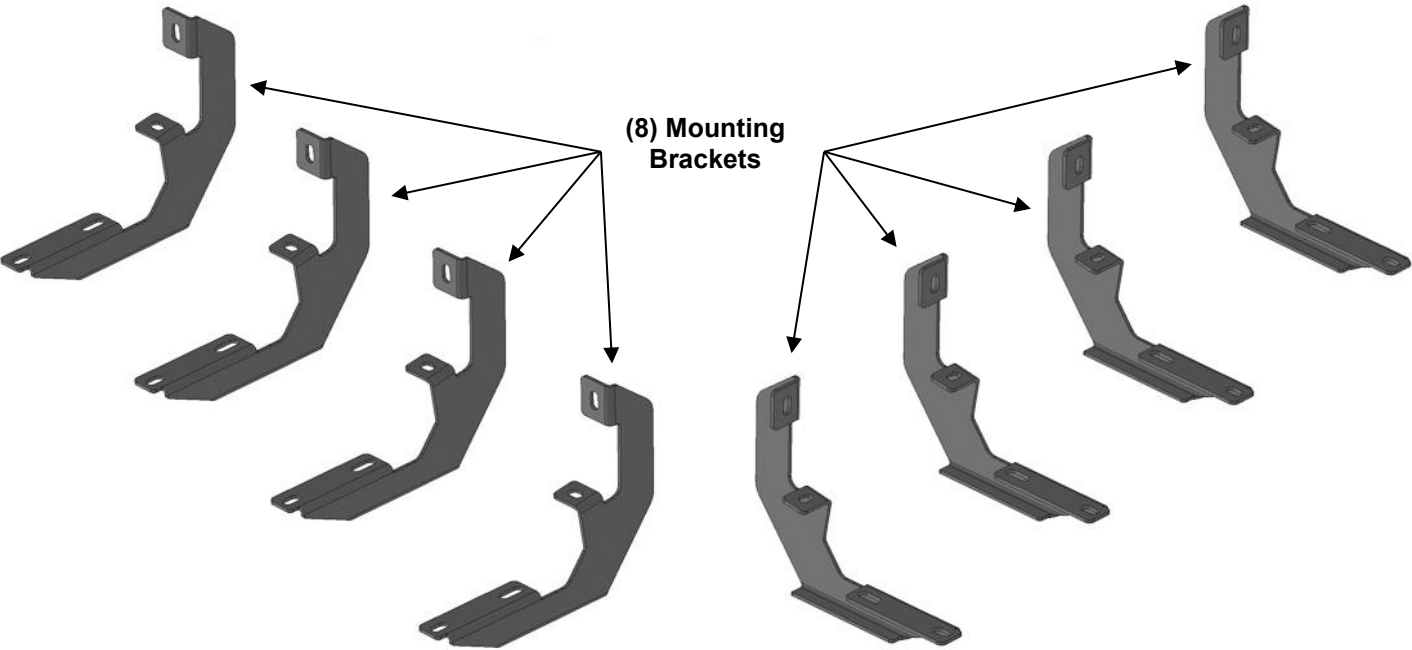

Combo Bolt



Lock Washer



Flat Washer



Hex Bolt

TOOLS REQUIRED



Ratchet



13mm Socket




Extensions




Wrench

- 1** Follow (Fig 1 – 10) to attach the brackets to the Passenger Side. Repeat the following steps on the Driver Side. Ensure hardware is hand tightened at this point.


Remove plugs

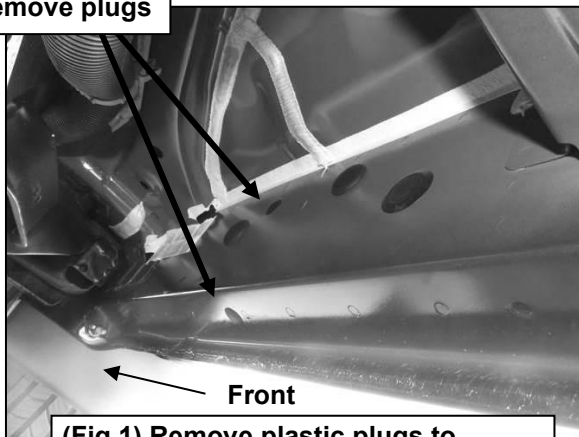


(Fig 1) Remove plastic plugs to uncover threaded holes in body panel

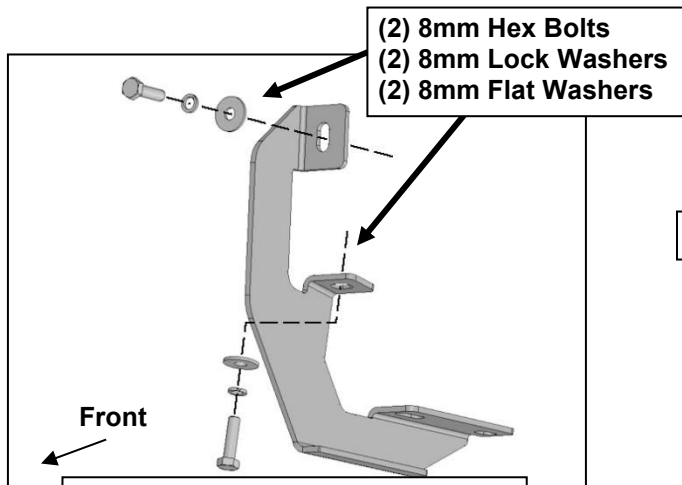


(Fig 3) Attach Mounting Bracket to threaded holes in body panel

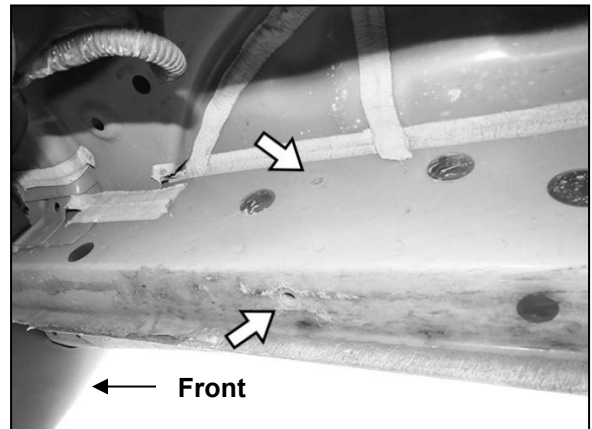

(Fig 2) Passenger/right front mounting location

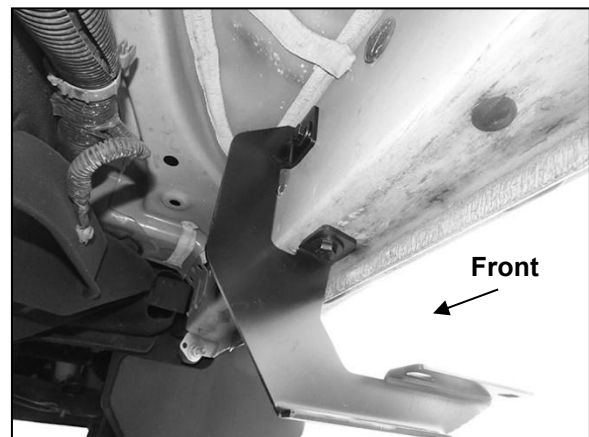


(Fig 4) Passenger/right front Mounting Bracket installed

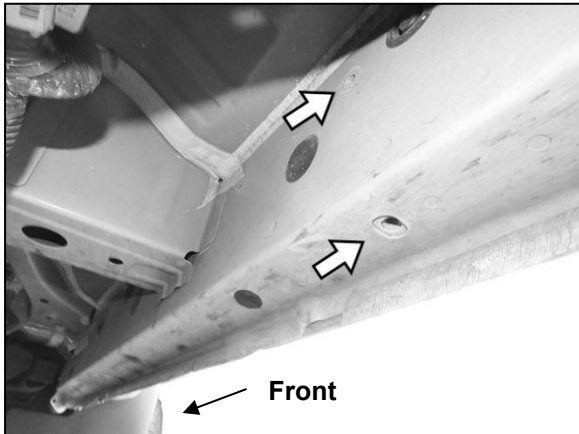


(Fig 5) Passenger/right #2 mounting location




(Fig 6) Passenger/Right #2 Bracket installed

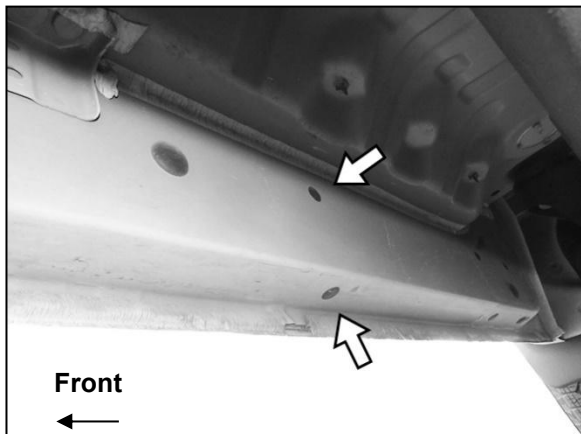


(Fig 7) Passenger/right #3 mounting location

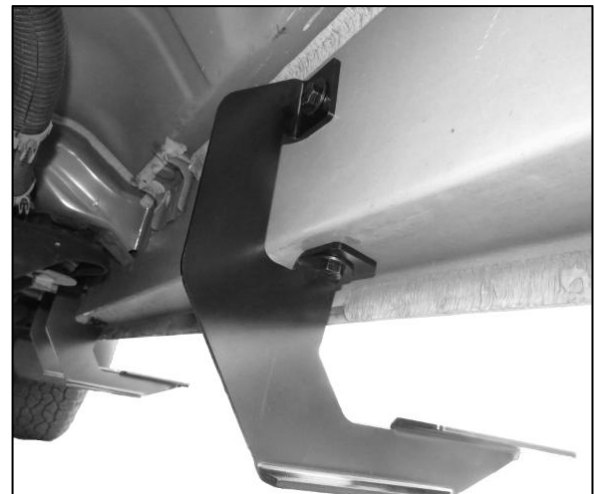

(Fig 10) Passenger/Right #3 Bracket installed

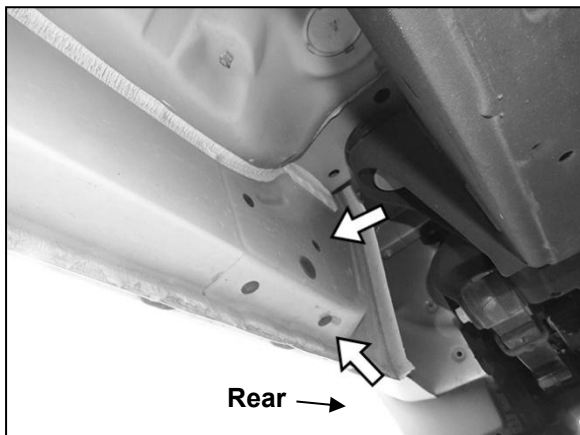


(Fig 9) Passenger/right rear mounting location

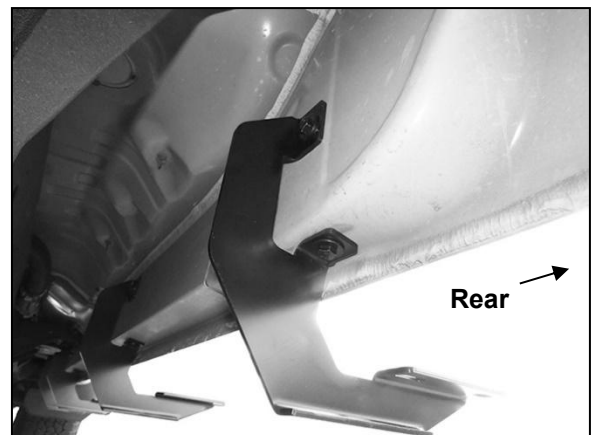

(Fig 10) Passenger/Right Rear Bracket installed

- 2** Follow (Fig 11 – 12) to attach Passenger/Right Running Board to Mounting Brackets. Repeat the following steps on the Driver/Left side. Ensure hardware is hand tightened at this point.

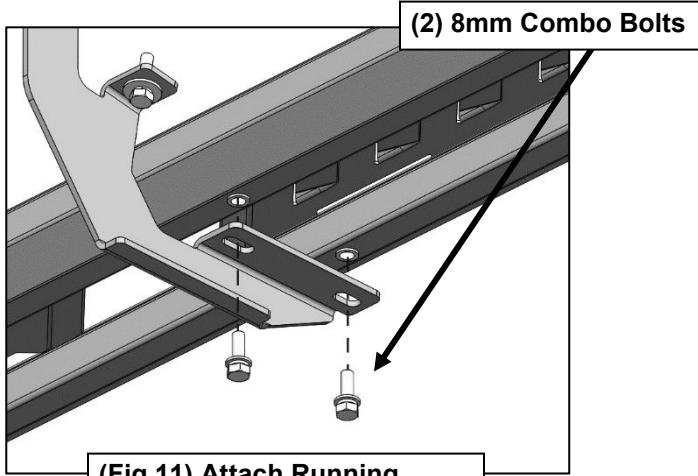

- 3** Ensure Running Board is level, then tighten all hardware. Installation is complete. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

