


INSTALLATION INSTRUCTIONS

PARTS LIST:

Qty	Item Description	Qty	Item Description
1	Driver/Left Running Board	12	8-1.25mm Combo Bolt
1	Passenger/Right Running Board	18	8mm-1.25 x 30mm Hex Bolt
1	Driver/Left Front Mounting Bracket	12	8mm Lock Washer
1	Passenger/Right Front Mounting Bracket	24	8mm x 24mm x 2mm Flat Washer
2	Driver/Left Center & Rear Mounting Bracket	6	8mm Hex Nut
2	Passenger/Right Center & Rear Mounting Bracket	6	8mm Nylon Lock Nut
3	Driver/Left Center/Rear & Passenger/Right Front Support Bracket	12	6-1.0mm x 25mm Hex Bolt
3	Passenger/Right Center/Rear & Driver/Left Front Support Bracket	12	6mm Nylon Lock Nut
6	8mm Plastic Retainer	24	6mm x 22mm x 2mm Flat Washer
6	8-1.25mm x 30mm Bolt Plate		

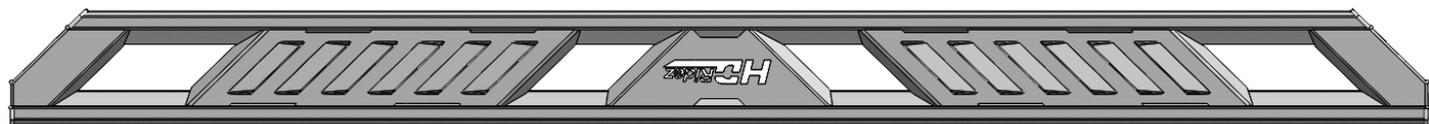


Driver/Left Running Board


Front →




Passenger/Right Running Board

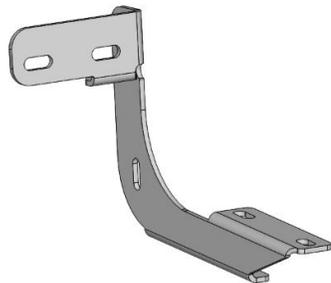


Driver/Left Front Mounting Bracket

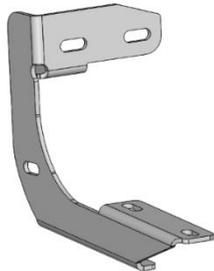


Driver/Left Center & Rear Mounting Bracket

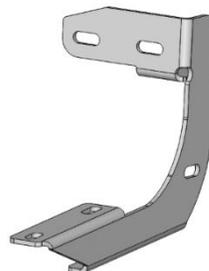


Passenger/Right Center & Rear Mounting Bracket

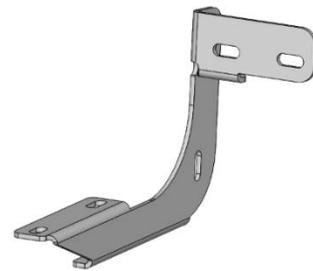


Passenger/Right Front Mounting Bracket

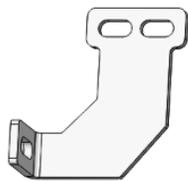

Driver/Left Center/Rear & Passenger/Right Front Support Bracket

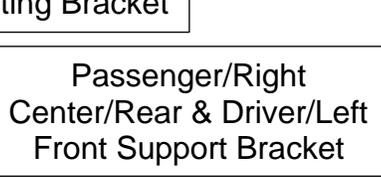


Passenger/Right Center/Rear & Driver/Left Front Support Bracket

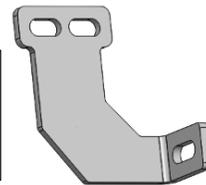


Hex Bolt

Combo Bolt





Lock Washer

Flat Washer



Hex Nut

Lock Nut



Plastic Retainer

Bolt Plate



TOOLS REQUIRED



Ratchet



10mm & 13mm Socket




Extensions




Wrench

1 Follow (Fig 1 – 20) to attach Mounting Brackets to the Passenger/Right Side starting at Front. Then add Support Brackets to Mounting Brackets. Repeat the following steps on the Driver/Left Side.

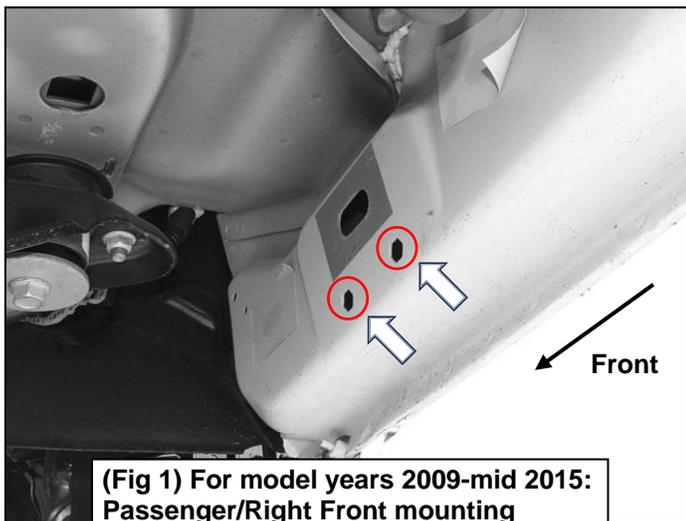


(Fig 1) For model years 2009-mid 2015: Passenger/Right Front mounting location with hexagonal holes


- (1) 8mm Bolt Plate
- (1) 8mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm Flat Washers
- (1) 8mm Plastic Retainer
- (1) 8mm Hex Nut

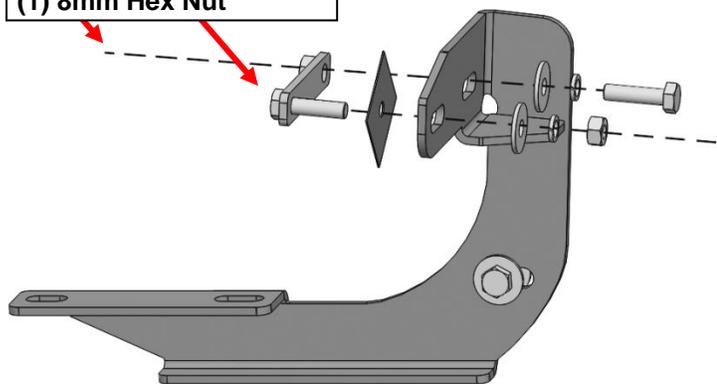


(Fig 4) Remove loose Hex Bolt and rotate Bolt Plate to line up nut with body panel and Mounting Bracket then attach bracket to Bolt Plate

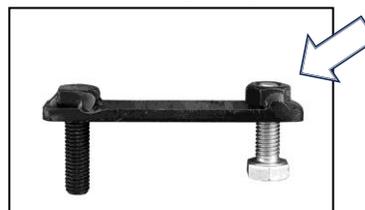


(Fig 2) Thread (1) 8mm Hex Bolt into the nut on the Bolt Plate. Stop when bolt reaches end of nut as pictured (arrow)

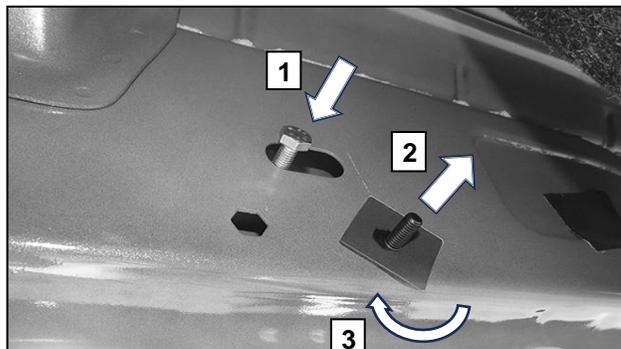

**(Fig 3) 1. Use the loose Hex Bolt as a handle. Insert the Bolt Plate into the oval hole
 2. Feed the threaded end out either factory hex shaped hole
 3. Thread Plastic Retainer onto Bolt Plate to hold Bolt Plate in position**

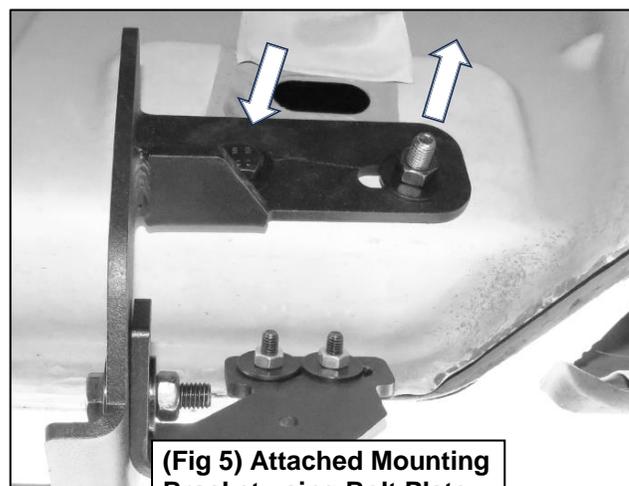


(Fig 5) Attached Mounting Bracket using Bolt Plate

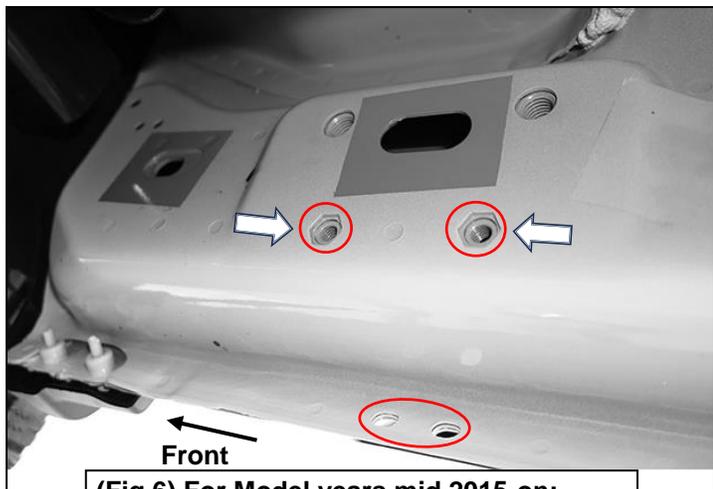

(Fig 6) For Model years mid 2015-on:
 Passenger/Right Front mounting location
 with threaded mounting holes


IMPORTANT: 2009-2012 models without holes in pinch weld will require drilling 1/4" holes through pinch weld to attach support bracket. Complete installation of running boards and level running board before drilling holes for support brackets.

- (1) 8mm Hex Bolts
- (2) 8mm Flat Washers
- (1) 8mm Lock Nut

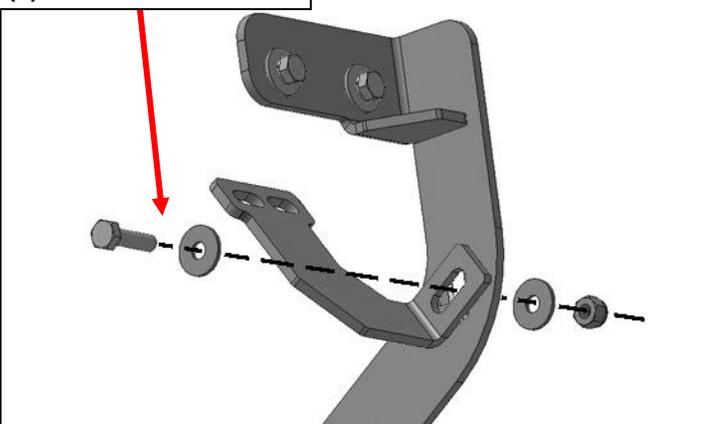


(Fig 8) Attach Support Bracket (F) to Mounting Bracket

- (2) 8mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm Flat Washers

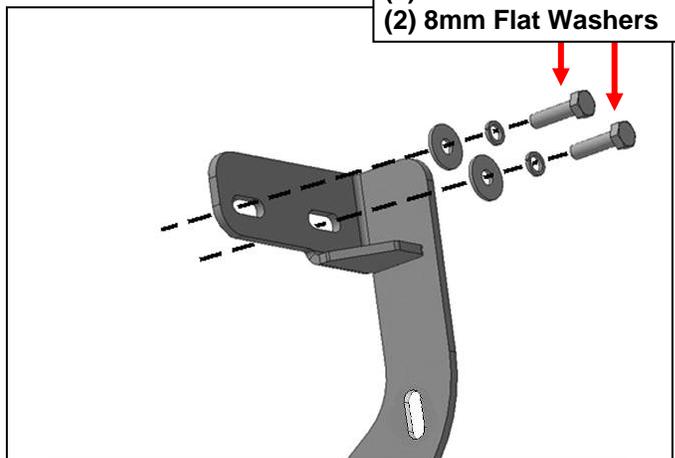


(Fig 7) Attach Passenger/Right Front Mounting Bracket directly to threaded holes


- (2) 6mm Hex Bolts
- (2) 6mm Lock Nuts
- (4) 6mm Flat Washers

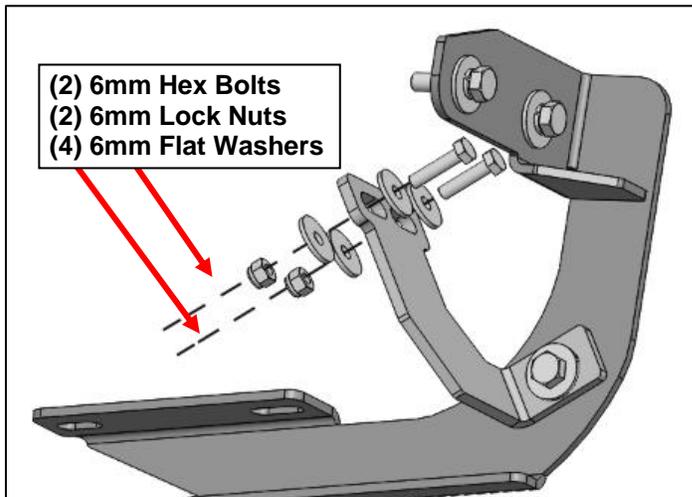

(Fig 9) Attach Supporting Bracket to threaded holes in pinch weld

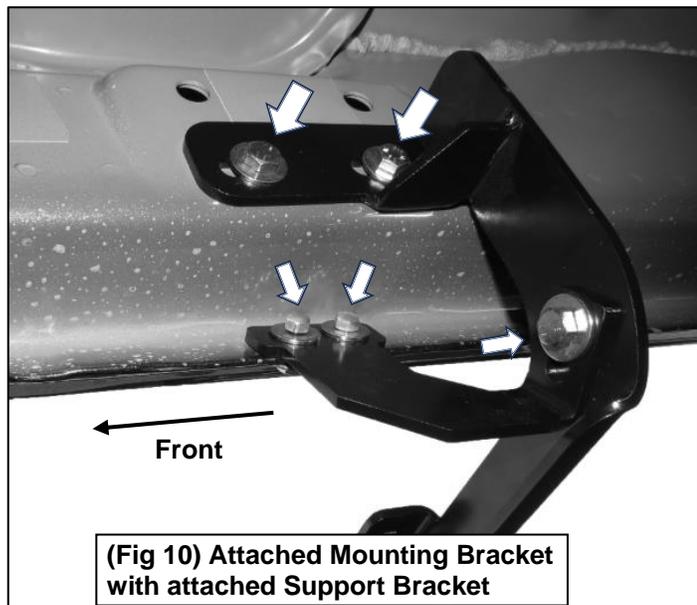


(Fig 10) Attached Mounting Bracket with attached Support Bracket

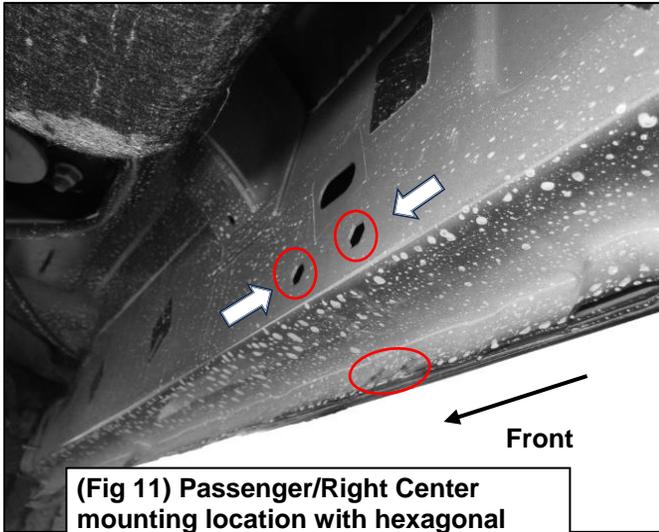

(Fig 11) Passenger/Right Center mounting location with hexagonal holes. If hexagonal, refer to Fig 12a. If threaded, continue with Fig 12b


- (2) 8mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm Flat Washers

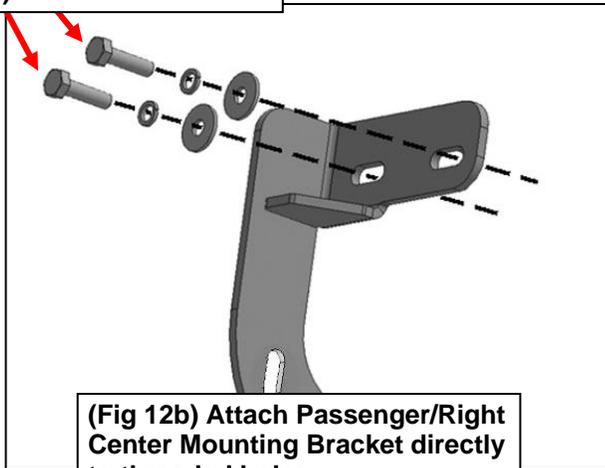

(Fig 12b) Attach Passenger/Right Center Mounting Bracket directly to threaded holes


IMPORTANT: 2009-2012 models without holes in pinch weld will require drilling 1/4" holes through pinch weld to attach support bracket. Complete installation of running boards and level running board before drilling holes for support brackets.

- (1) 8mm Bolt Plate
- (1) 8mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm Flat Washers
- (1) 8mm Plastic Retainer
- (1) 8mm Hex Nut

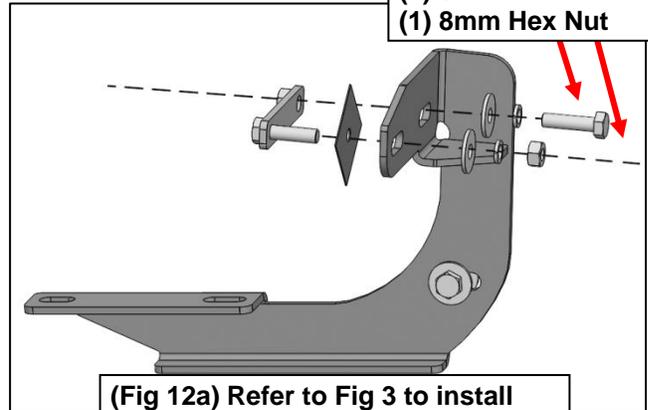


(Fig 12a) Refer to Fig 3 to install Bolt Plates. Remove loose Hex Bolt and rotate Bolt Plate to line up nut with body panel and Mounting

- (1) 8mm Hex Bolts
- (2) 8mm Flat Washers
- (1) 8mm Lock Nut

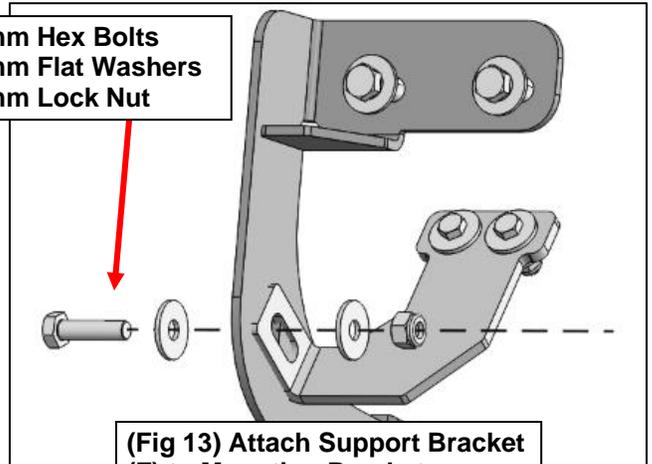


(Fig 13) Attach Support Bracket (F) to Mounting Bracket


- (2) 6mm Hex Bolts
- (2) 6mm Lock Nuts
- (4) 6mm Flat Washers

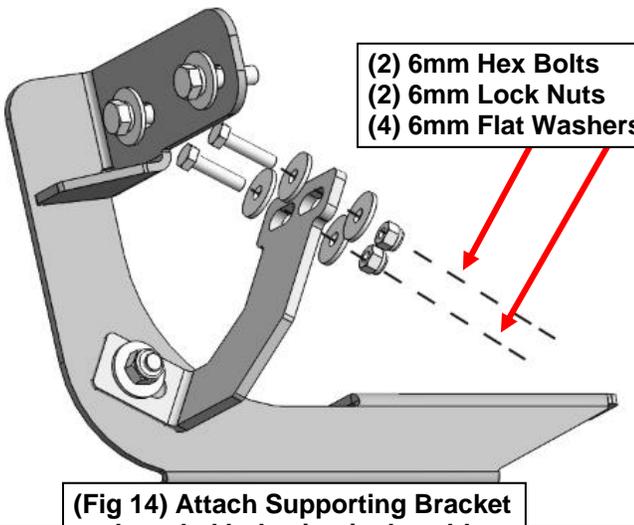

(Fig 14) Attach Supporting Bracket to threaded holes in pinch weld

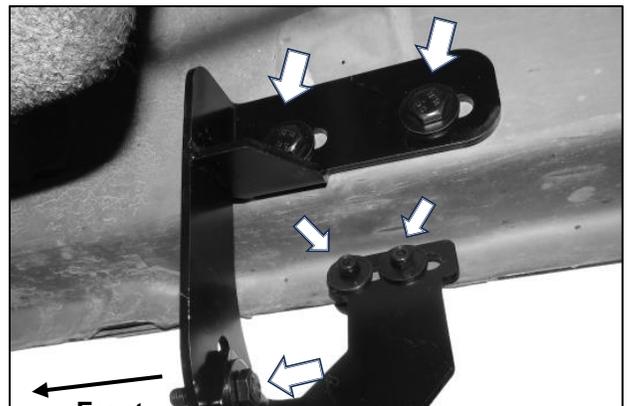


(Fig 15) Attached Mounting Bracket with attached Support Bracket

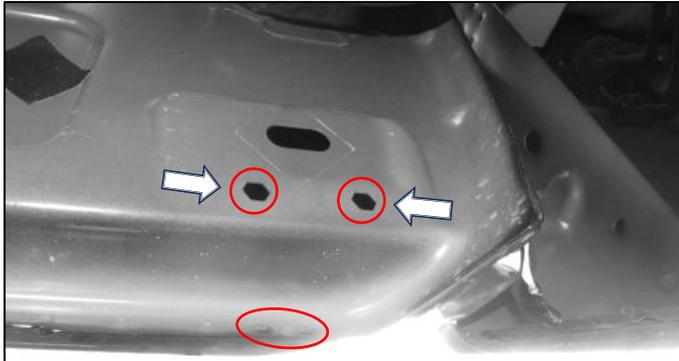

(Fig 16) Passenger/Right Rear mounting location with hexagonal holes. If hexagonal, refer to Fig 17a. If threaded, continue with Fig 17b


IMPORTANT: 2009-2012 models without holes in pinch weld will require drilling 1/4" holes through pinch weld to attach support bracket. Complete installation of running boards and level running board before drilling holes for support brackets.

- (1) 8mm Bolt Plate
- (1) 8mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm Flat Washers
- (1) 8mm Plastic Retainer
- (1) 8mm Hex Nut

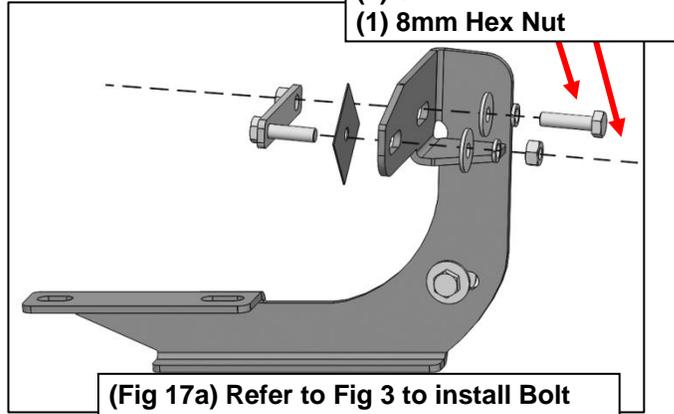


(Fig 17a) Refer to Fig 3 to install Bolt Plates. Remove loose Hex Bolt and rotate Bolt Plate to line up nut with body panel and Mounting Bracket then attach bracket to Bolt Plate

- (2) 8mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm Flat Washers

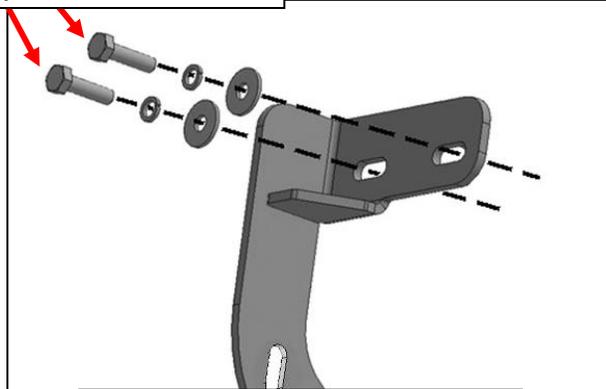


(Fig 17b) Attach Passenger/Right Center Mounting Bracket directly to threaded holes

- (1) 8mm Hex Bolts
- (2) 8mm Flat Washers
- (1) 8mm Lock Nut

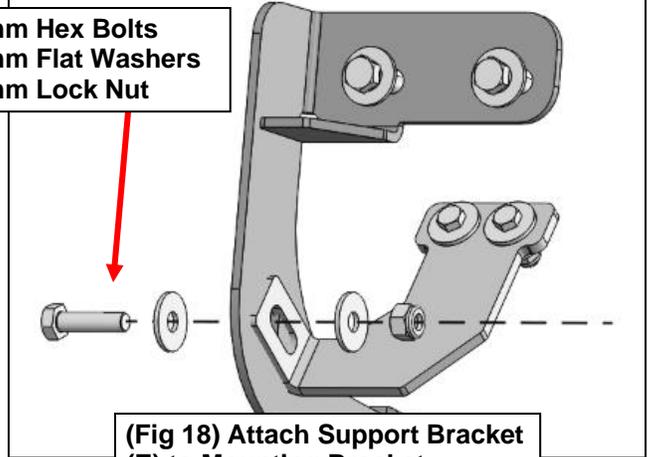


(Fig 18) Attach Support Bracket (E) to Mounting Bracket

- (2) 6mm Hex Bolts
- (2) 6mm Lock Nuts
- (4) 6mm Flat Washers

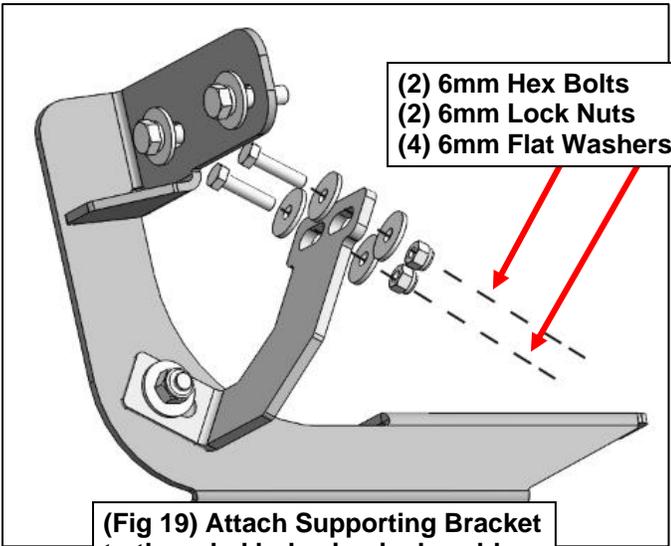


(Fig 19) Attach Supporting Bracket to threaded holes in pinch weld

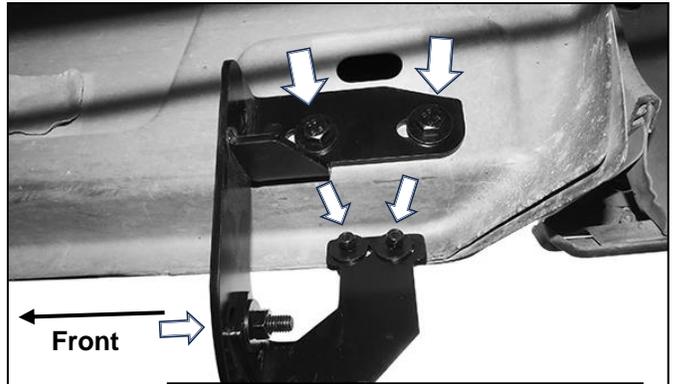


(Fig 20) Attached Mounting Bracket with attached Support Bracket

- 2** Follow (Fig 21-22) to install the running board to the Passenger/Right side. Repeat the following steps on the Driver/Left Side.

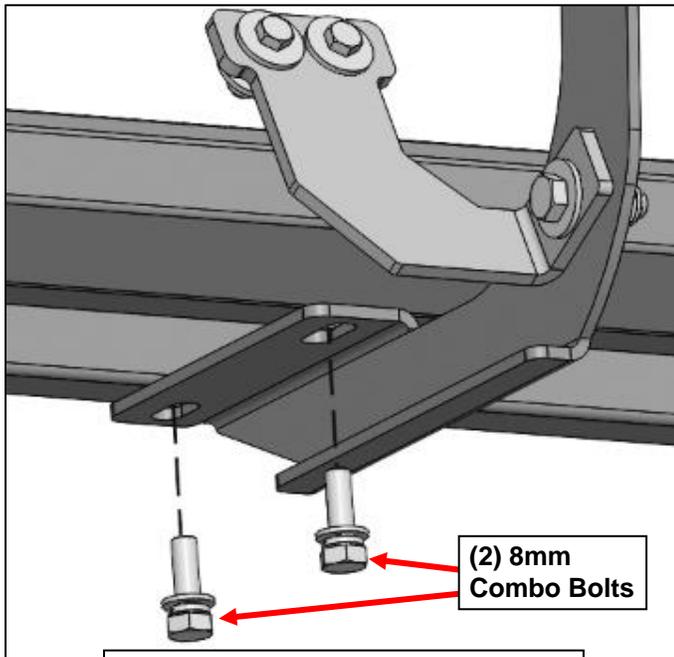

(Fig 21) Attach Running Board to Passenger/Right Mounting Brackets

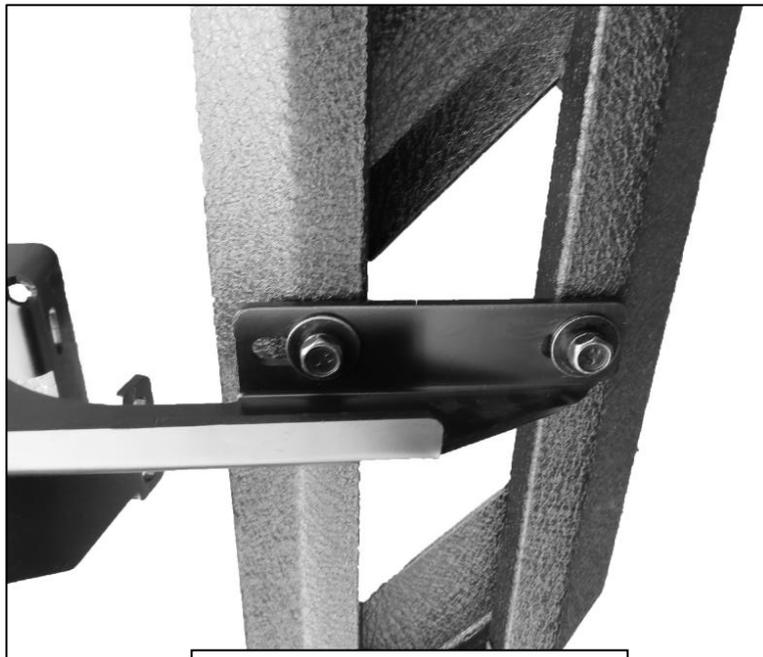

(Fig 22) Attached Running Board

- 3** Installation is complete. Do periodic inspections to the installation to make sure that all hardware is secure and tight.



Complete Installation