


PARTS LIST:

1	Driver/Left S6 Running Board	6	8mmx 35mm Double Bolt Plate
1	Passenger/Right S6 Running Board	12	8mm x 25mm Hex Bolts
2	Front Mounting Brackets	24	8mm x 24mm OD x 2mm Flat Washers
2	Center Mounting Brackets	12	8mm Lock Washers
2	Rear Mounting Brackets	12	8mm Nylon Lock Nuts

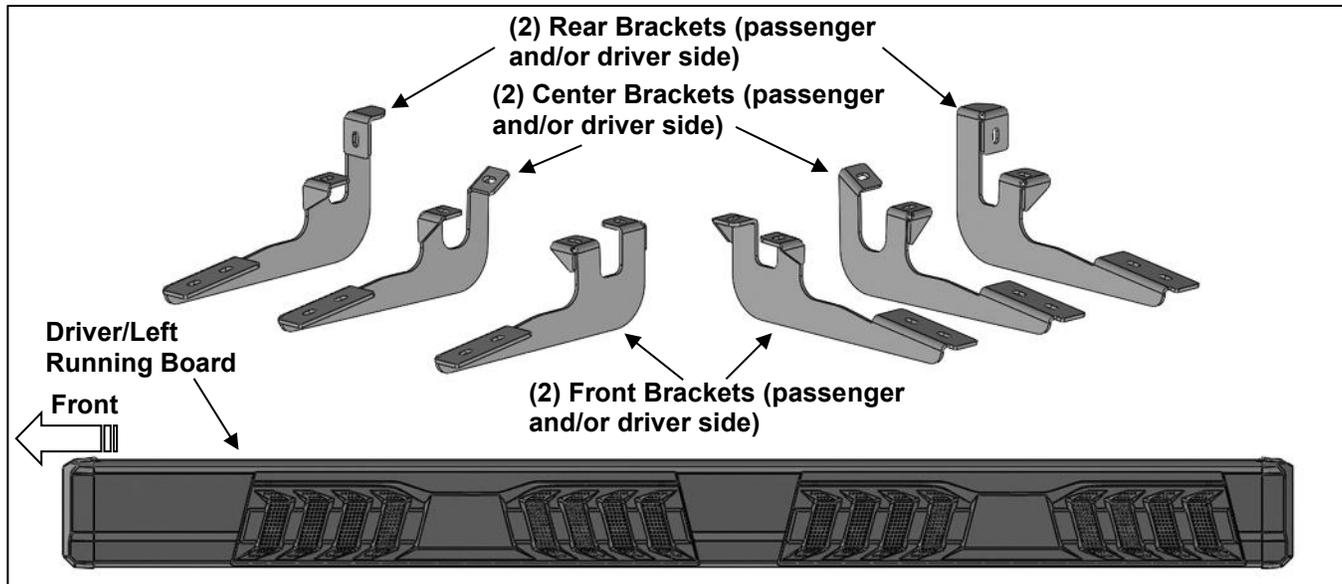


PROCEDURE:


- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
- Starting on the passenger side front of the vehicle, locate the two factory 8mm threaded holes located in the bottom of the floor panel, **(Figure 1)**. **NOTE:** Brackets install in the factory running board mounting locations. Threaded holes may be covered with insulation. Clean mounting locations as required for proper Bracket installation.
- Select (1) Front Mounting Bracket, **(Figure 2)**. **NOTE:** Brackets will fit left or right side. Attach the Bracket to the two threaded holes with (2) 8mm x 25mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers, **(Figure 3)**. Snug but do not tighten hardware at this time.
- Move to the center of the vehicle. Locate the two threaded holes in the bottom of the floor panel and body support panel, **(Figure 4)**. Repeat **Steps 2 & 3** to attach (1) Center Bracket, **(Figures 5 & 6)**.
- Next, move to the passenger/right rear of the vehicle. Locate the holes in the bottom and inner side of the floor panel, **(Figure 7)**. Repeat **Steps 2 & 3** to install (1) Rear Bracket, **(Figures 8 & 9)**.
- Unwrap the Driver/Left S6 Running Board. Select (3) 8mm Double Bolt Plates, **(Figure 10)**. Insert the Bolt Plates into the channel in the bottom of the Running Board.
- Place the Running Board on top of the (3) Mounting Brackets. Lift the Running Board up and guide the studs down through the Brackets. **IMPORTANT:** Do not slide the Running Board on the Brackets, (front to back), or the finish on the Running Board may be damaged.
- Attach the Running Board to the Brackets with (6) 8mm Flat Washers and (6) 8mm Nylon Lock Nuts, **(Figure 11)**. Do not tighten hardware.
- Level and adjust the Running Board and tighten all hardware.
- Repeat **Steps 2—9** to attach the Driver/Left S6 Running Board.
- Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used to clean Running Boards.


Passenger Side Installation Pictured

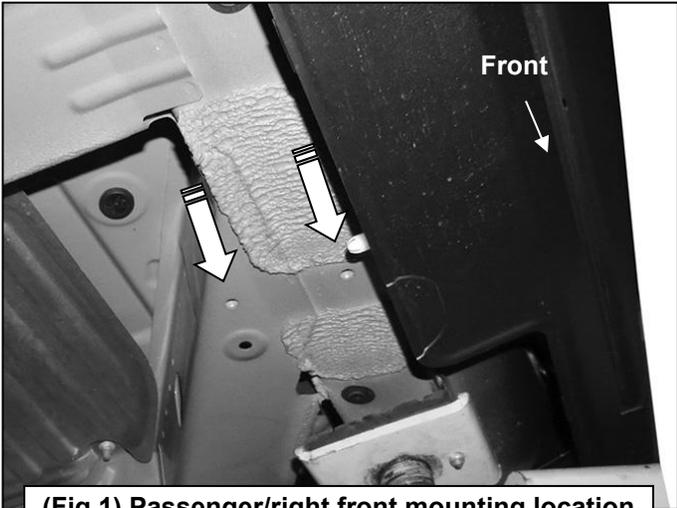


(Fig 1) Passenger/right front mounting location

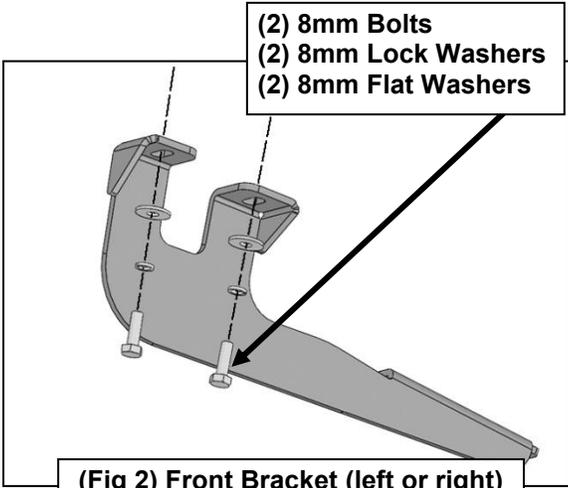


(Fig 2) Front Bracket (left or right)

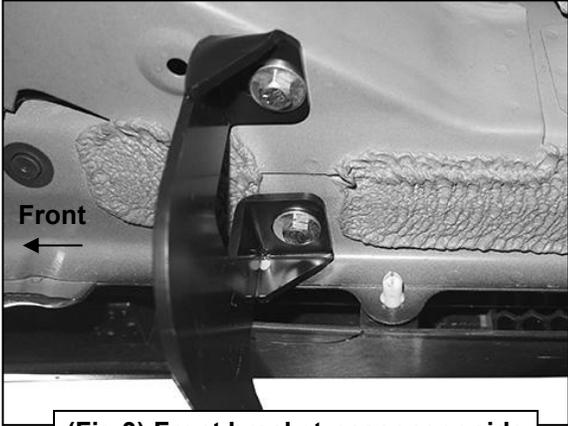

(Fig 3) Front bracket-passenger side

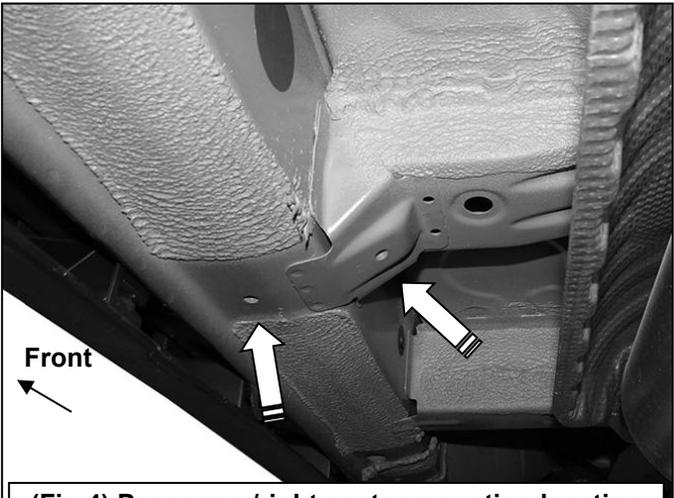

(Fig 4) Passenger/right center mounting location

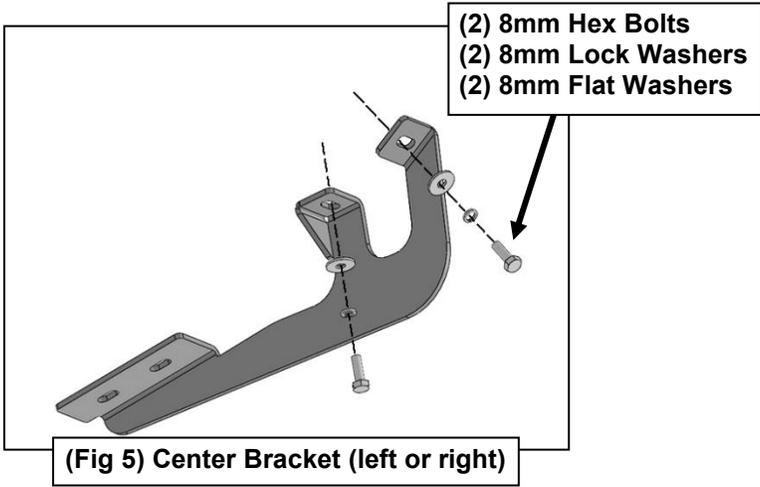

(Fig 5) Center Bracket (left or right)




(Fig 6) Center bracket-passenger side

Passenger Side Installation Pictured




(Fig 7) Passenger/right rear mounting location


- (2) 8mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm Flat Washers

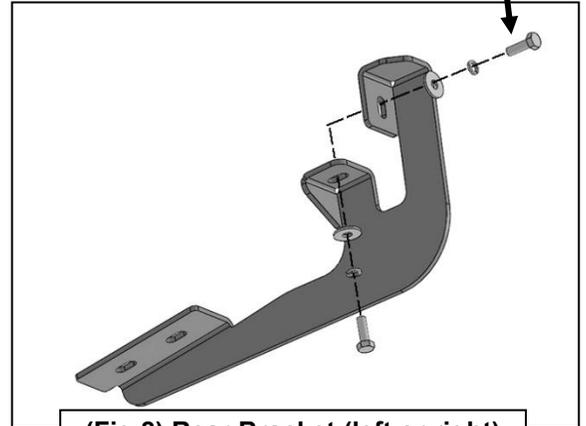


(Fig 8) Rear Bracket (left or right)

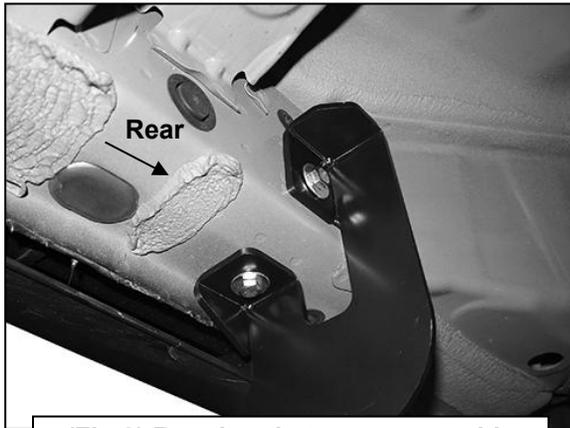

(Fig 9) Rear bracket-passenger side

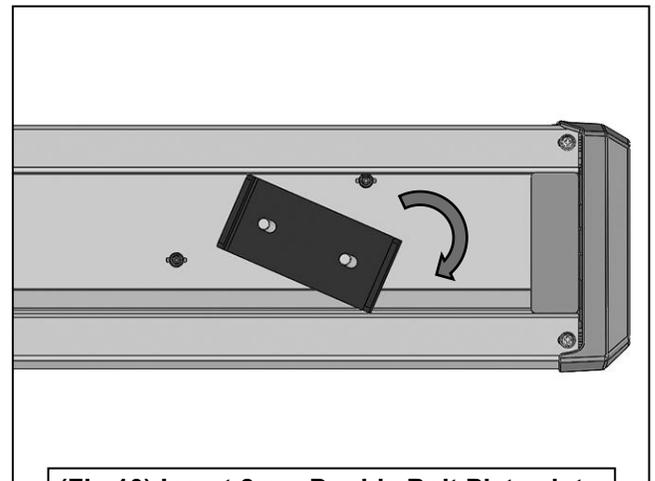

(Fig 10) Insert 8mm Double Bolt Plates into tracks on the bottom of the Running Board

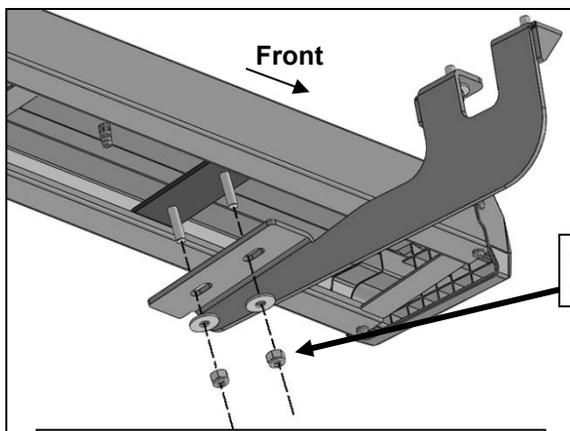

- (2) 8mm Flat Washers
- (2) 8mm Nylon Lock Nuts

(Fig 11) Attach the Driver/Left Running Board to the Bolt Plate