


PARTS LIST:

| | | | |
|----|-----------------------------------|----|----------------------------------|
| 3 | Driver/Left Mounting Brackets | 6 | 6mm Double Bolt Plates |
| 3 | Passenger/Right Mounting Brackets | 12 | 6mm x 22mm OD x 2mm Flat Washers |
| 12 | 8mm x 24mm OD x 2mm Flat Washers | 12 | 6mm Lock Washers |
| 12 | 8mm Flanged Nuts | 12 | 6mm Hex Nuts |

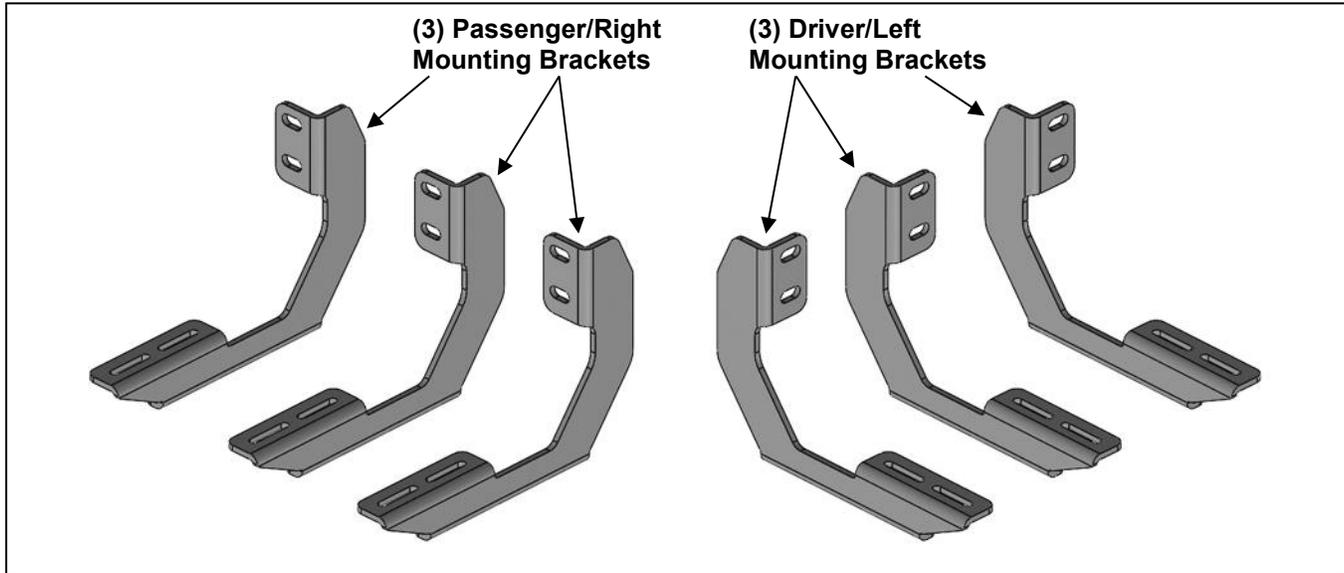


PROCEDURE:


- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. CLEAN MOUNTING STUDS WITH WIRE BRUSH TO REMOVE PAINT AND DEBRIS.**
- Starting on the Passenger/Right front of the vehicle, **(Figure 1)**. Attach (1) Passenger/Right Mounting Bracket to the front location with (2) 8mm Flat Washers and (2) 8mm Flange Nuts, **(Figure 2)**. Do not tighten hardware.
- Repeat **Steps 2 & 3** to attach the remaining (2) Passenger/Right Mounting Brackets to the Passenger/Right center and rear locations, **(Figure 3)**.
- Select the Passenger/Right P1 Running Board. Select (3) 6mm Bolt Plates. Insert the Bolt Plates into the channel in the bottom of the Running Board, **(Figure 4)**.
- Lift the Running Board onto the (3) Mounting Brackets and line up the Bolt Plates into the slots. Attach the Running Board to the Mounting Brackets with (6) 6mm Flat Washers, (6) 6mm Lock Washers and (6) 6mm Hex Nuts, **(Figure 5)**. Do not tighten hardware.
- Level and adjust the Running Board and tighten all hardware.
- Repeat **Steps 1—6** to attach the Driver/Left Running Board.
- Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used to clean the Running Boards.

Passenger/Right Side Installation Pictured

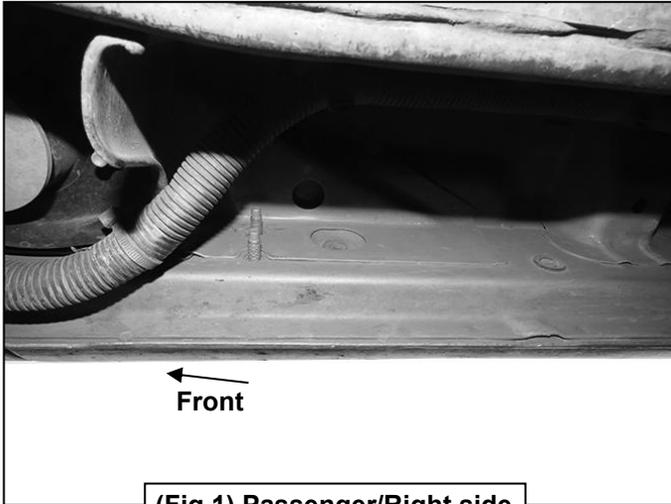


(Fig 1) Passenger/Right side front mounting location

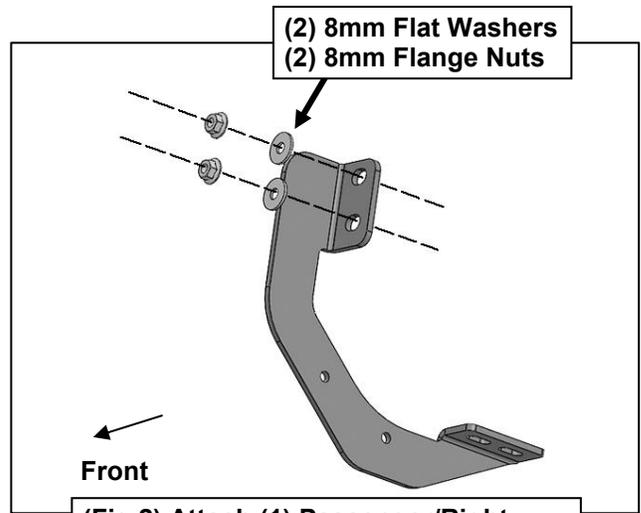


(Fig 2) Attach (1) Passenger/Right Mounting Bracket to the front location



(Fig 3) Passenger/Right side rear mounting location

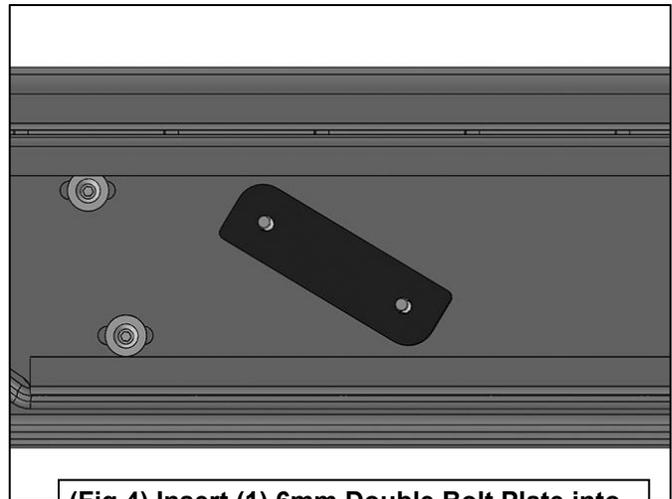

(Fig 4) Insert (1) 6mm Double Bolt Plate into channel on the bottom of the Running Board

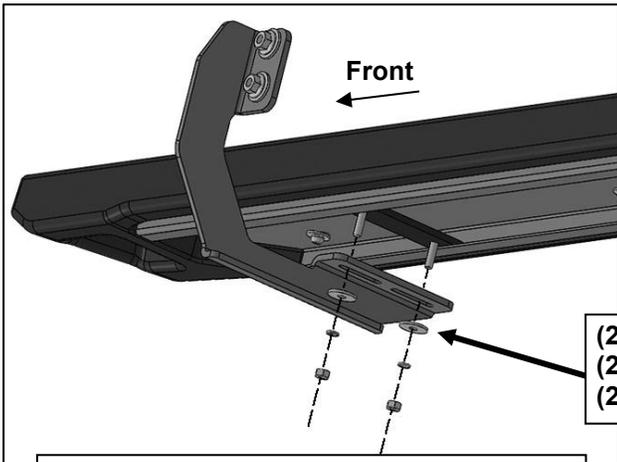

- (2) 6mm Flat Washers
- (2) 6mm Lock Washers
- (2) 6mm Hex Nuts

(Fig 5) Attach the Passenger/Right Running Board to the Mounting Brackets