
(Excl. 2010-13 SR5, 2010-24 Limited & 19-22 Nightshade Edition or models with Lower Rocker Panel Extensions)

Installation Instructions

PARTS LIST:

Qty	Item Description	Qty	Item Description
1	Driver/Left Running Board	2	Passenger/Right Center & Rear Mounting Bracket
1	Passenger/Right Running Board	12	8-1.25mm x 25mm Hex Bolts
1	Driver/Left Front Mounting Bracket	12	8mm x 24mm x 2mm Flat Washers
1	Passenger/Right Front Mounting Bracket	12	8mm Lock Washers
2	Driver/Left Center & Rear Mounting Bracket	12	8-1.25mm x 25mm Combo Bolts

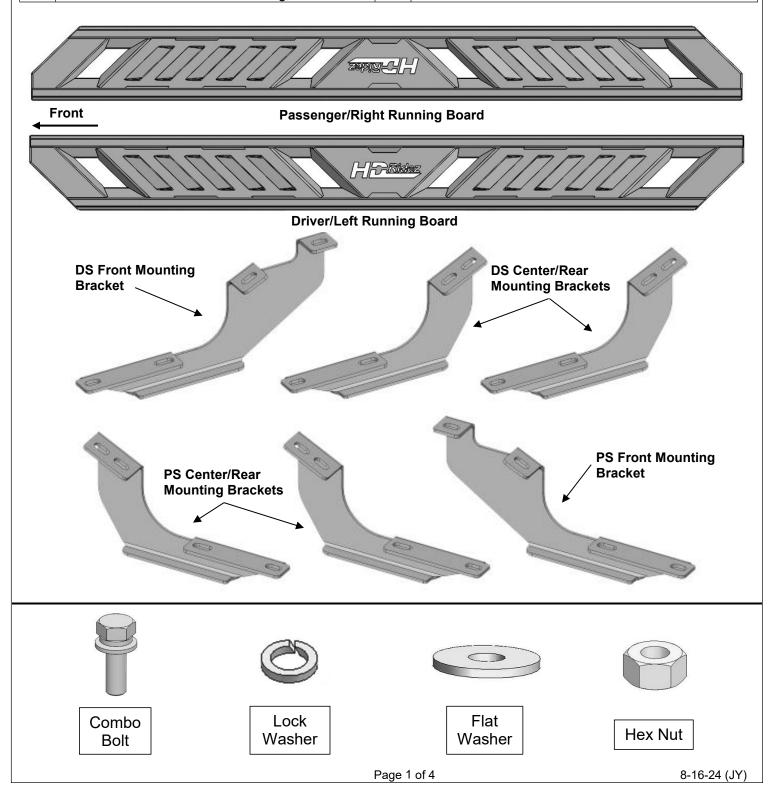

TOOLS REQUIRED





13mm Socket







Wrench

1


Follow (Fig 1-3) to attach Driver/Left Mounting Brackets. Repeat the following steps with Passenger/Right side. Ensure hardware is hand tightened at this point.

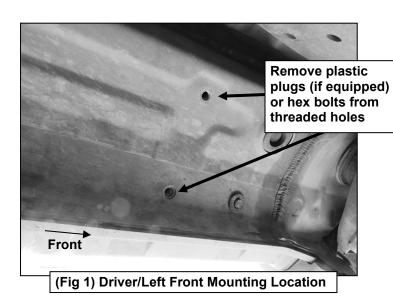

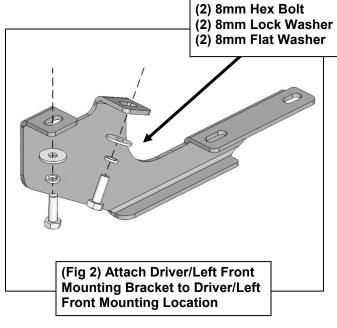






(Fig 3) Driver/Left Front Mounting Bracket attached to Front Mounting Location

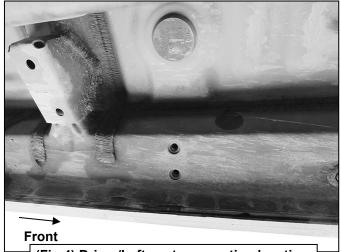


(Fig 4) Driver/Left center mounting location

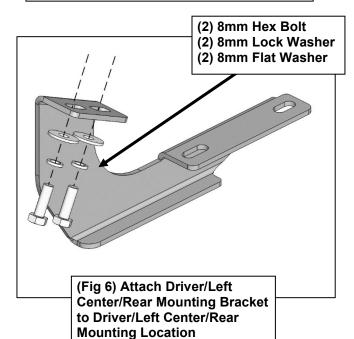

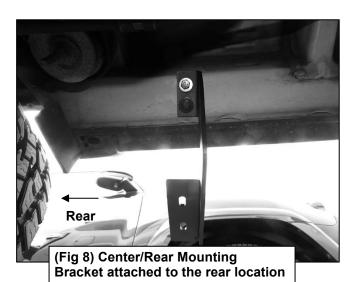

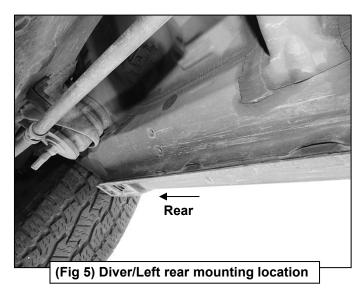

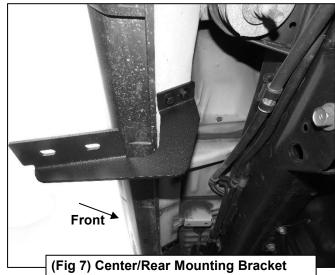



attached to the center location

Page 3 of 4 8-16-24 (JY)


2

Follow (Fig 9 - 10) to attach Passenger/Right Running Board to Mounting Brackets. Repeat the following steps on the Driver/Left side. Ensure hardware is hand tightened at this point.

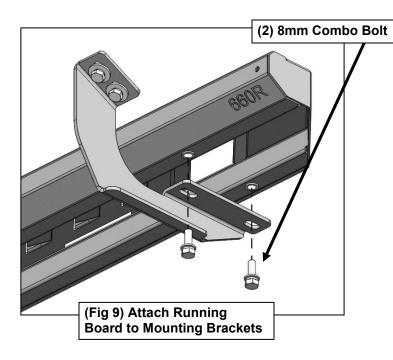

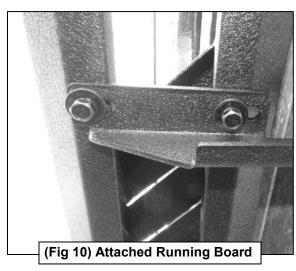

Ensure Running Board is level, then tighten all hardware. Installation is complete. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

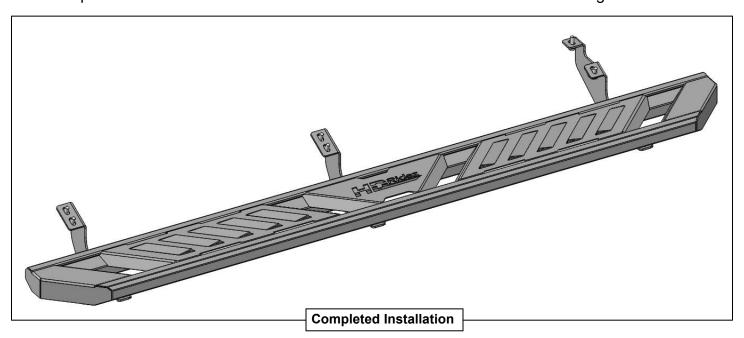

Page 4 of 4

8-16-24 (JY)