
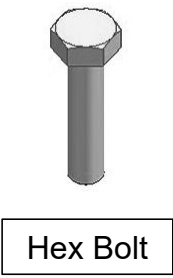
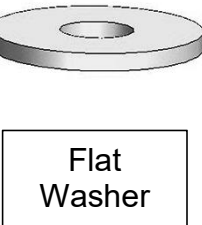
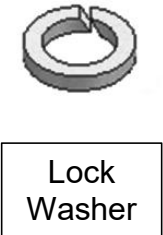
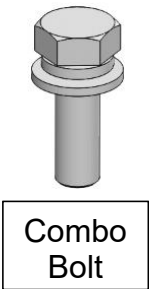
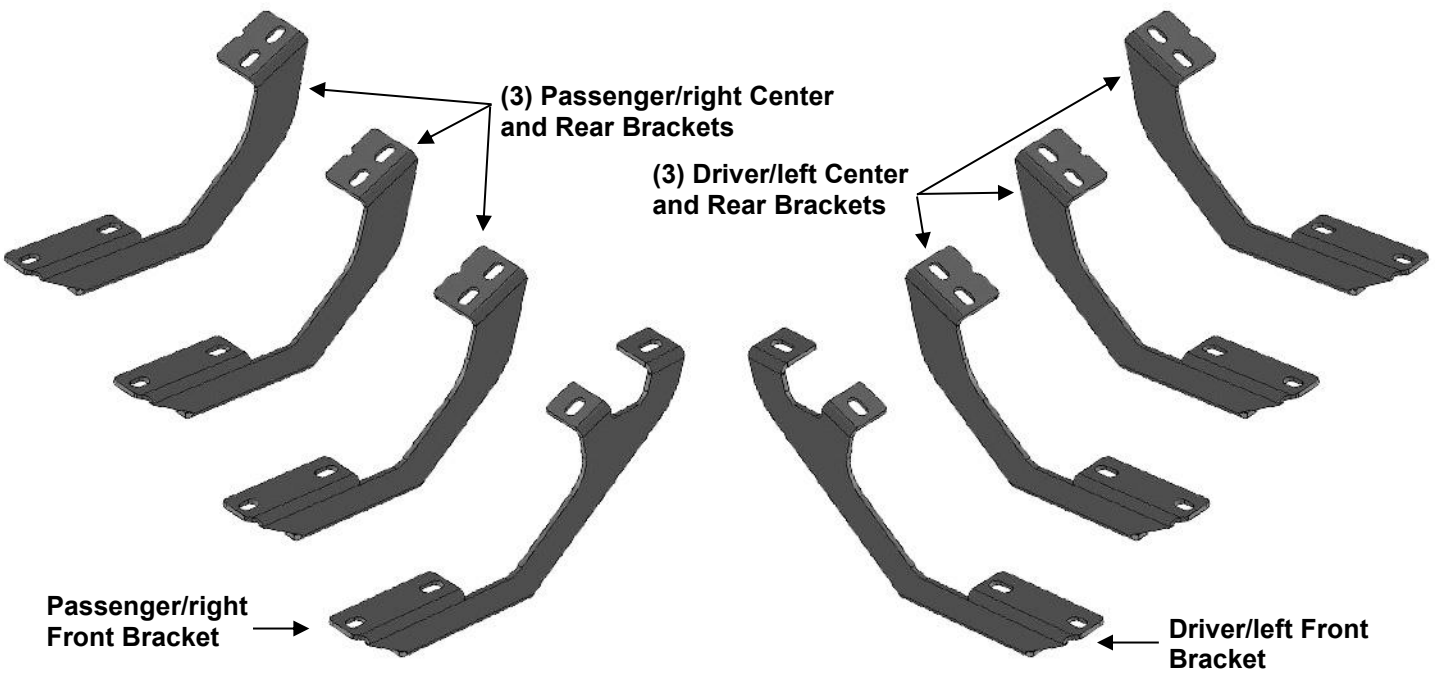


INSTALLATION INSTRUCTIONS

PARTS LIST:

Qty	Item Description	Qty	Item Description
1	Driver/Left Running Board	3	Passenger/Right Center & Rear Mounting Bracket
1	Passenger/Right Running Board	16	8-1.25mm x 25mm Combo Bolts
1	Driver/Left Front Mounting Bracket	16	8-1.25mm x 30mm Hex Bolts
1	Passenger/Right Front Mounting Bracket	16	8mm Lock Washers
3	Driver/Left Center & Rear Mounting Bracket	16	8mm x 24mm x 2mm Flat Washers

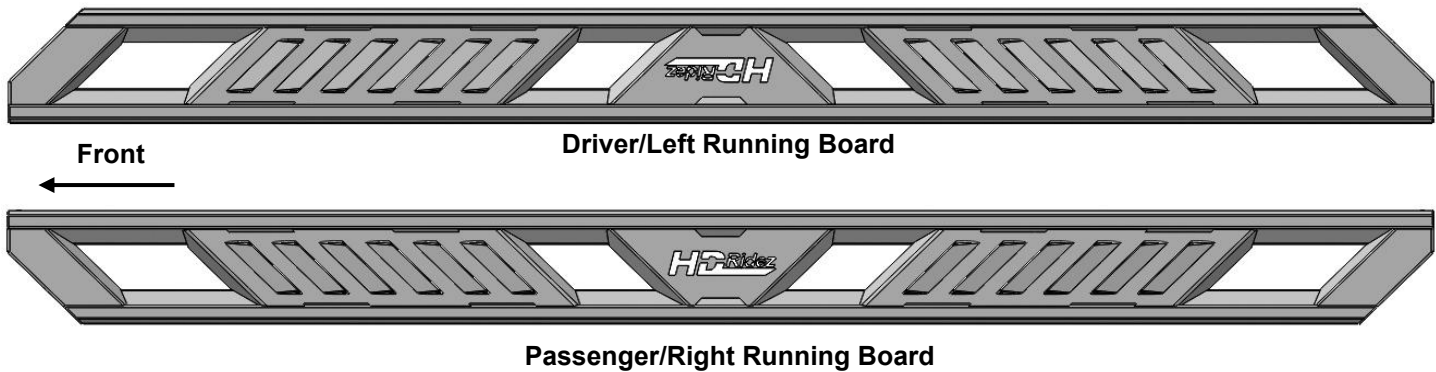

## TOOLS REQUIRED



Ratchet



13mm Socket






Extensions



Wrench


1

Follow (Fig 1 – 7) to attach the brackets to the Passenger Side. Repeat the following steps on the Driver Side. Ensure hardware is hand tightened at this point.

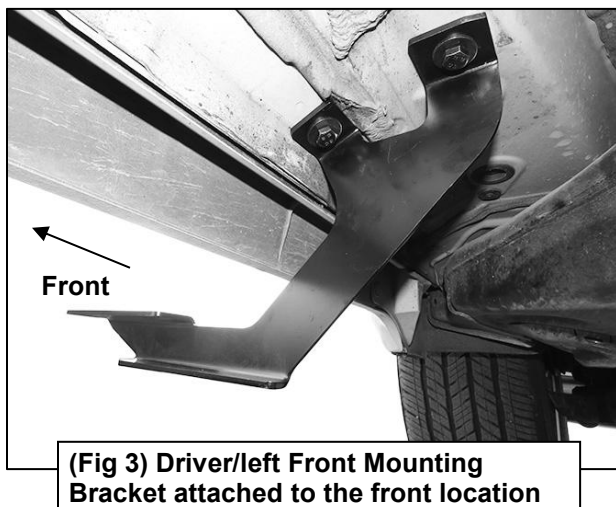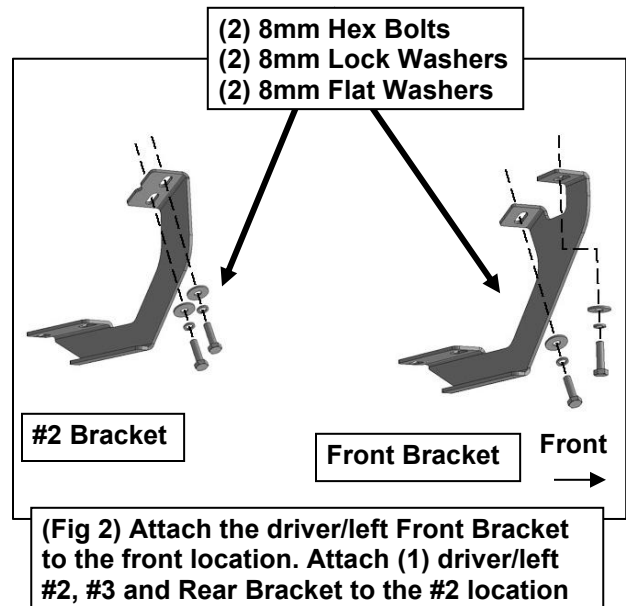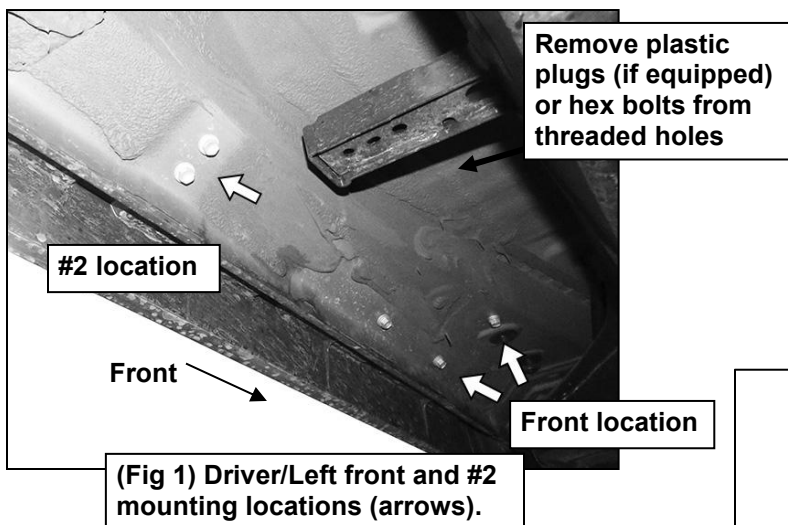




(Fig 4) Driver/left #2, #3 and Rear Bracket attached to the #2 location

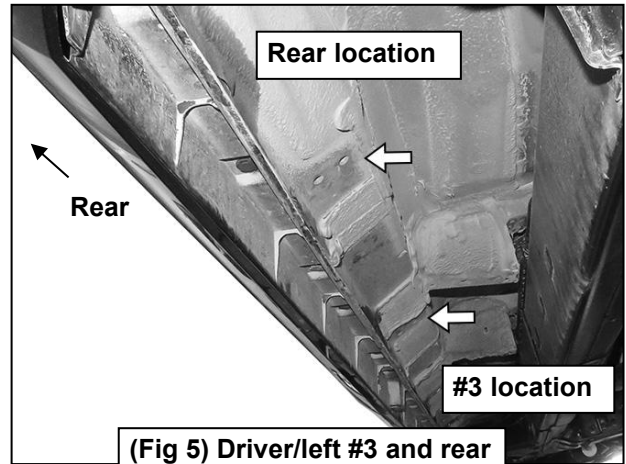

(Fig 5) Driver/left #3 and rear mounting locations (arrows)

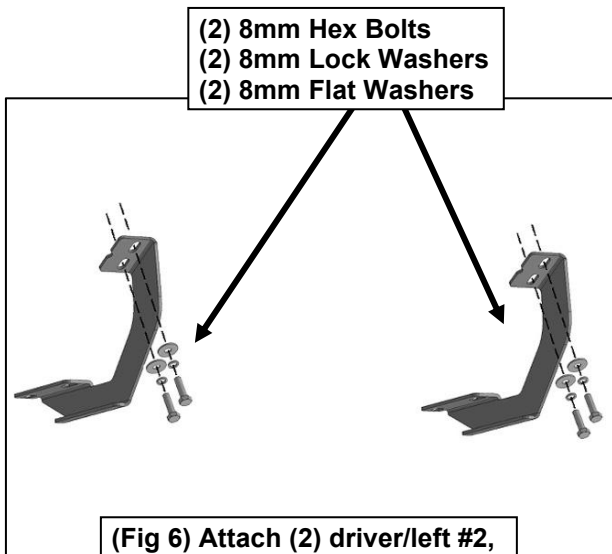


(Fig 6) Attach (2) driver/left #2, #3 and Rear Brackets to the #3 and rear mounting locations



(Fig 7) Attach (2) driver/left #2, #3 and Rear Brackets to the #3 and rear mounting locations

**2**

Follow (Fig 8 – 9) to attach Passenger/Right Running Board to Mounting Brackets. Repeat the following steps on the Driver/Left side. Ensure hardware is hand tightened at this point.

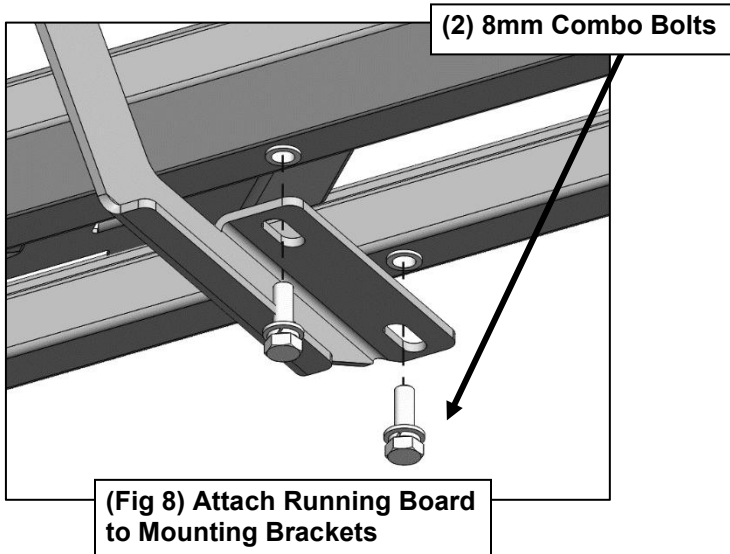

**3**

Ensure Running Board is level, then tighten all hardware. Installation is complete. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

