


**PARTS LIST:**

1	Driver/Left Running Board	12	10-1.5mm x 30mm Hex Bolts
1	Passenger/Right Running Board	24	10mm x 20mm x 2mm Flat Washers
1	Driver/Left Front Mounting Bracket	12	10-1.5mm Nylon Lock Nuts
1	Passenger/Right Front Mounting Bracket	12	8-1.25mm x 25mm Hex Bolts
2	Driver/Left Center/Rear Mounting Brackets	12	8mm x 24mm x 2mm Flat Washers
2	Passenger/Right Center/Rear Mounting Brackets	12	8mm Lock Washers

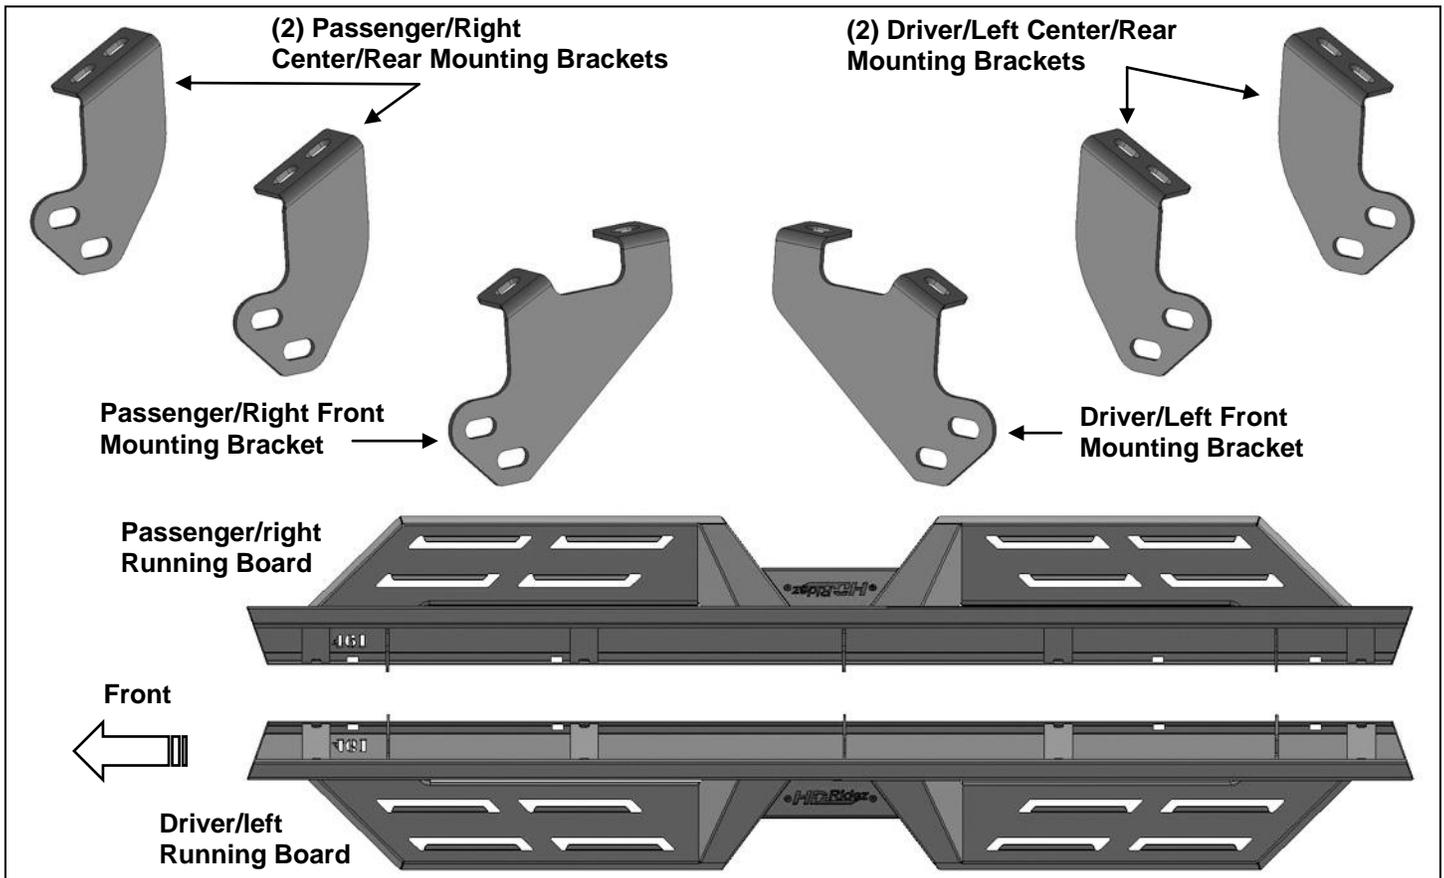


**PROCEDURE:**

- REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS RECOMMENDED.**
- Starting on the passenger/right side of the vehicle, remove the plastic plugs or hex bolts from the factory mounting location along the bottom of the body, **(Figures 1, 3 & 5)**.
- Select the passenger/right Front Mounting Bracket, **(Figure 2)**. Attach the Bracket to the front mounting location with the included (2) 8mm x 25mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers. Do not fully tighten hardware at this time.
- Move to the center mounting location, **(Figure 3)**. Select (1) passenger/right Center/Rear Mounting Bracket, **(Figure 4)**. Attach the Bracket to the center location with (2) 8mm x 25mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers. Do not fully tighten hardware at this time.
- Continue to the last mounting location, **(Figure 5)**. Repeat **Step 4** to attach the remaining (1) passenger/right Center/Rear Mounting Bracket to the rear location. Do not fully tighten hardware.
- Select the passenger/right Running Board. Attach the Running Board to the rear of the Mounting Brackets with (6) 10mm x 30mm Hex Bolts, (12) 10mm Flat Washers and (6) 10mm Nylon Lock Nuts, **(Figures 6—8)**. Do not tighten hardware at this time.
- Level and adjust as necessary and tighten all hardware.
- Repeat **Steps 2—7** to attach the Driver/left Running Board.


9. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

**To protect your investment,** Do not use any type of polish or wax that may contain abrasives that could damage the finish. Use only mild soap to clean the Running Boards.


### Passenger/Right Side Installation Pictured

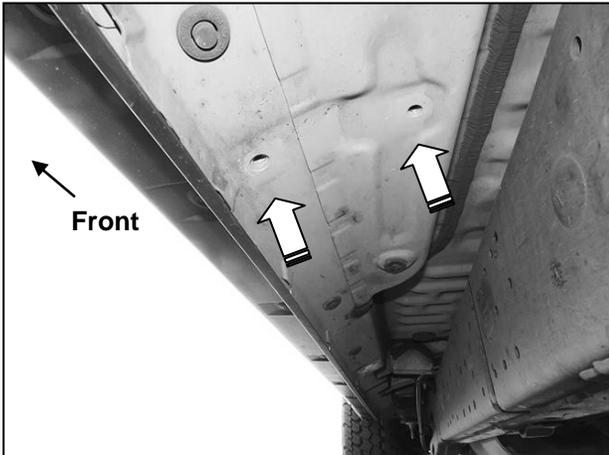

(Fig 1) Remove the plastic plugs (if equipped) or hex bolts from the threaded mounting holes in the floor panel. Passenger/right front mounting location pictured (arrows)

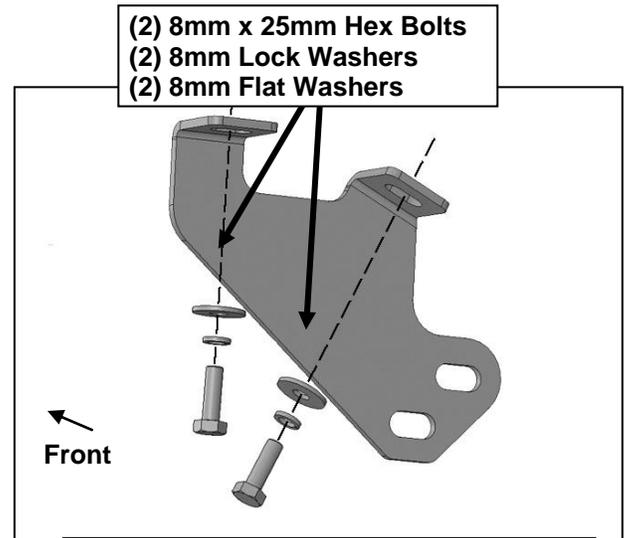


(Fig 2) Attach the passenger/right front mounting Bracket to the front location

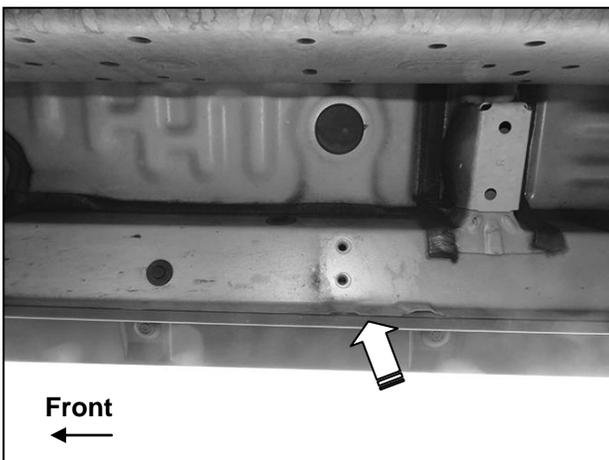


(Fig 3) Passenger/right center mounting location

(2) 8mm x 25mm Hex Bolts  
(2) 8mm Lock Washers  
(2) 8mm Flat Washers

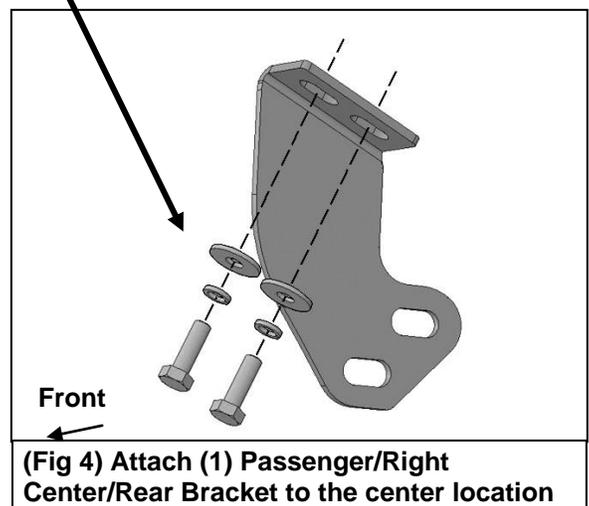


(Fig 4) Attach (1) Passenger/Right Center/Rear Bracket to the center location

### Passenger/Right Side Installation Pictured

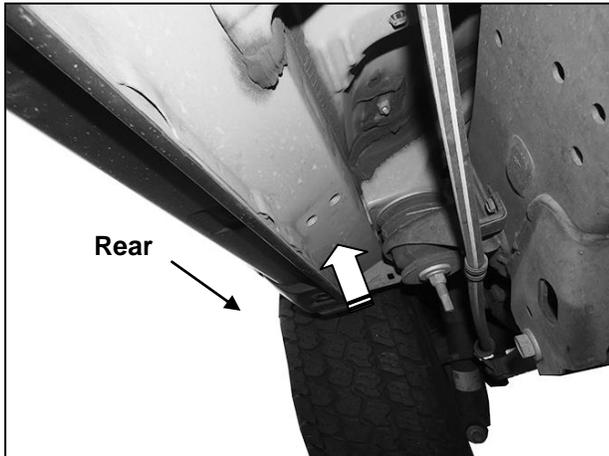


(Fig 5) Passenger/right rear mounting location

- (2) 10mm x 30mm Hex Bolts
- (4) 10mm Flat Washers
- (2) 10mm Nylon Lock Nuts

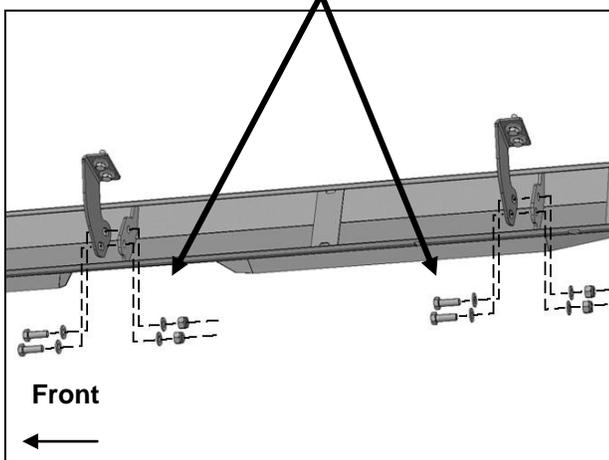


(Fig 7) Attach the Running Board to the back of the center and rear Mounting Brackets

- (2) 10mm x 30mm Hex Bolts
- (4) 10mm Flat Washers
- (2) 10mm Nylon Lock Nuts

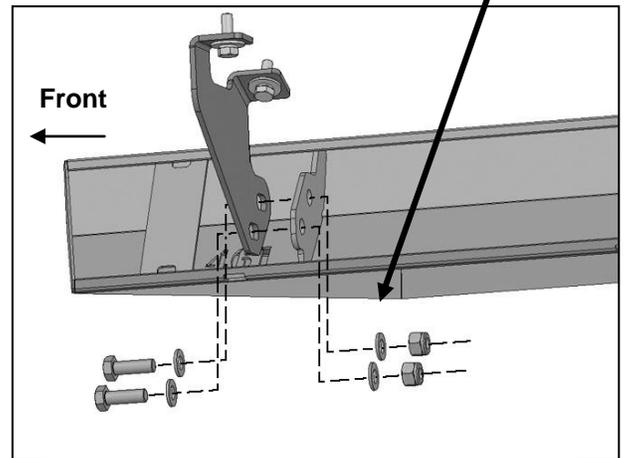

(Fig 6) Attach the Running Board to the back of the front Mounting Bracket

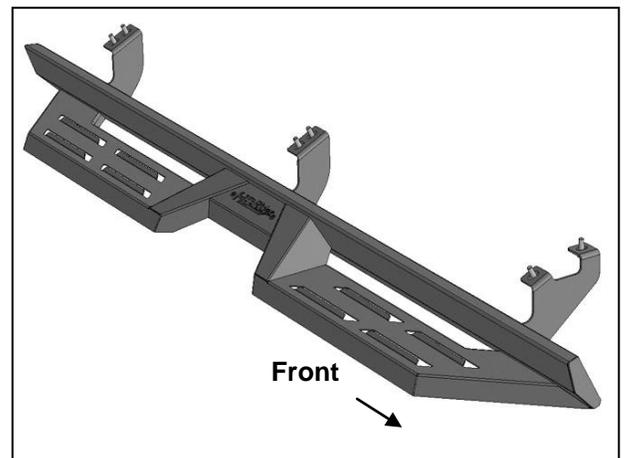

Complete Passenger/right side assembly