
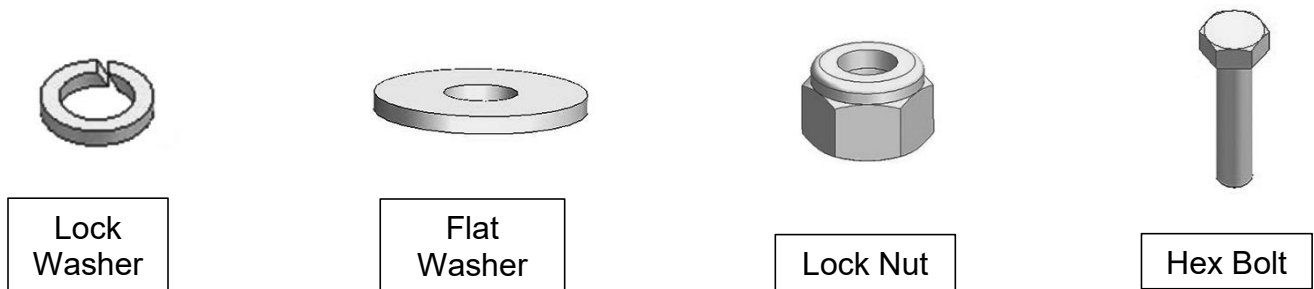



Installation Instructions

PARTS LIST:

Qty	Item Description	Qty	Item Description
1	Driver/Left Running Board	12	8-1.25mm x 30mm Hex Bolts
1	Passenger/Right Running Board	12	8mm x 24mm OD x 2mm Flat Washers
1	Driver/Left Front Mounting Bracket	12	8mm Lock Washers
1	Passenger/Right Front Mounting Bracket	12	10-1.5mm x 35mm Hex Bolts
2	Driver/Left Center/Rear Mounting Brackets	24	10mm x 27mm OD x 3mm Flat Washers
2	Passenger/Right Center/Rear Mounting Brackets	12	10mm Nylon Lock Nuts

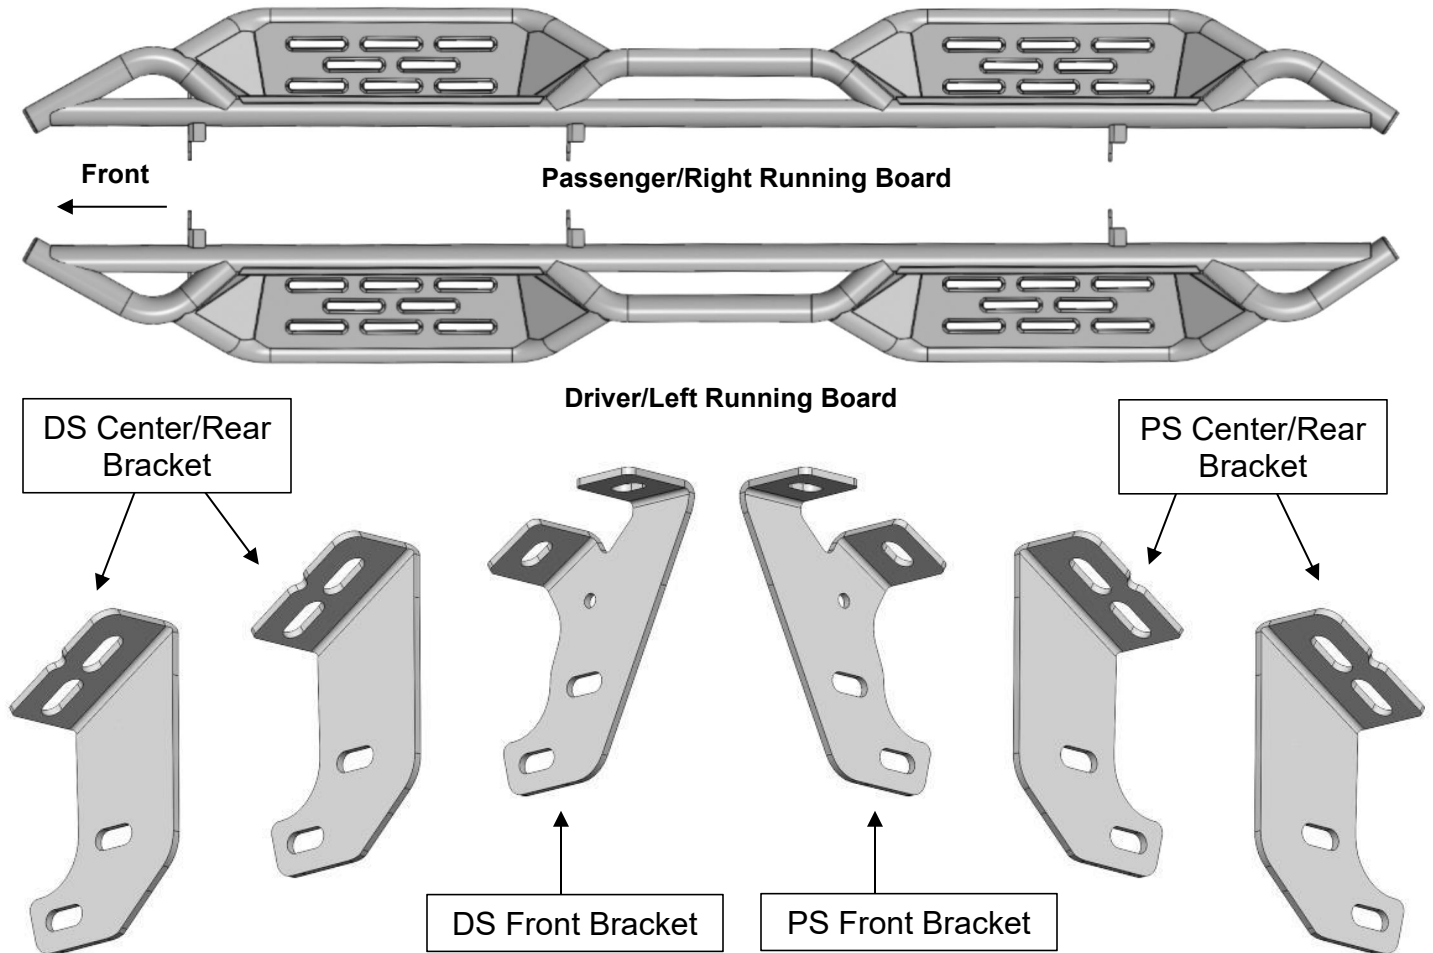

TOOLS REQUIRED

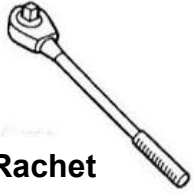

Ratchet



13 & 15mm Socket




Extensions




Wrench

1


Follow (Fig 1 – 9) to attach the brackets to the Passenger Side. Repeat the following steps on the Driver Side. Ensure all hardware is hand tightened at this point.

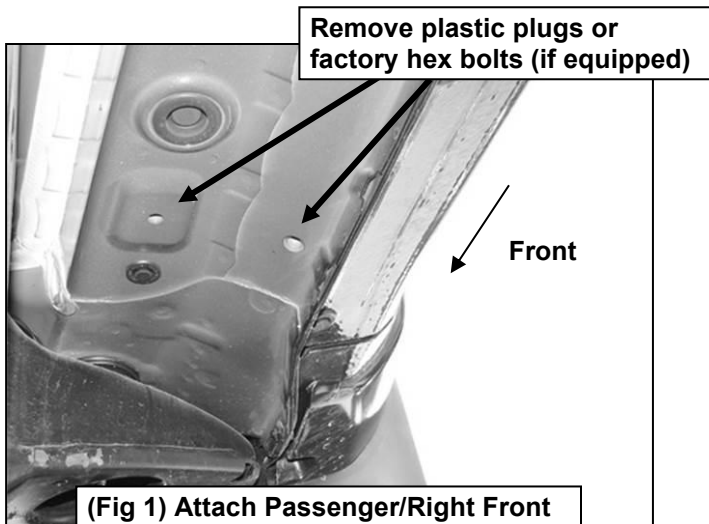







(Fig 1) Attach Passenger/Right Front Mounting Bracket to Passenger/Right Front Mounting location

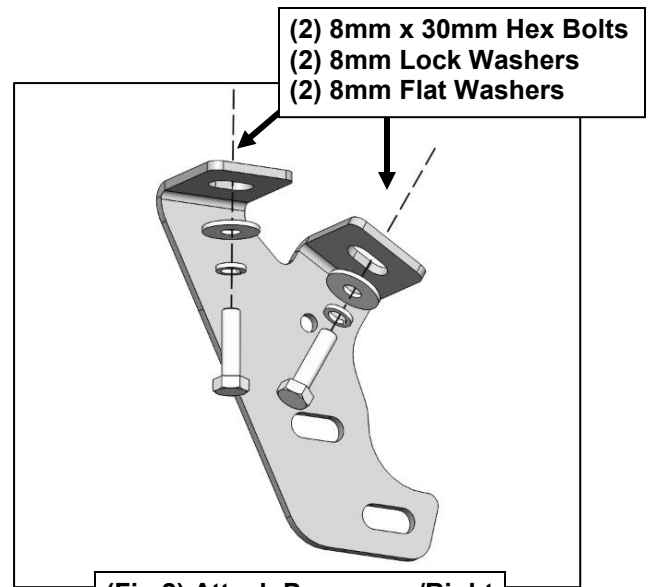



(Fig 2) Attach Passenger/Right Front Mounting Bracket

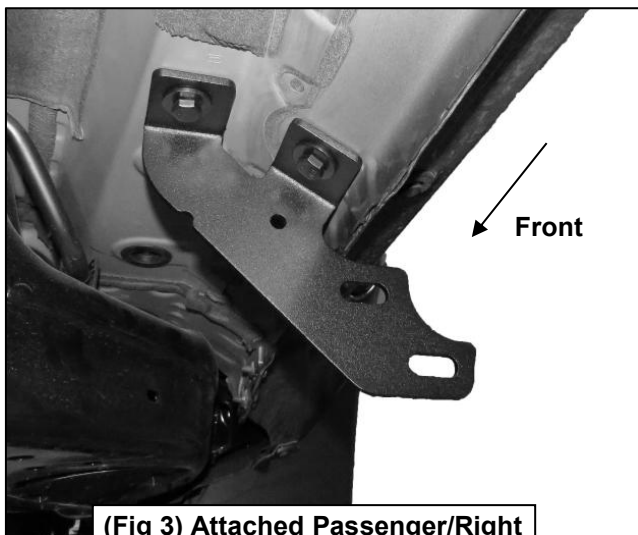

(Fig 3) Attached Passenger/Right Front Mounting Bracket

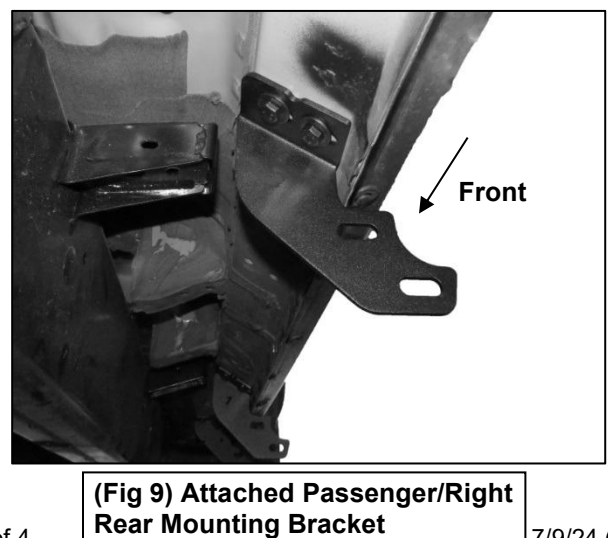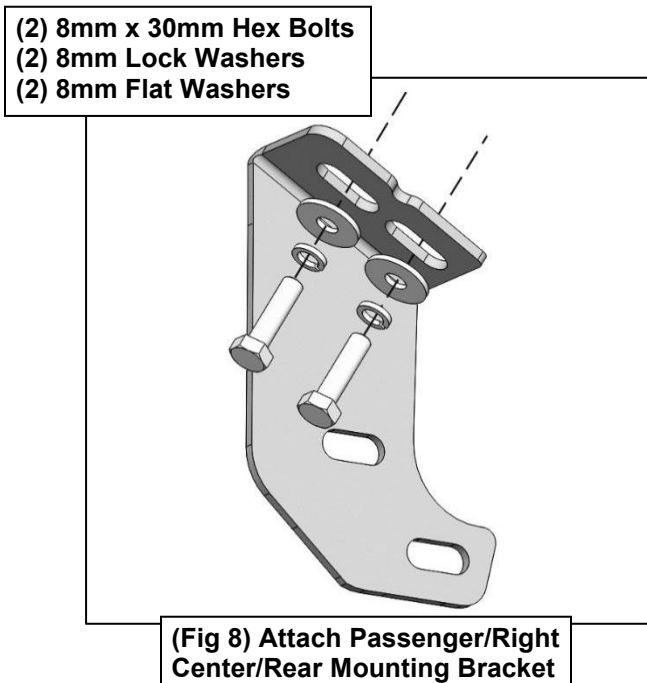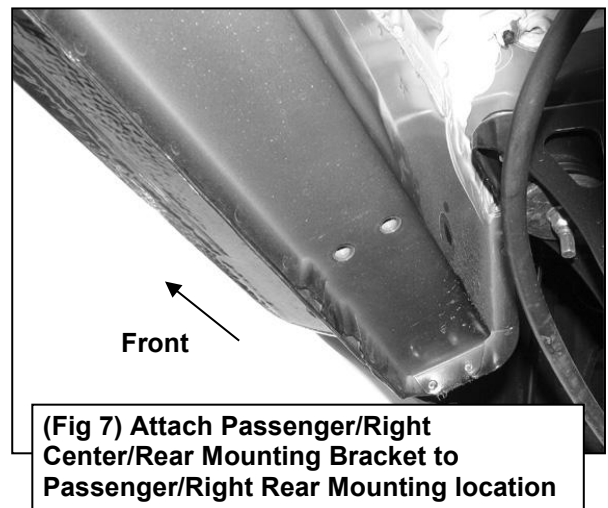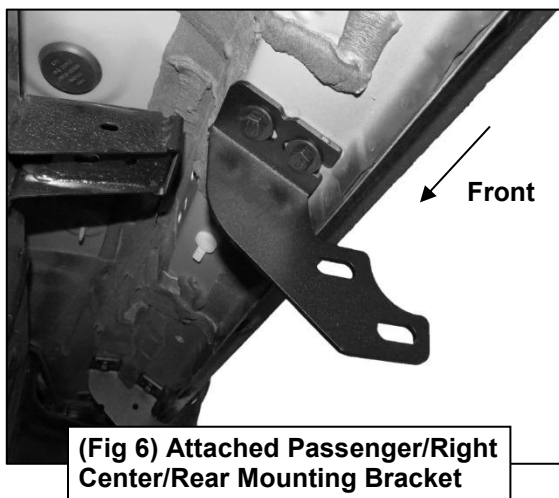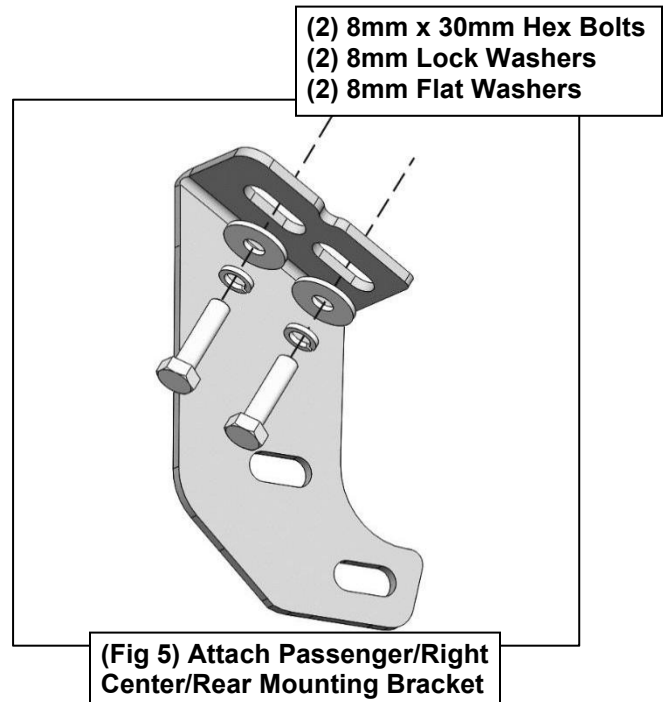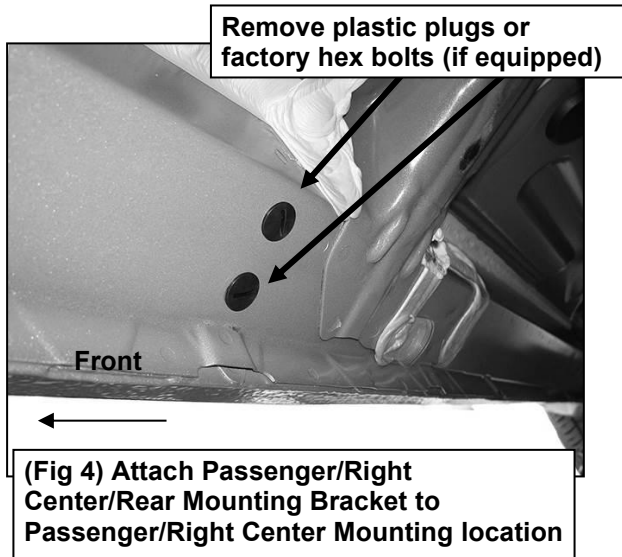

- 2** Follow (Fig 10 – 11) to install the Passenger/Right Running Board to the Passenger/Right Mounting Brackets. Repeat the following steps on the Driver side. Ensure hardware is hand tightened at this point

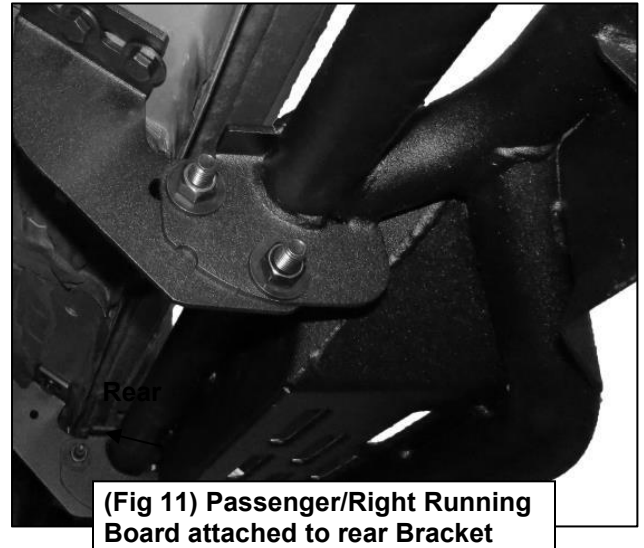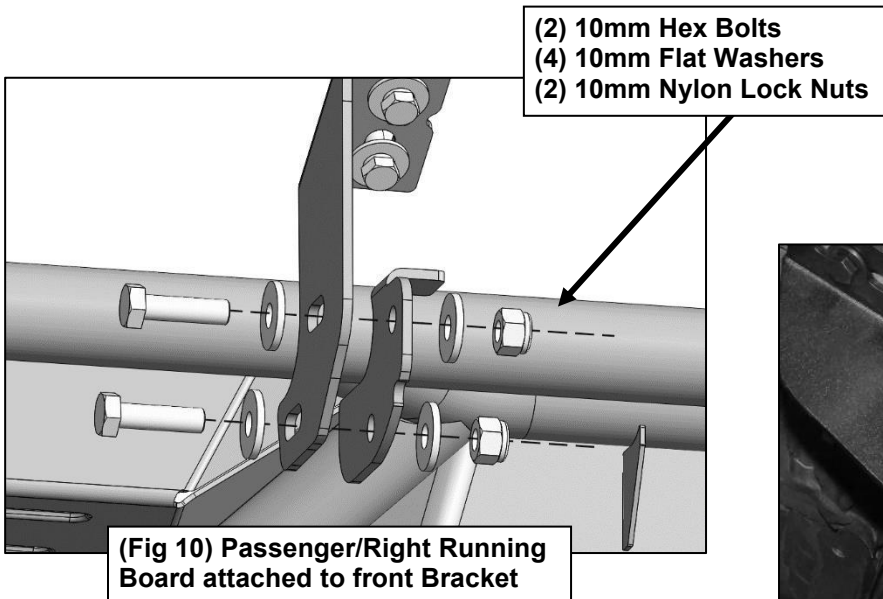

- 3** Ensure Running Board is Level, then tighten all fasteners. Installation is complete. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

