



iBoard® by APS

PART#: IB-071S C&H


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

*ROCKER PANEL MOUNT

*NO DRILLING REQUIRED/CUTTING MAYBE REQUIRED

Fastener Size	Tightening Torque (ft-lbs)	Required
6mm	6-7	X
8mm	16-18	√
10mm	31-32	√
12mm	56-58	X
14mm	92-94	X

PART LIST

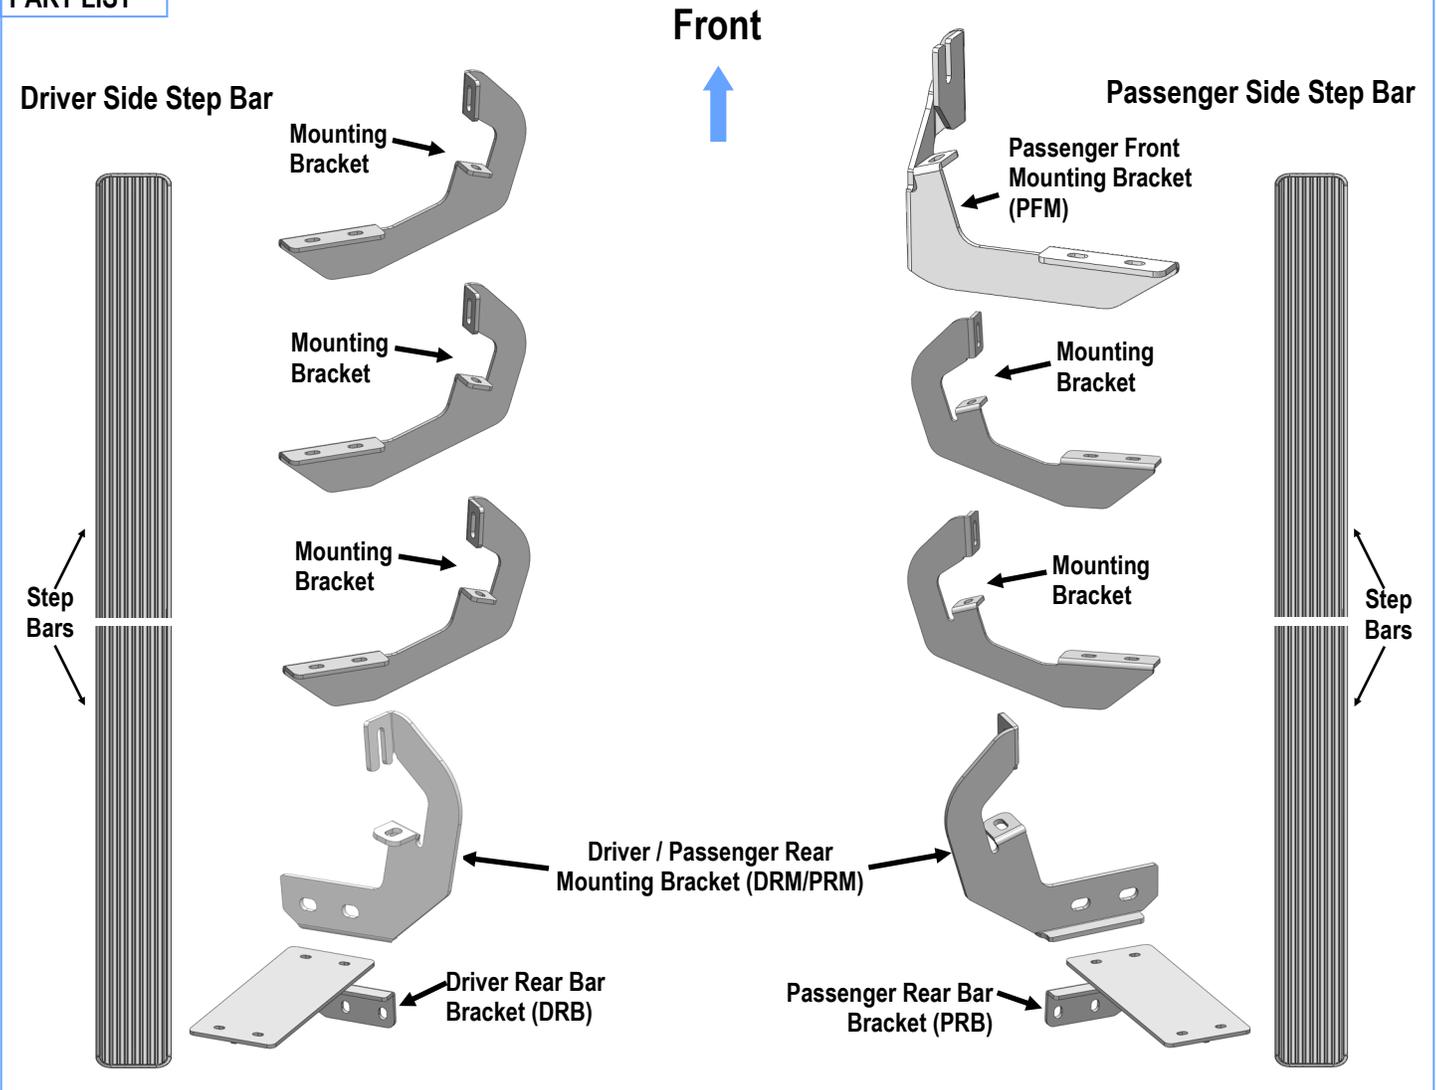



Hardware Package A (For Bracket Installation)

Item	QTY	Description	Item	QTY	Description
1#	4	M10X1.5-30mm Hex Bolts	5#	16	M8X1.25-25mm Hex Bolts
2#	8	M10 Large Flat Washers	6#	16	M8 Large Flat Washers
3#	4	M10 Lock Washers	7#	16	M8 Lock Washers
4#	4	M10 Hex Nuts	8#	16	M8 Clip Nuts


1#


2#


3#


4#


5#


6#


7#


8#

Hardware Package B (For Stainless Steel Step Bar Installation)

Item	QTY	Description	Item	QTY	Description
1#	20	M8X1.25-35mm Carriage Bolts	3#	20	M8 Nylon Lock Nuts
2#	20	M8 Large Flat Washers	4#	10	Sliders (Packed with Step Bars)


1 #


2 #


3 #


4 #

Hardware Package C (For Stainless Steel Step Bar Assembly)

Item	QTY	Description	Item	QTY	Description
1#	8	Plastic Rivets	5#	4	M8 Hex Nuts
2#	12	M8X1.25-25mm Inner Hex Bolts	6#	2	Plastic Covers (Packed with Step Bars)
3#	16	M8 Flat Washers	7#	2	Back Plates (Packed with Step Bars)
4#	12	M8 Lock Washers			


1 #


2 #


3 #


4 #


5#


6#



7#



STEP 1


Step Bar Assembly:

1. Select and assemble (2) Step Bars with (2) M8X1.25-25mm Inner Hex Bolts, (4) M8 Flat Washers, (2) M8 Lock Washers and (2) M8 Hex Nuts, (**Fig 1**). **NOTE: (4) Step Bars are universal.**
2. Attach (1) Back Plate to the bottom of the installed (2) Step Bars with (4) M8X1.25-25mm Inner Hex Bolts, (4) M8 Flat Washers, (4) M8 Lock Washers, (**Fig 2**).
3. Install (1) Plastic Cover to cover the joint of (2) Step bars with (4) Plastic Rivets, (**Fig 3**).
4. Repeat to assemble the other (2) Step Bars.

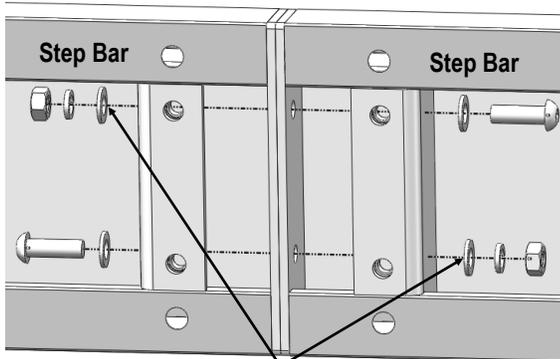


- (2) M8X1.25-25mm Inner Hex Bolts
- (4) M8 Flat Washers
- (2) M8 Lock Washers
- (2) M8 Hex Nuts

(Fig 1) Step Bars Assembly

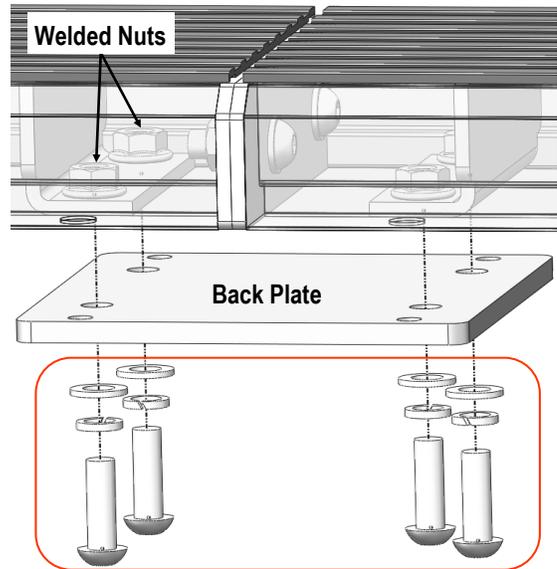

- (4) M8X1.25-25mm Inner Hex Bolts
- (4) M8 Flat Washers
- (4) M8 Lock Washers

(Fig 2) Back Plate Installation

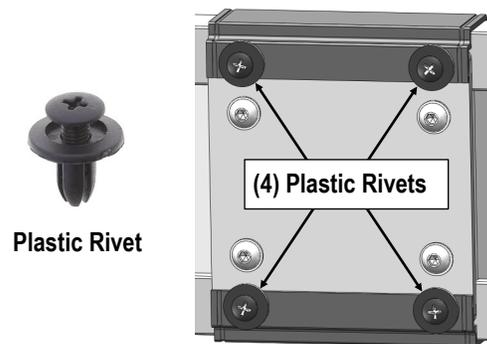

(Fig 3) Plastic Cover Installation
(Bottom View)

Assembled Step Bars







STEP 2

Start the installation under the driver side of the vehicle. Locate the 4 tabs along the bottom edge of the body, (pinch weld). Directly above each tab is a top mounting location on the body panel, (Fig 4).


NOTE: It will be helpful for identifying the mounting holes to hold up a mounting bracket in place.

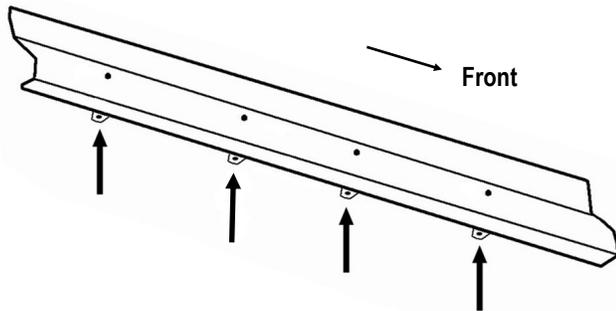


(Fig 4) Driver Side Mounting Locations

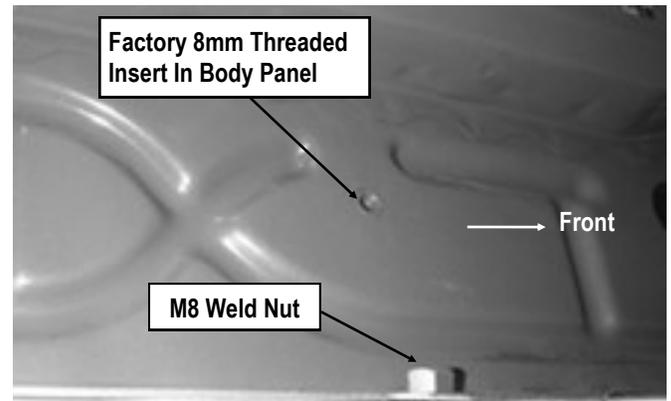


(Fig 5) Driver Side Front Mounting Location

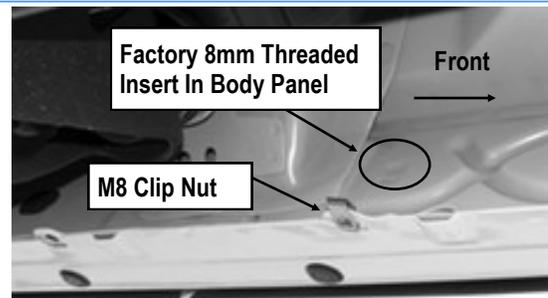

(Fig 6) Driver Side Center Mounting Location

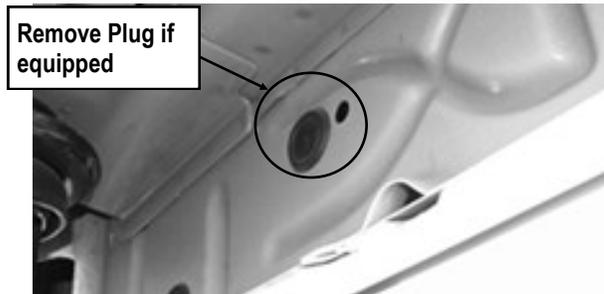

(Fig 7) Driver Side Center Mounting Location
(With Rubber Plug on Mounting Hole)

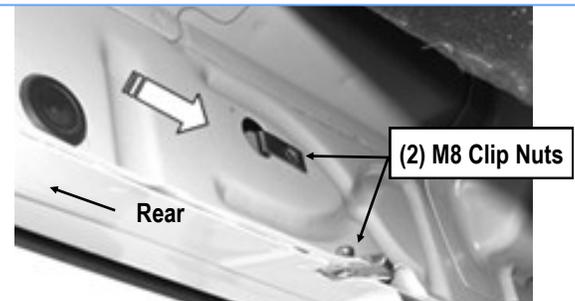

(Fig 8) Driver Side Rear Mounting Location

STEP 3

Determine the correct procedure for your model/year and each Bracket location.

Lower mounting location (on the edge of the pinch weld):

***Flat tab on pinch weld with factory installed weld nut:**

Thread M8 Hex Bolt into weld nut from the backside-down to clear paint from threads, (Fig 5).

***Flat tab on pinch weld with hole:**

Select (1) M8 Clip Nut. Slide the M8 Clip Nut over the tab with the nut facing up behind the tab, (Figs 6—8). Line up threaded nut with hole in tab. Repeat for each mounting location.

Upper mounting location (on the back of the body panel):

***Models with factory installed threaded insert in body panel:**

Thread M8 Hex Bolt into threaded insert to clear paint as required, (Figs 5 & 6).

***Large and small hole on back side of body panel:**


Remove the rubber plug from the larger hole if equipped, (Fig 4). Select (1) M8 Clip Nut. Slide the M8 Clip Nut into the larger hole. Line up the threaded nut with the smaller hole, (Fig 8).



STEP 4

Select (1) Mounting Bracket, bolt the Mounting Bracket to the installed M8 Clip Nuts and/or the factory threaded holes on Driver Side Front Mounting Location with (2) M8 X1.25-25mm Hex Bolts, (2) M8 Lock Washers and (2) M8 Large Flat Washers, (Fig 9). Do not fully tighten the hardware.

Repeat **Steps 2-4** to install other (2) driver side Mounting Brackets.

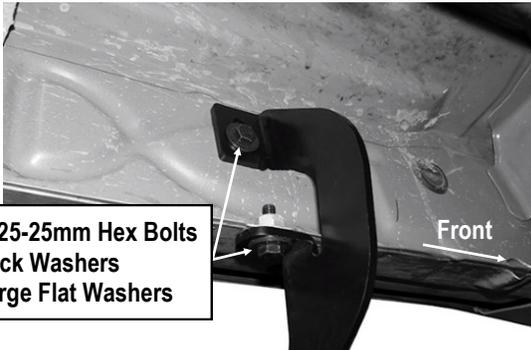


(Fig 9) Driver Front Mounting Bracket Installed

STEP 5


Move to the driver side rear mounting location. Assemble (1) Driver Rear Mounting Bracket (**DRM/PRM**) and (1) Driver Rear Bar Bracket (**DRB**) as shown (Fig 10A).

Install the assembled Driver Rear Mounting Bracket with (2) M8 X1.25-25mm Hex Bolts, (2) M8 Lock Washers and (2) M8 Large Flat Washers, (Fig 10B). Do not tighten hardware at this time. **NOTE: Driver and Passenger Rear Mounting Brackets are universal.**

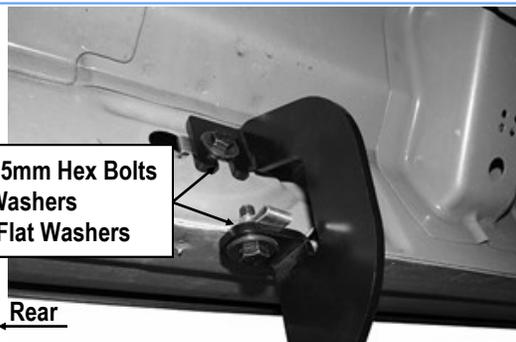

(Fig 10B) Assembled Driver Rear Mounting Bracket Installed

(2) M10X1.5-30mm Hex Bolts
(4) M10 Large Flat Washers
(2) M10 Lock Washers
(2) M10 Hex Nuts

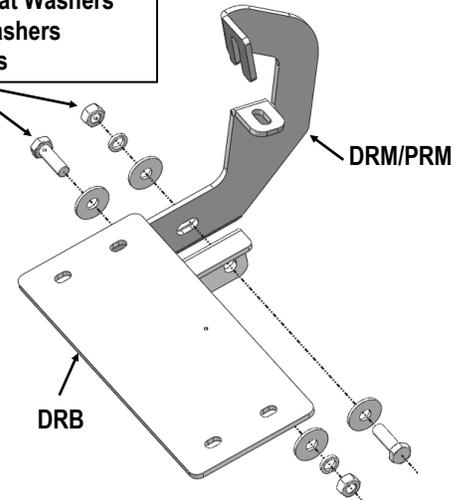

(Fig 10A) Driver Rear Mounting Bracket Assembly



STEP 6

Once all (4) Driver side mounting brackets are installed, then proceed to the Step Bar installation. (Figs 11 & 12)

- (1) Select (1) Slider and (2) M8X1.25-35mm Carriage Bolts;
- (2) Install (2) M8X1.25-35mm Carriage Bolts in (1) Slider.
- (3) Slide the Slider (with carriage bolts) to the **Step Bar**.
- (4) Repeat to install the other (3) sliders to the step bar.
- (5) Attach the Step Bar (with the Sliders) onto the installed mounting brackets. Position the Sliders to the installed brackets. Secure the Step Bar to the installed Brackets by using (10) M8 Large Flat Washers and (10) M8 Nylon Lock Nuts and (5) Sliders, (Fig 12). Do not fully tighten hardware at this time.

Note: The Sliders are packed with the Step Bars.

Level and adjust the Step Bar and fully tighten all hardware.

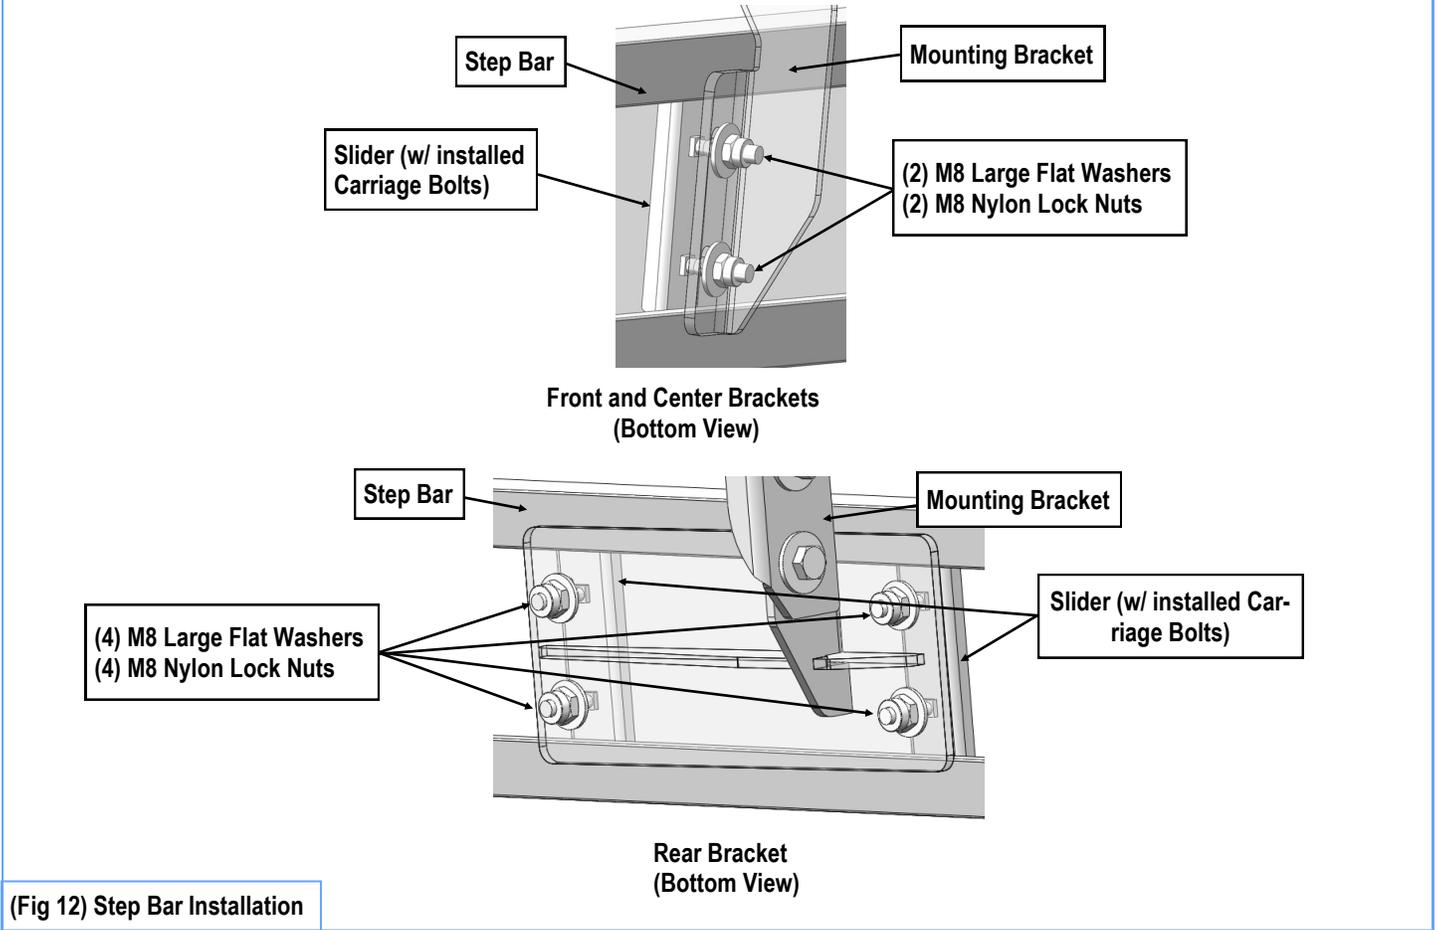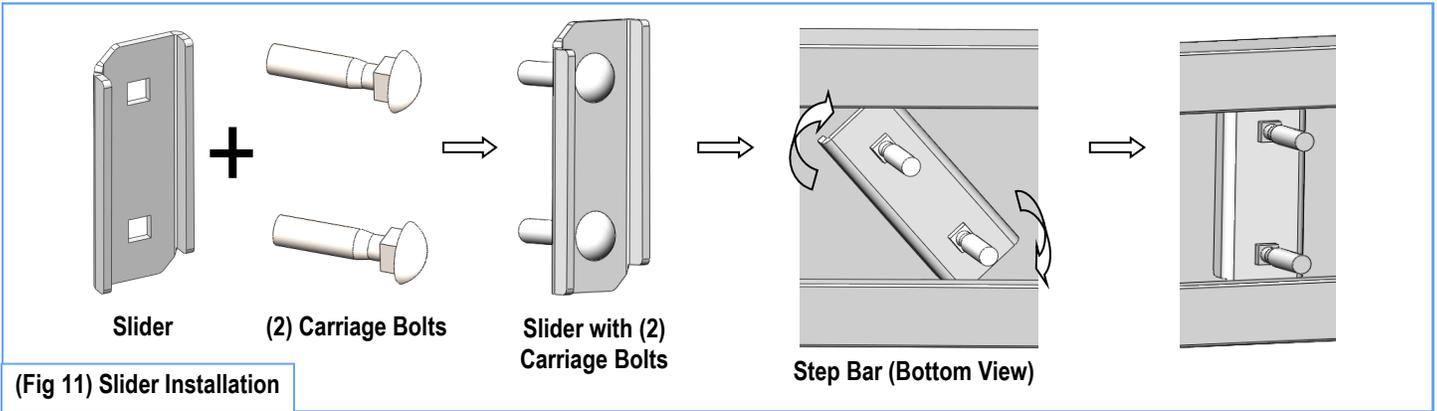



STEP 7


Move to the passenger side of the vehicle. On the passenger side, determine if the vehicle is equipped with a plastic diesel exhaust fluid (DEF) tank, (Fig 13 & 14).

Models without DEF tank, skip to Step 8.

Models with DEF tank: The tank sits close to the side of the body. With specialized tools, the Passenger Front Mounting Bracket can be installed but room is limited. It may be easier to drop the tank down to access the inner side of the body panel for bracket installation. Tank will not need to be removed, only dropped down for access to mounting location.

IMPORTANT: If tank is full, it will be very heavy and assistance is highly recommended to avoid injury or damage to the vehicle or the tank. It is recommended that installation is performed when the DEF tank is low on fluid before dropping the tank.

- For 07-16 Models:** with plastic lower tray under the tank, remove the (3) hex bolts attaching the tray to the frame, (Fig 13), and remove the tray. **For 2017-Up 2500/3500 models:** Remove the (4) hex bolts attaching the plastic cover to DEF tank, (Fig 14A) and remove the plastic cover, (Fig 14B).
- Release the tank filler hose. Release the plug for the sending unit on the top of the tank.
- Support the tank with a floor jack. Place a smooth flat surface, (wooden block for example), between the floor jack and the tank to avoid damaging the plastic tank. Do not push up on the tank; only support the weight of the tank with the jack.
- Remove the (2) bolts securing the tank straps to the vehicle, (Fig 15). Tilt the straps to release from the brackets. Slowly lower the tank until the top of the tank is almost visible. Use blocks or stands to support the tank while installing the front Brackets.
- Proceed to **Step 8**

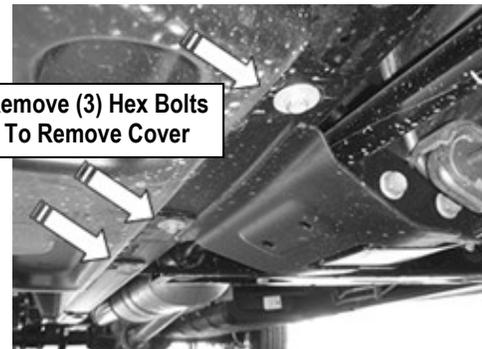

(Fig 13) 07-16 Passenger Side Front With DEF Tank Cover



(Fig 14A) 2017-Up Passenger Side Pictured With DEF Plastic Tank Cover



(Fig 14B) 2017 Passenger Side DEF Cover Removed




(Fig 15) 07-16 Passenger Side DEF Tank And Cover




STEP 8

Locate the first tab on the edge of the pinch weld, attach the Passenger Front Mounting Bracket (PFM) to the pinch weld and top body panel (Fig 16 & 17):

- Models with flat tab and hole:** see Fig 16. Leave loose at this time.
- Models with weld-nut:** see Fig 17. Leave loose at this time.

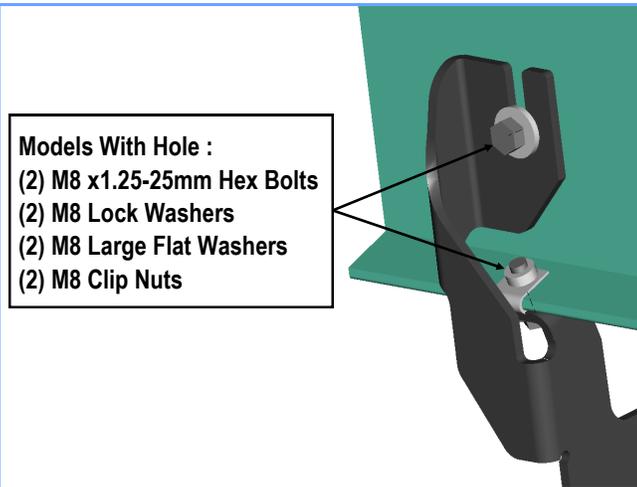

(Fig 16) Passenger Front Mounting Bracket Installed (example)

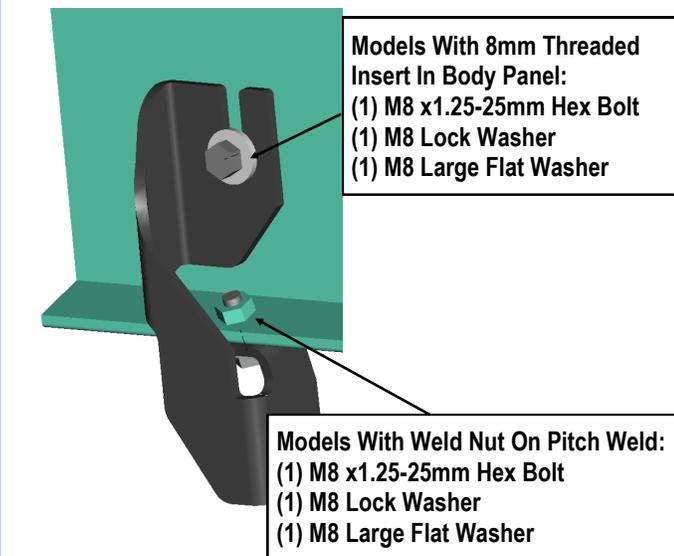


(Fig 17) Passenger Front Mounting Bracket Installation (Weld Nut If Equipped-Also See Fig 2)


STEP 9

Repeat **Steps 3—4** for the (2) passenger side Center mounting brackets installations. Repeat Step 5 for passenger Rear mounting bracket installation.


2017-up 2500/3500 DEF tank models: Locate the 2nd tab bracket location along the bottom edge of the body, (pinch weld), (Fig 18). Hold the DEF cover in place and mark the 2nd Bracket location onto the cover, (Fig 19). Use a sharp knife or hacksaw blade to carefully cut a slot in the plastic cover to clear the 2nd Bracket, (Fig 20). Remove as little plastic as possible.

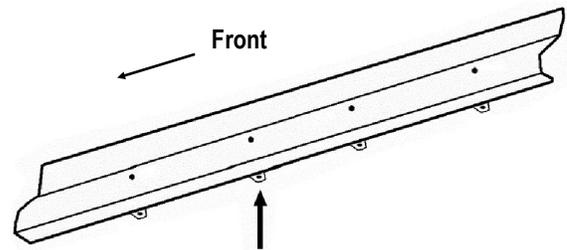

(Fig 18) Passenger 2nd Mounting Bracket Location From Back Of Body Panel

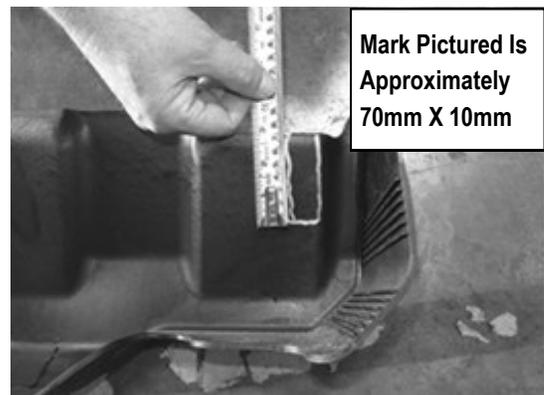

(Fig 19) 2017-Up Passenger Side DEF Cover Marked For Trimming

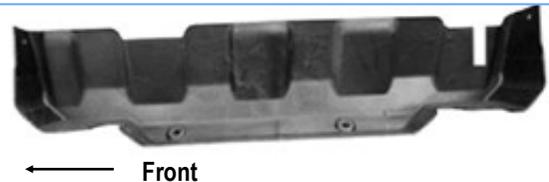

(Fig 20) 17-Up Passenger Side DEF Cut For Example Only



STEP 10

Repeat **Step 6** to install the passenger side Step Bar installation.

STEP 11

Once the Step Bar are installed and all hardware fully tightened, reinstall the DEF tank and cover, if equipped, as described in **Step 7**.

The installation is completed.

Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.